 


AMP CONNECTOR : AMP 953264-1, WHITE

FUNCTION	PIN NO.		FUNCTION
PGND	18P01	18P10	TURN-RIGHT
CRUISE	18P02	18P11	TURN-LEFT
IMMOBILIZER	18P03	18P12	ILL(+)
DOOR-OPEN	18P04	18P13	CNG
LOW-BEAM	18P05	18P14	HIGH-TEMP
OIL-PRESSURE	18P06	18P15	BRAKE
REAR-FOG	18P07	18P16	BATTERY-CHARGE
AIR-BAG	18P08	18P17	ABS
FRONT-FOG	18P09	18P18	HIGH-BEAM



AMP CONNECTOR : AMP 953264-2, BLACK

FUNCTION	PIN NO.		FUNCTION
TEMP-INPUT	18P01	18P10	-
DIAGNOSIS	18P02	18P11	SPEED-INPUT
WEAR-PAD(-)	18P03	18P12	TACHO-INPUT
WEAR-PAD(+)	18P04	18P13	CNG-INPUT
SEAT-BELT	18P05	18P14	FUEL-INPUT
CHECK-ENGINE	18P06	18P15	IGNITION
ANTI-THEFT	18P07	18P16	BATTERY
STOP	18P08	18P17	SGND
FGND	18P09	18P18	SGND

\* connector pin assignment will be confirmed by siemens VDO Halla during PCB layout design.