


Rear Window Defogger

Service Hints

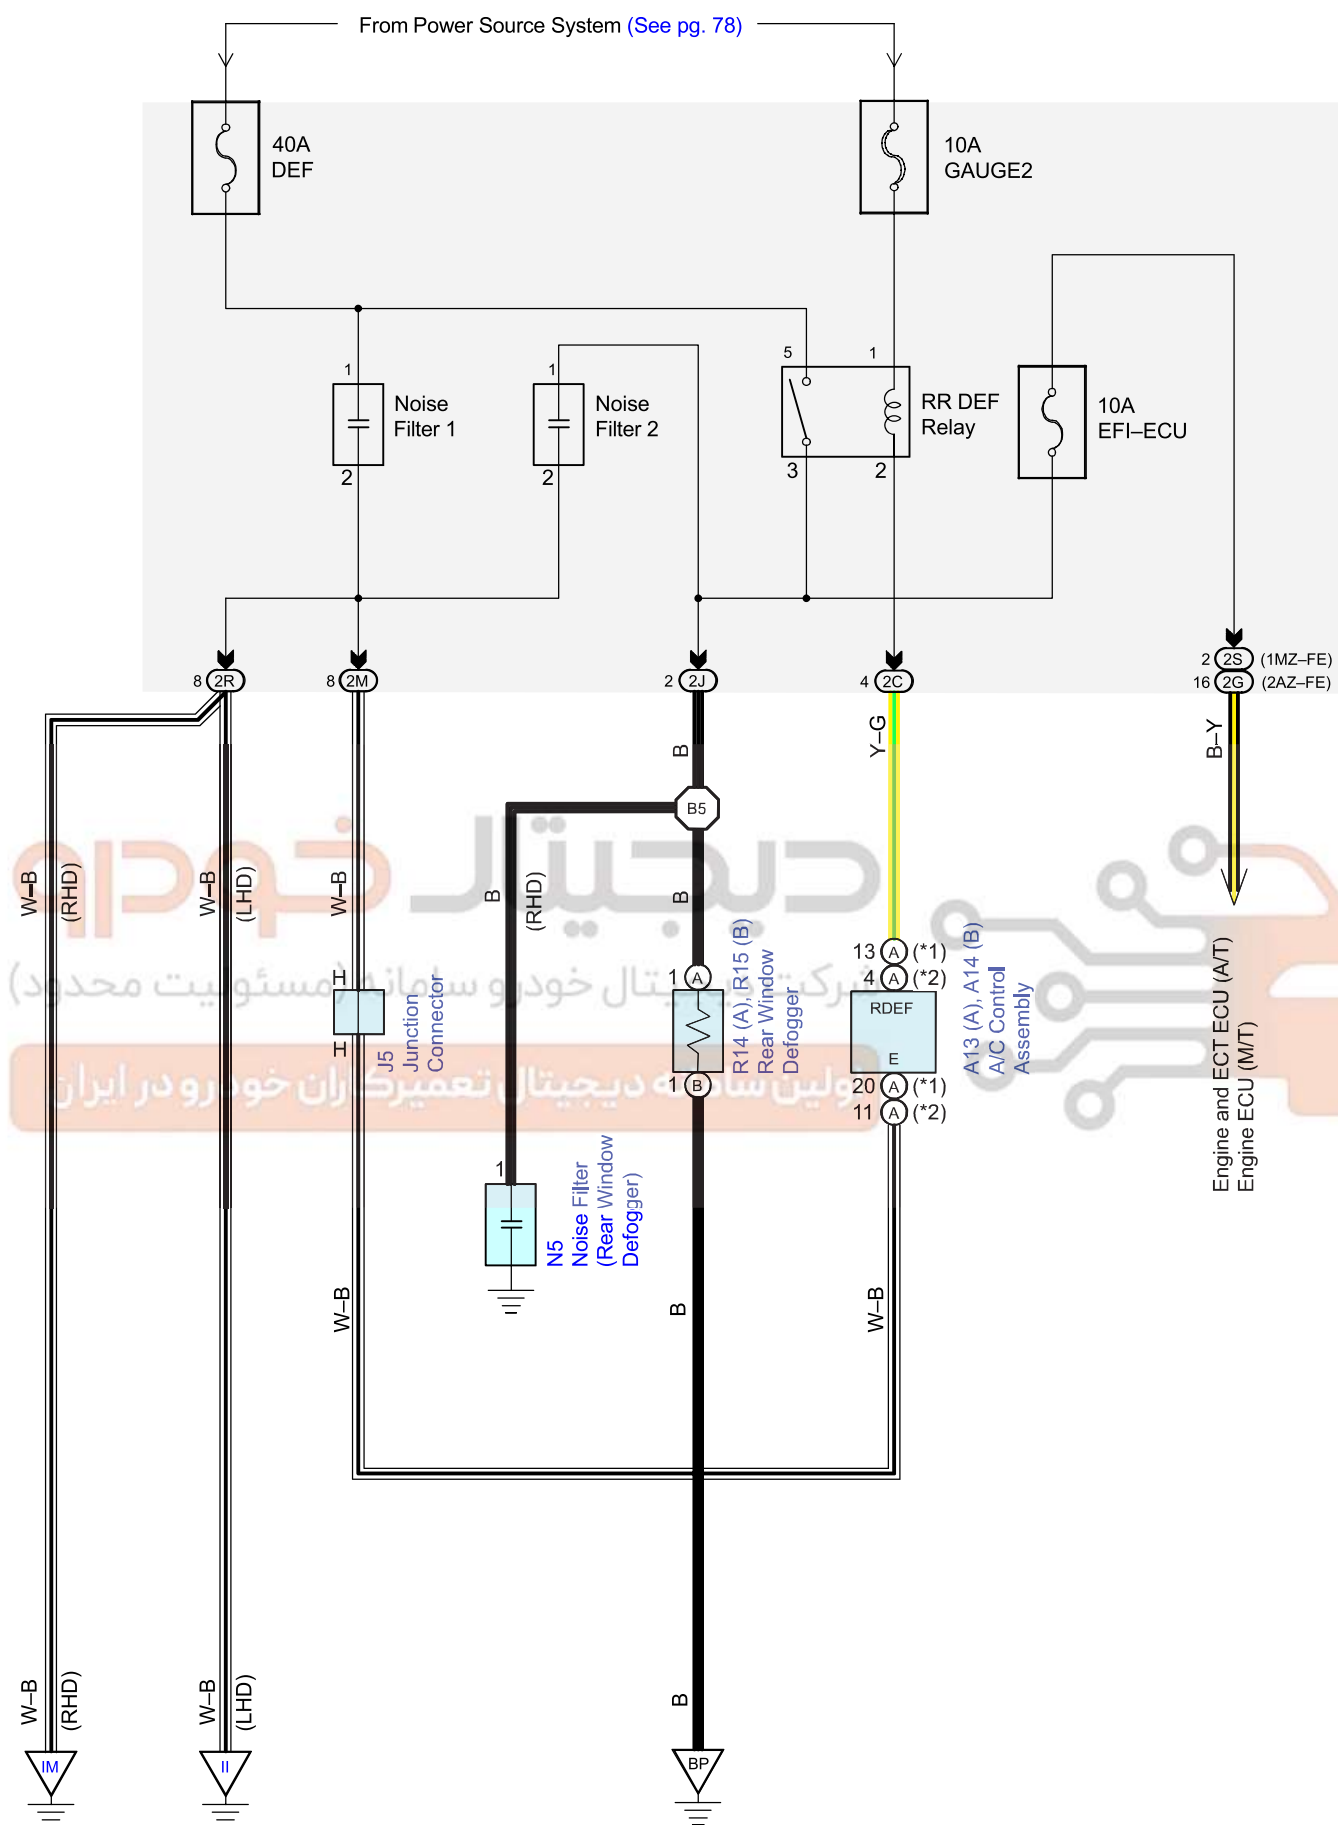

Service Hints**DEF Relay**

5-3 : Closed with the ignition SW at on and rear window defogger SW (A/C control assembly) on

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
A13	36 (LHD)	J5	37 (LHD)	R14	A
	46 (RHD)		47 (RHD)	R15	B
A14	36 (LHD)	N5	49 (RHD)		
	46 (RHD)	R14	A	39 (LHD)	

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	26	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	26	Instrument Panel Wire and Engine Room Main
2J	26	Floor Wire and Driver Side J/B (Lower Finish Panel)
2M	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
2S		

 : **Ground Points**

Code	See Page	Ground Points Location
II	55 (LHD)	Cowl Side Panel LH
IM	67 (RHD)	Instrument Panel Reinforcement RH
BP	60 (LHD)	"C" Pillar
	72 (RHD)	

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B5	60 (LHD)	Floor wire			
	72 (RHD)				