



Combination Meter


Service Hints

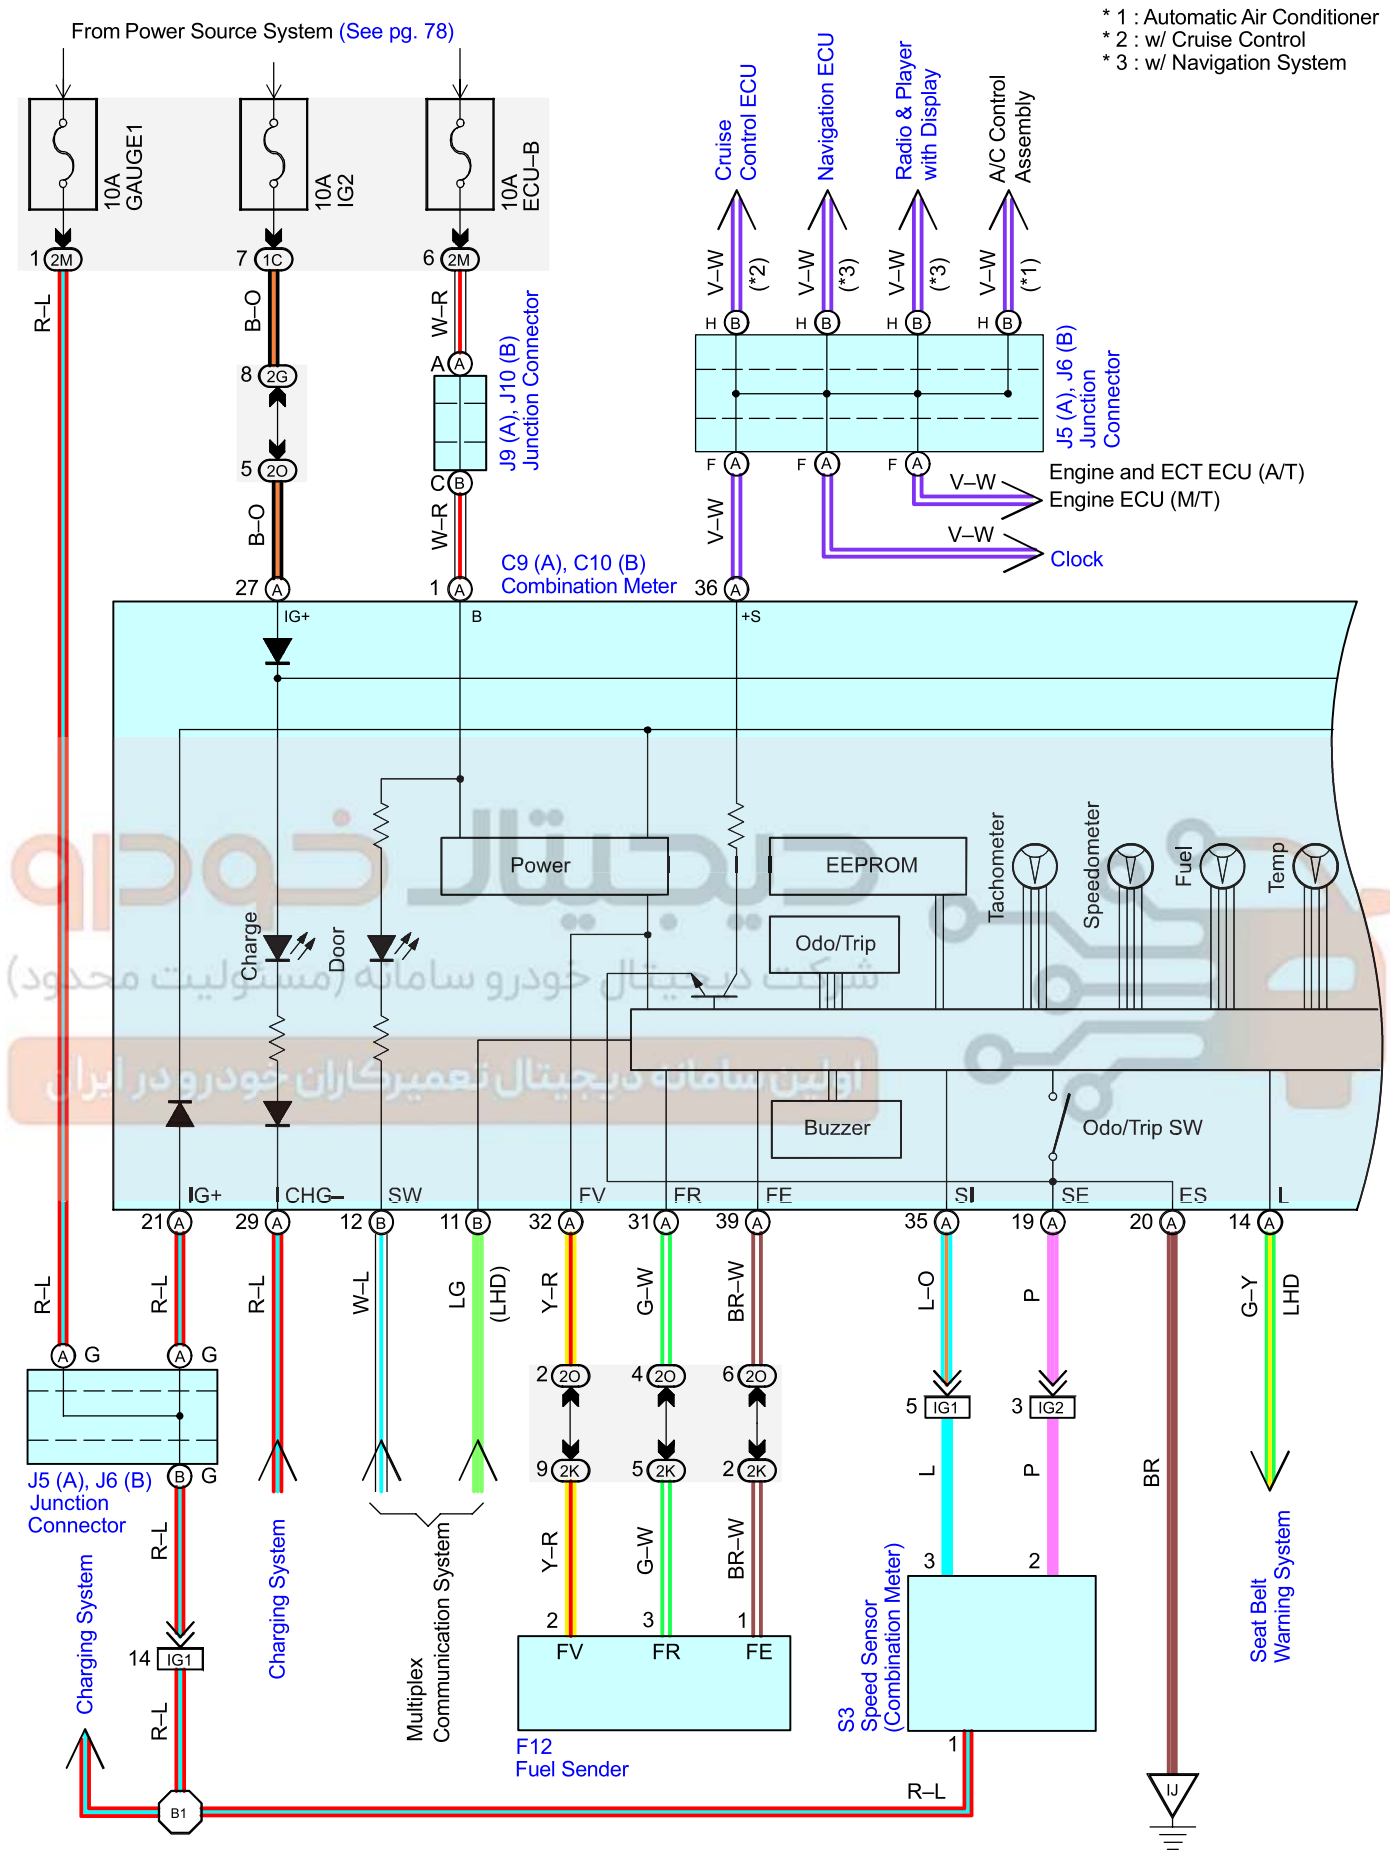

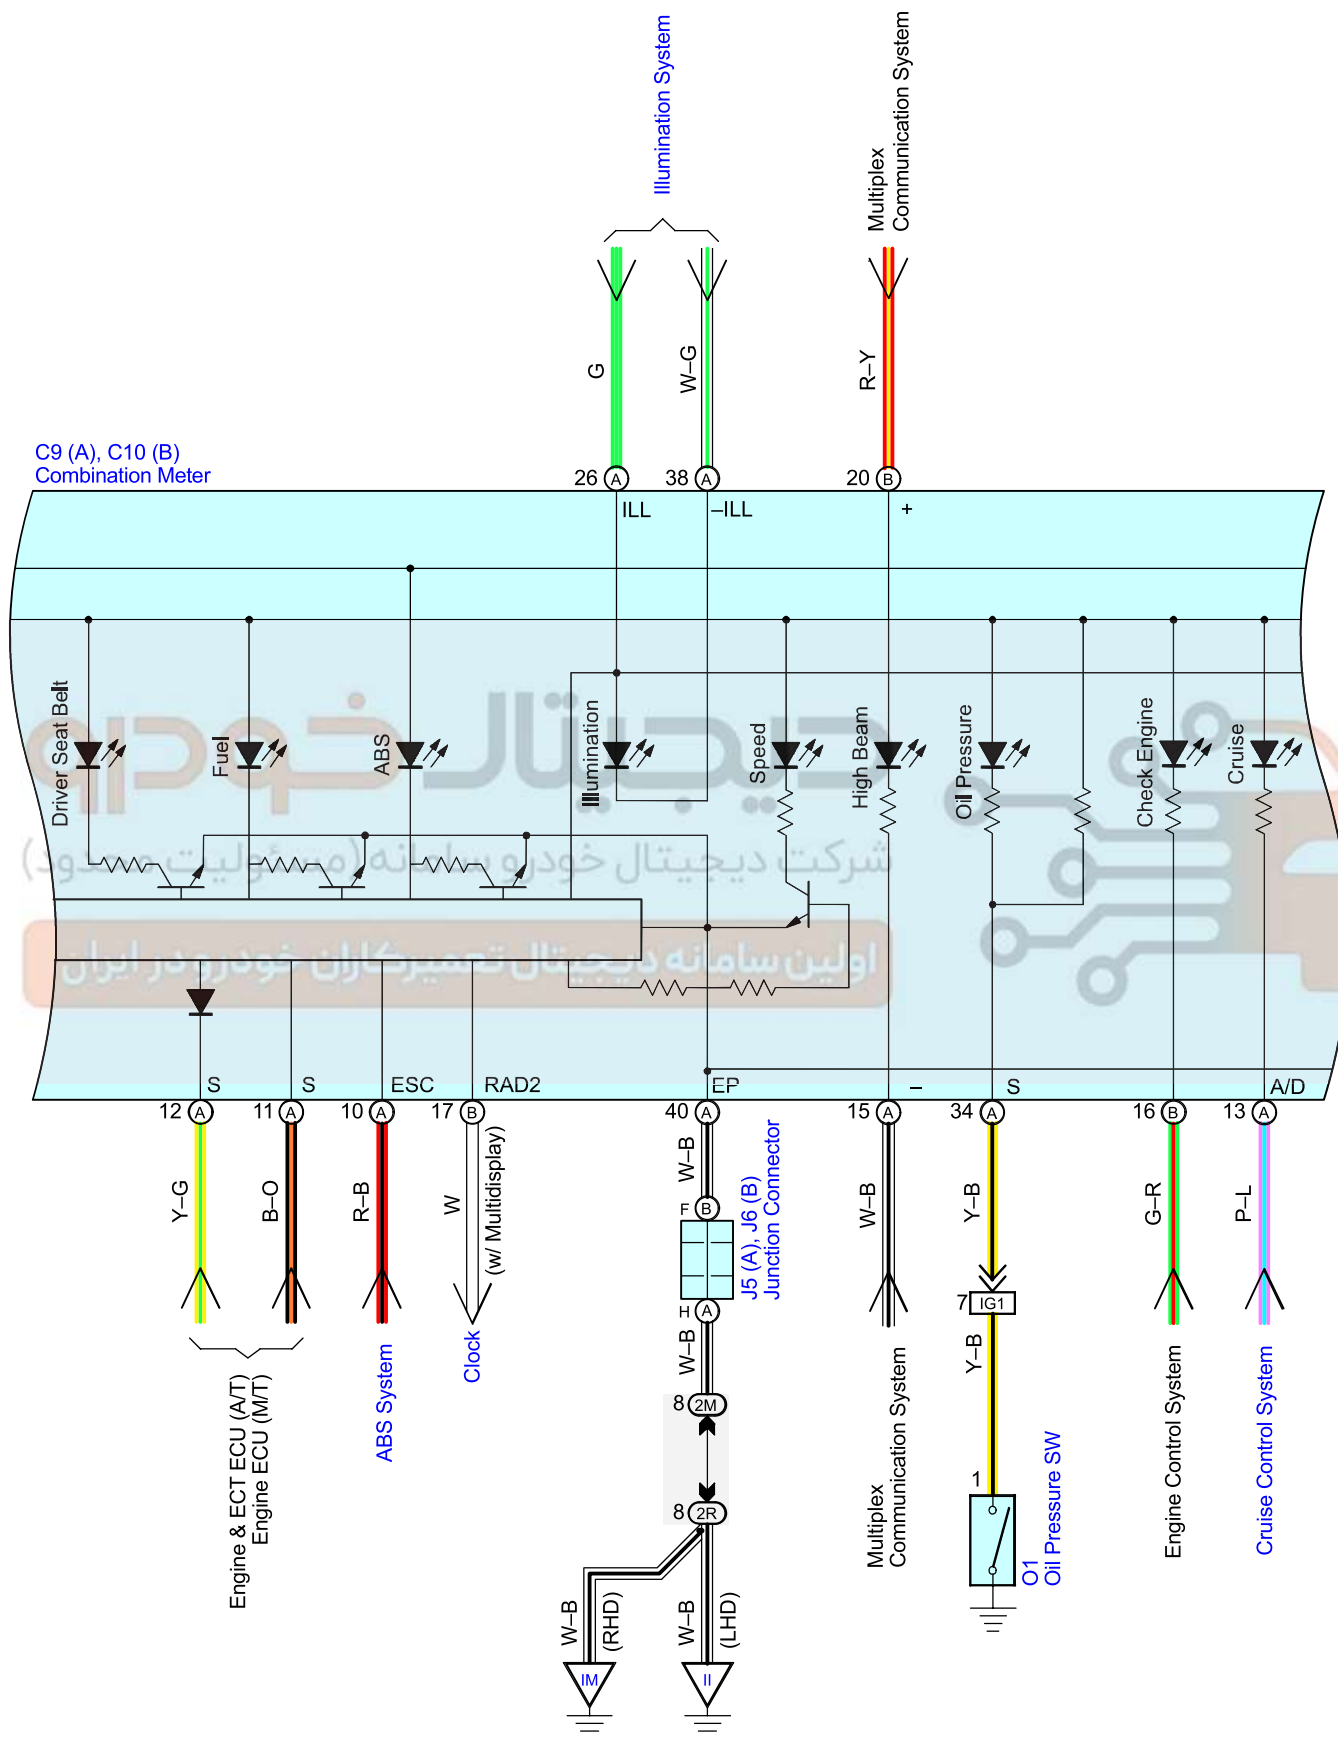

Combination Meter

Service Hints

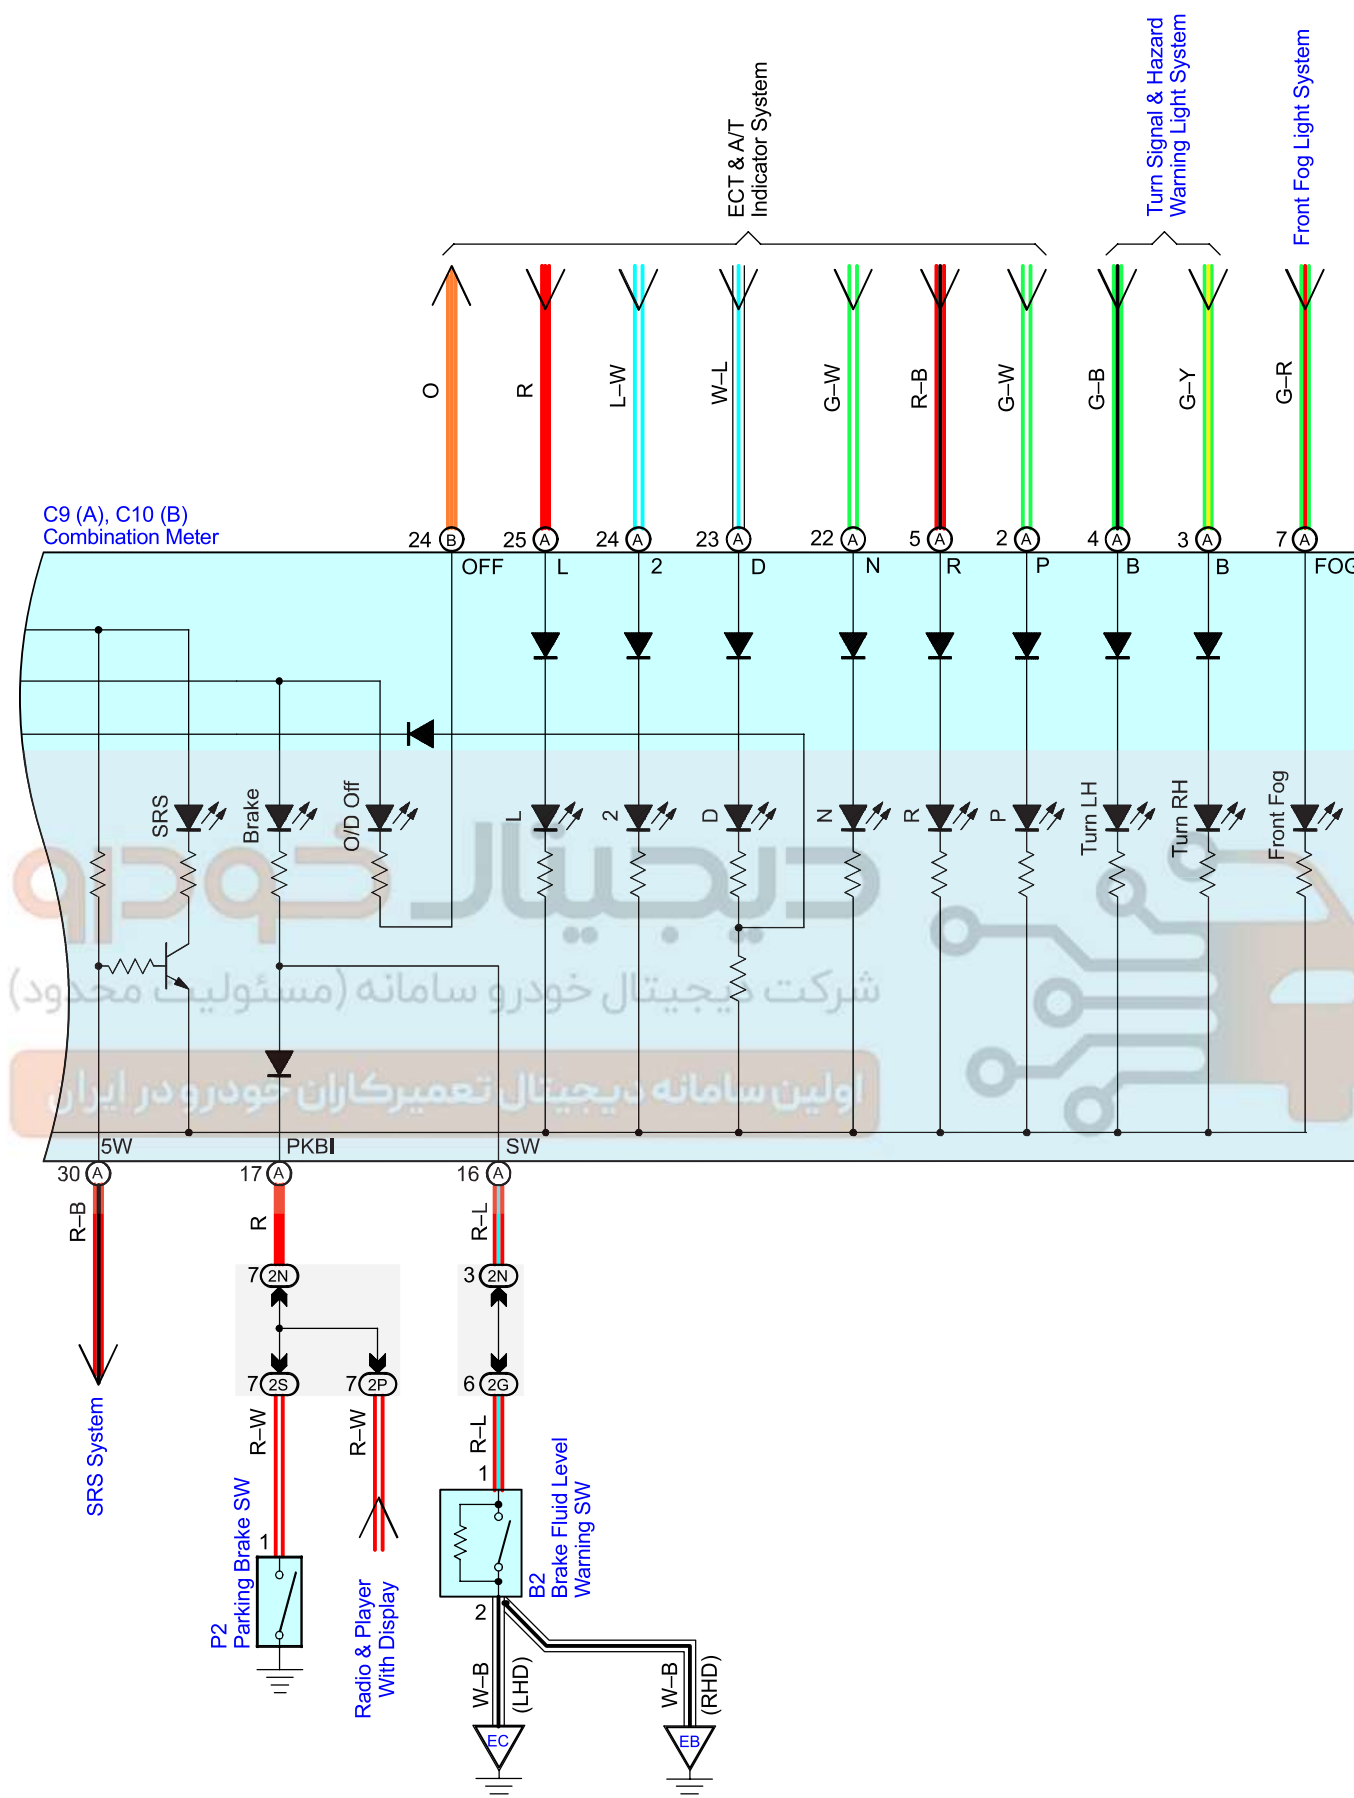

Service Hints**B2 Brake Fluid Level Warning SW**

1-2 : Closed with the float down

C9 (A) Combination Meter

(A) 21, (A) 27-Ground : Approx. 12 volts with ignition SW at ON or ST position

(A) 1-Ground : Always approx. 12 volts

(A) 15, (A) 40-Ground : Always continuity

O1 Oil Pressure SW1-Ground : Continuity with the oil pressure above approx. 20 kpa (2.8 psi, 0.2 kgf/cm²)**P2 Parking Brake SW**

1-Ground : Continuity with the parking brake lever pulled up (Lever type)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
B2		32 (LHD 1MZ–FE)		J9	A	37 (LHD)		P2		33 (LHD 1MZ–FE)	
		42 (RHD 1MZ–FE)				47 (RHD)				43 (RHD 1MZ–FE)	
		34 (RHD 2AZ–FE)		J10	B	37 (LHD)				35 (LHD 2AZ–FE)	
		44 (RHD 2AZ–FE)				47 (RHD)				45 (RHD 2AZ–FE)	
C9	A	36 (LHD)		F12		38 (LHD)		S3		33 (LHD 1MZ–FE)	
		46 (RHD)				48 (RHD)				43 (RHD 1MZ–FE)	
C10	B	36 (LHD)		O1		33 (LHD 1MZ–FE)				35 (LHD 2AZ–FE)	
		46 (RHD)				43 RHD 1MZ–FE)				45 (RHD 2AZ–FE)	
J5	A	37 (LHD)				35 (LHD 2AZ–FE)					
		47 (RHD)				45 (RHD 2AZ–FE)					
J6	B	37 (LHD)									
		47 (RHD)									

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Engine Room J/B
2G	26	Engine Room Main Wire and Driver Side J/B
2K	26	Floor Wire and Driver Side J/B
2M	27	Instrument Panel Wire and Driver Side J/B
2N		
2O		
2R		
2P		
2S		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
	70 (RHD)	
IG2	58 (LHD)	
	70 (RHD)	

Combination Meter



: Ground Points

Code	See Page	Ground Points Location
EB	64 (RHD-1MZ-FE)	Right Front Fender
	66 (RHD-2AZ-FE)	
EC	52 (LHD-1MZ-FE)	Left Front Fender
	54 (LHD-2AZ-FE)	
II	55 (LHD)	Instrument Panel Reinforcement LH
IJ	55 (LHD)	Instrument Panel Brace
	67 (RHD)	
IM	67 (RHD)	Instrument Panel Reinforcement RH

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

