


CHAPTER 3. SCHEMATIC DIAGRAM


(8). BCM System

8.1. BCM Connector Terminal Description

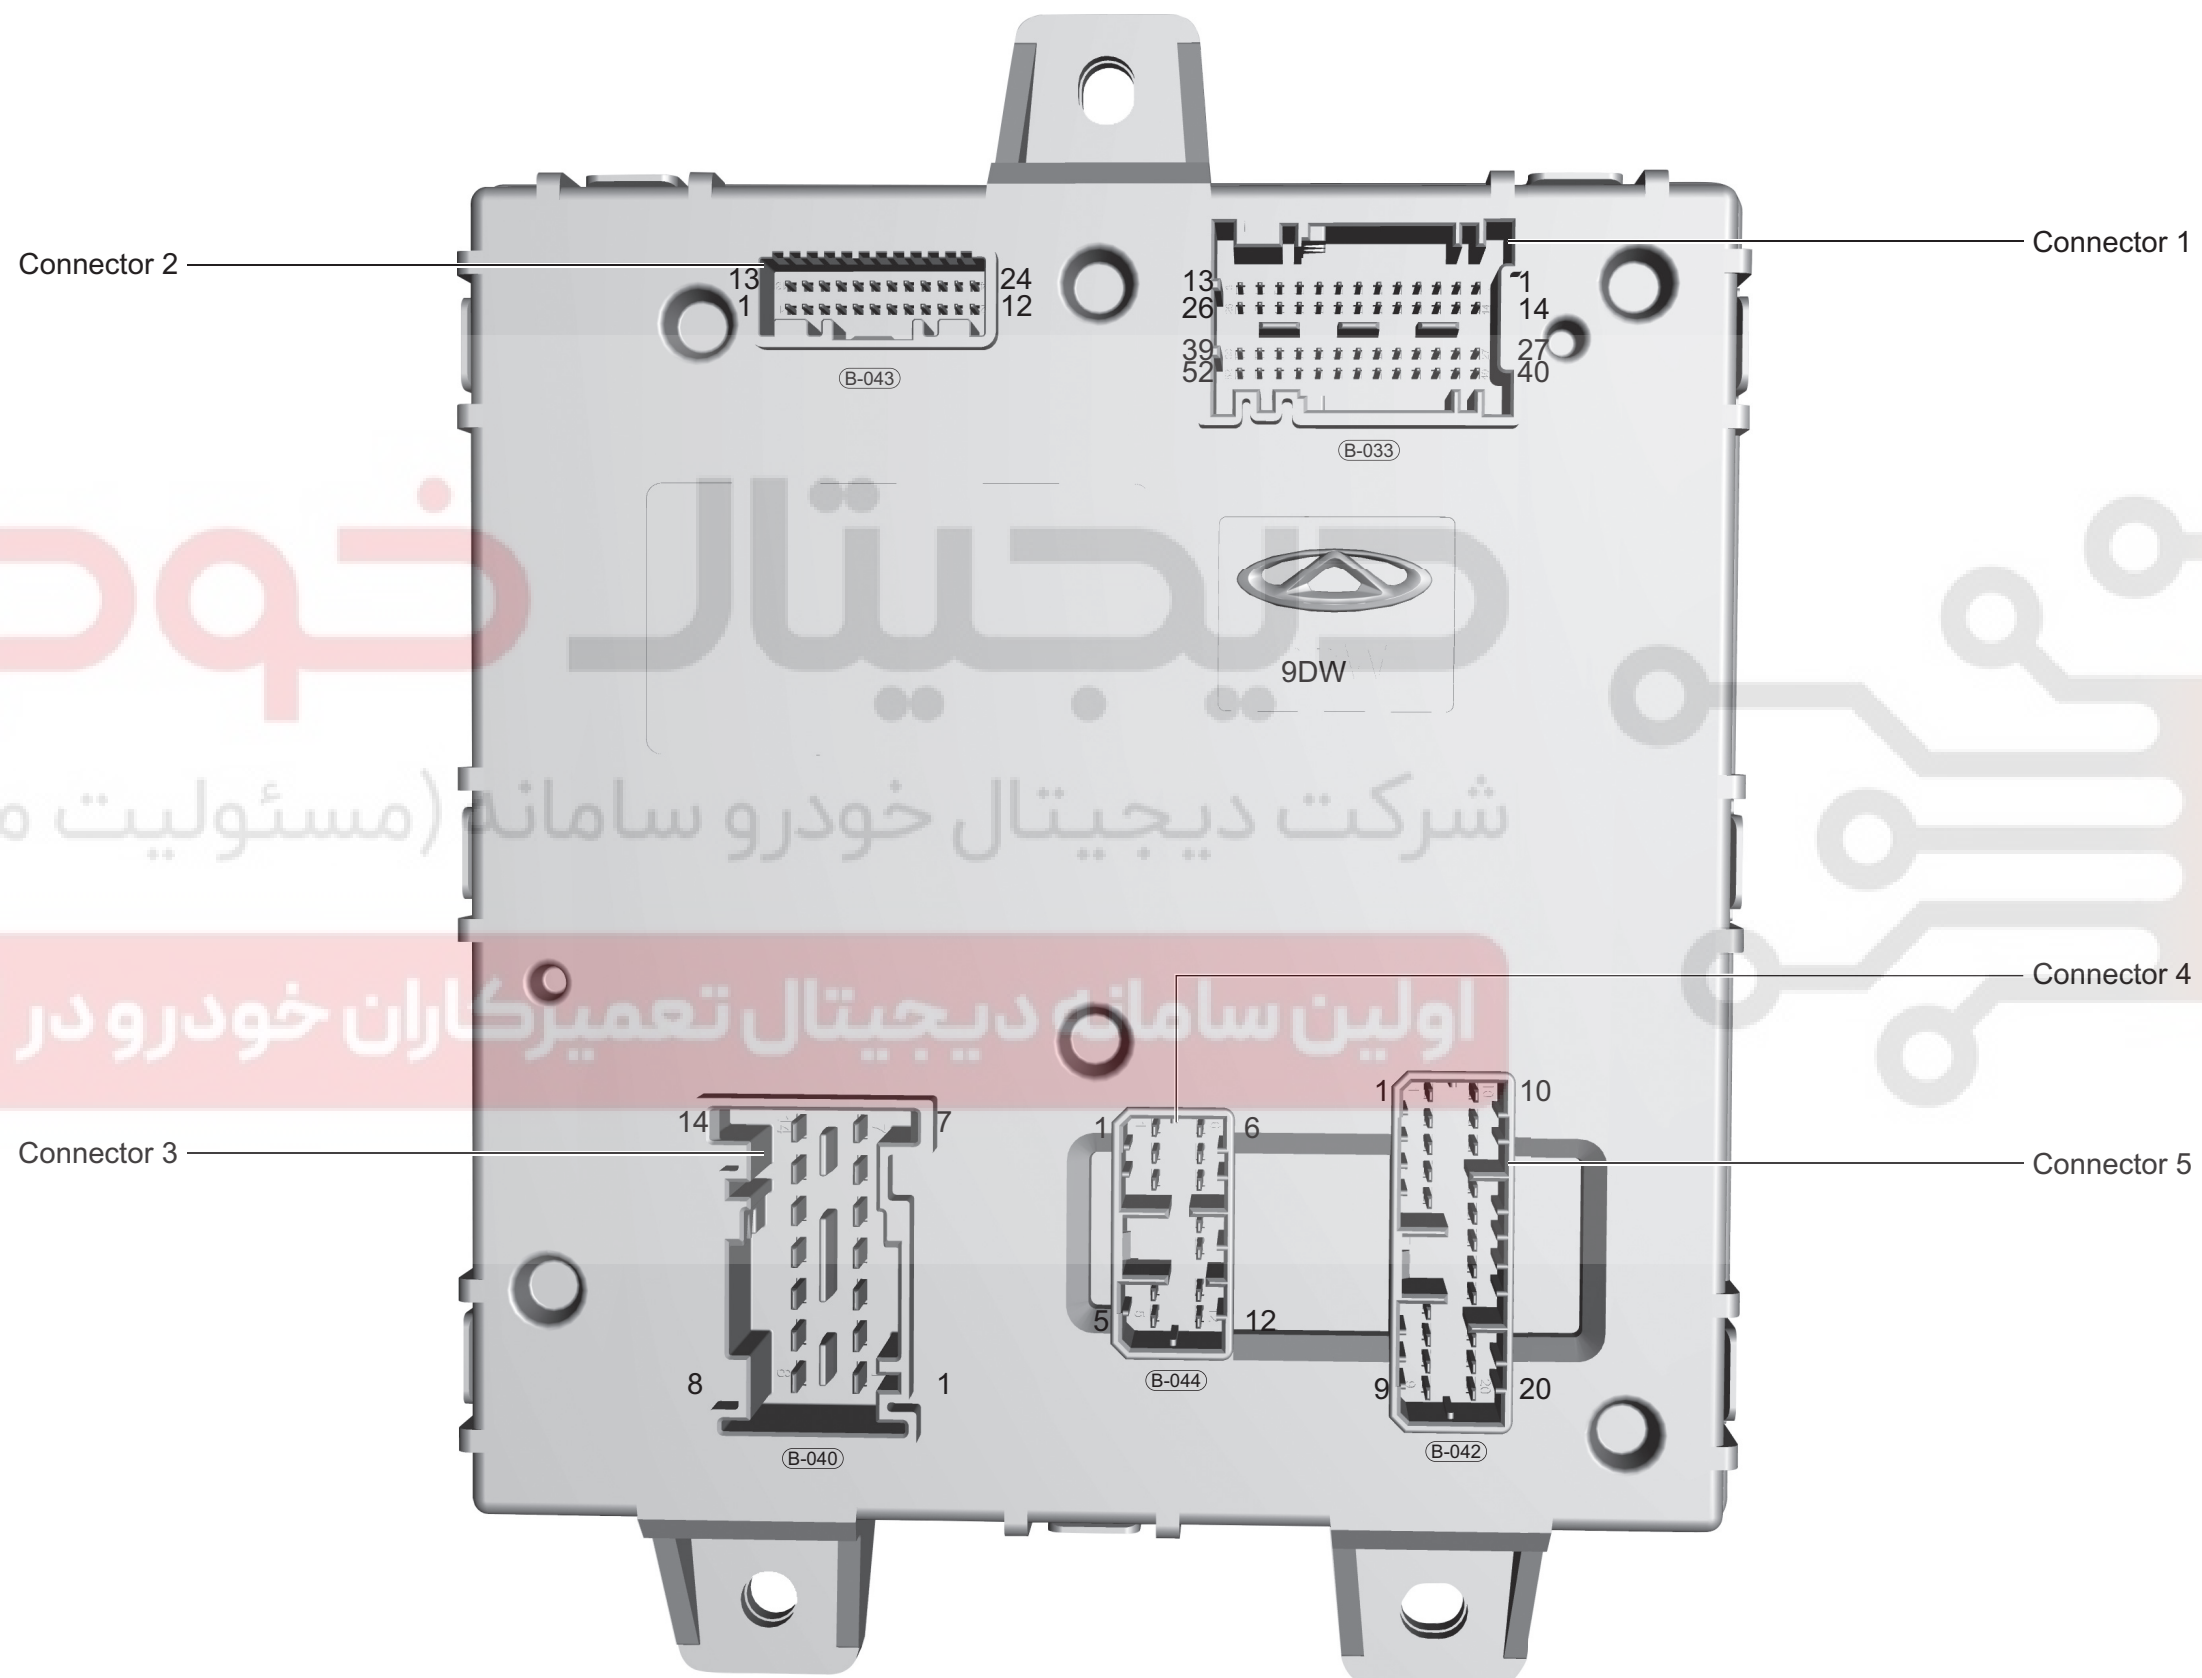


E030320


8.2. BCM Power Supply, Network Communication

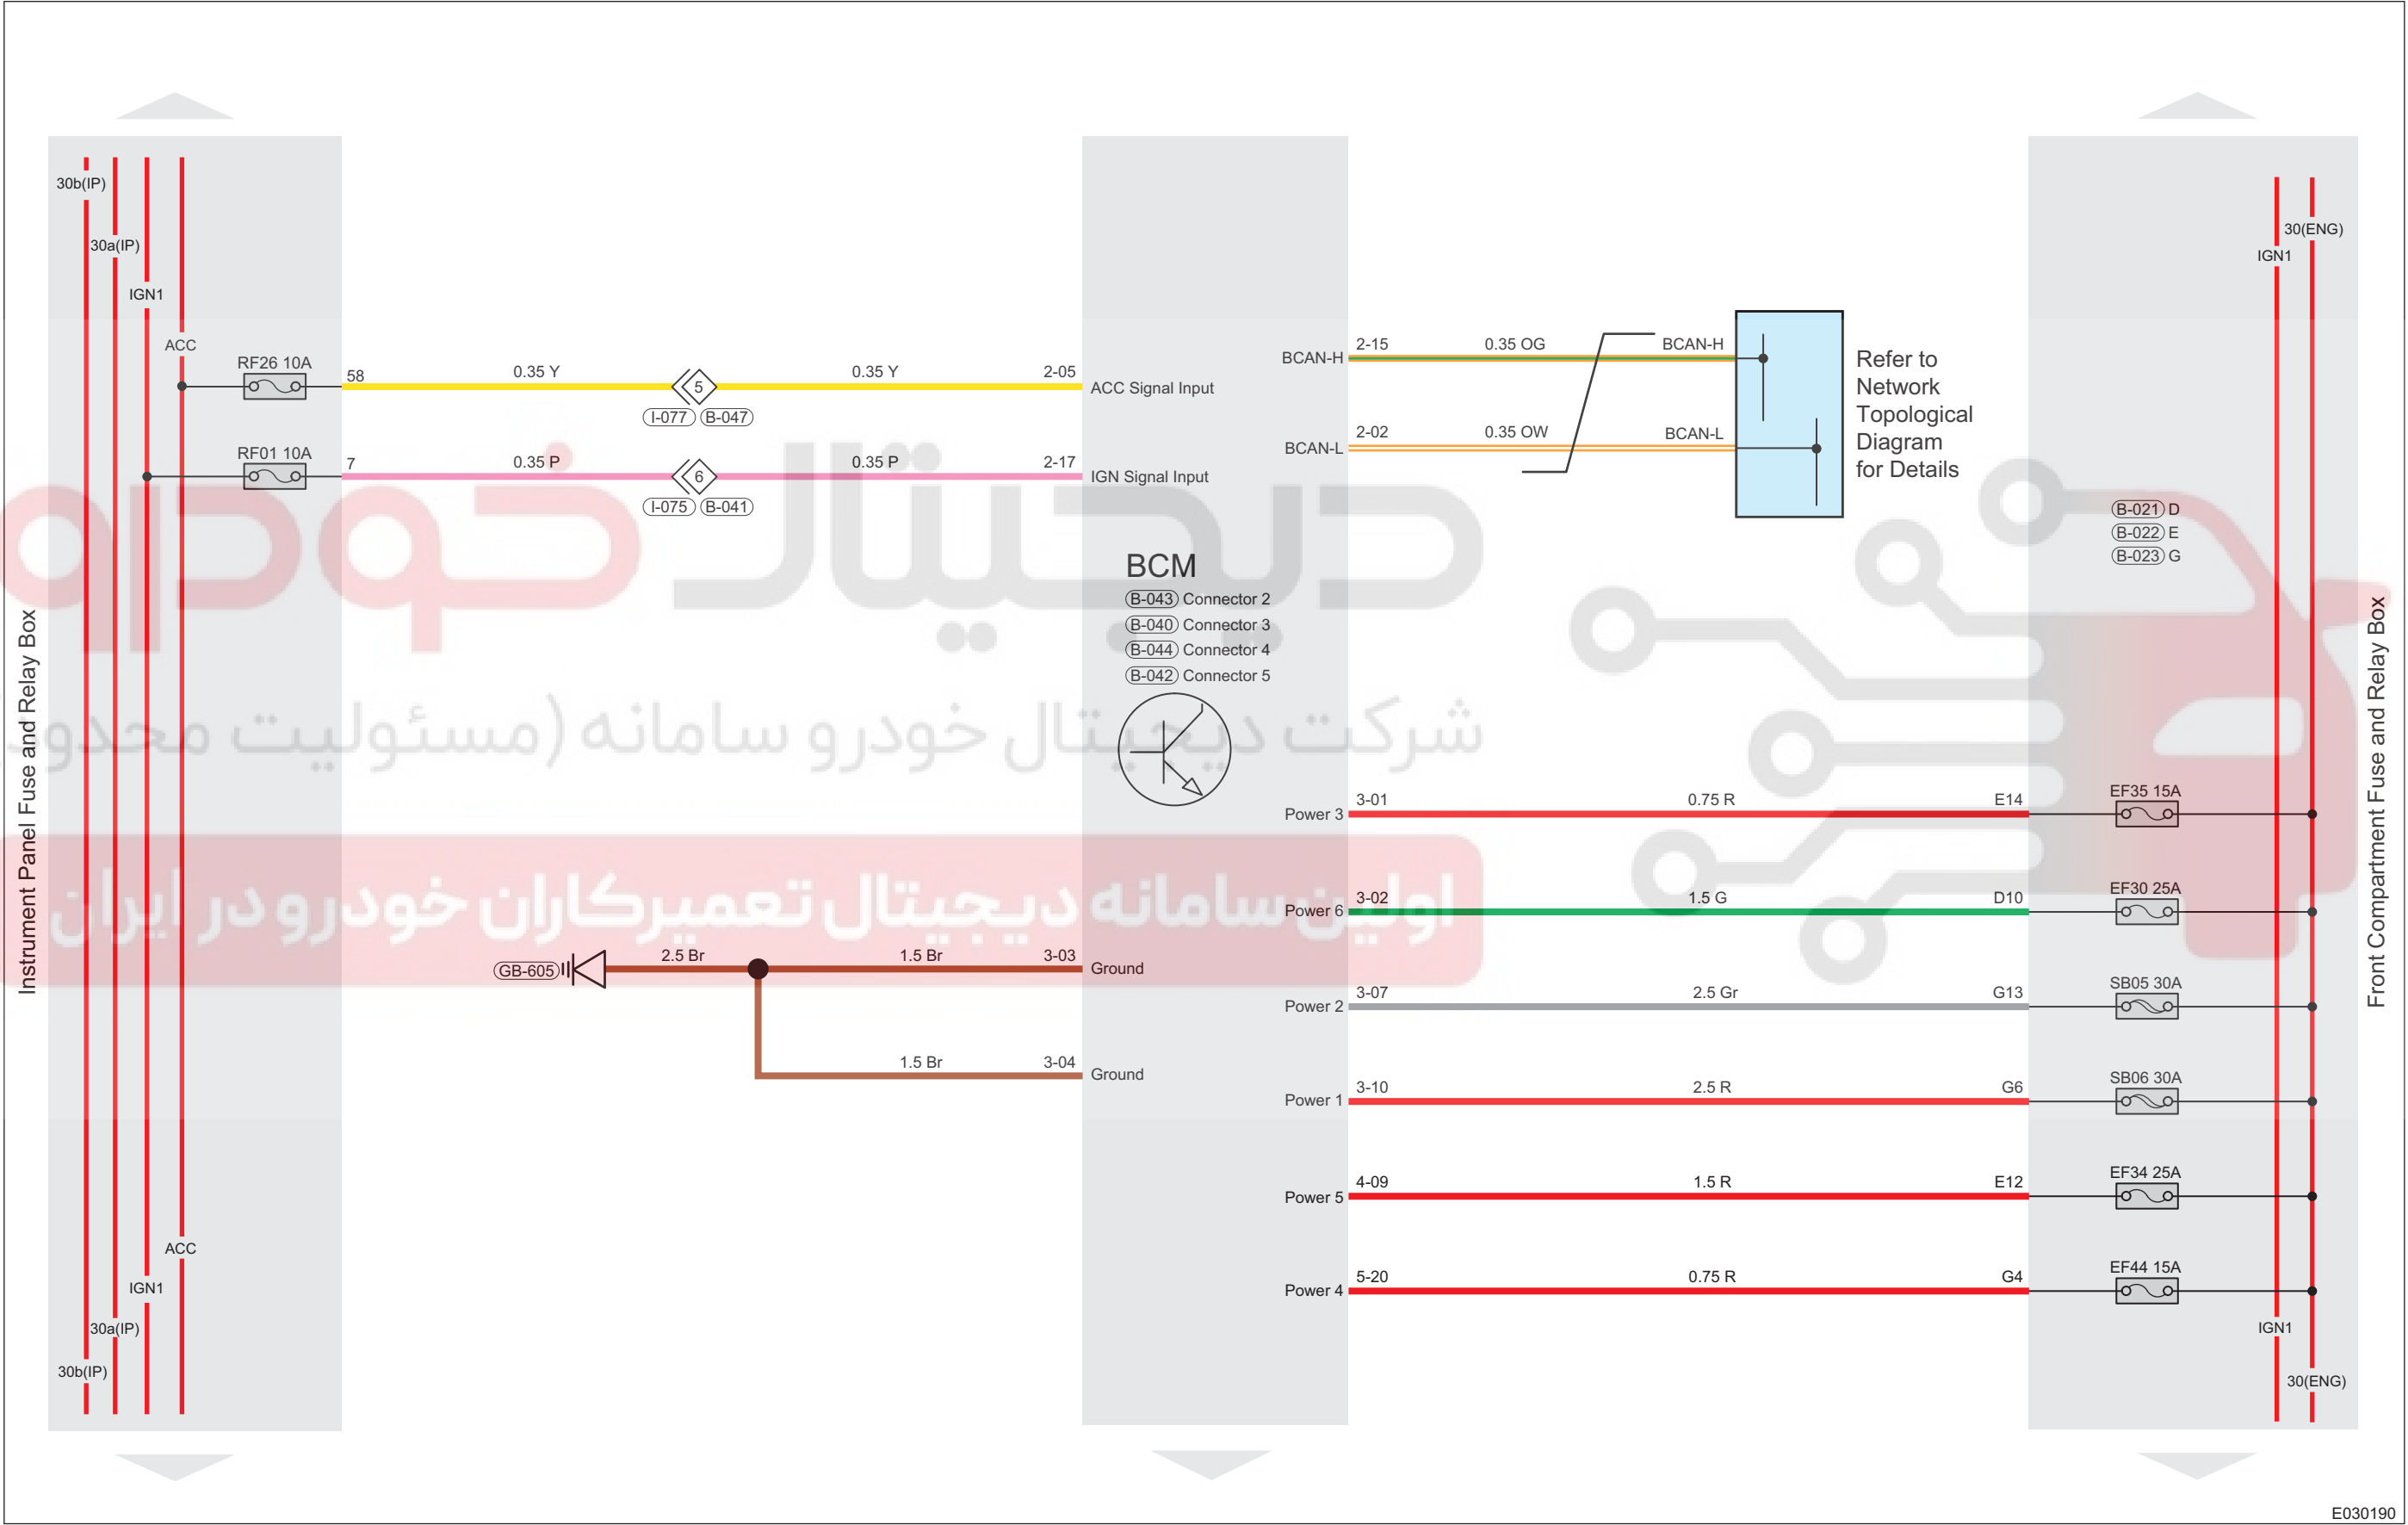

8.3. Front Position Light, Backlight

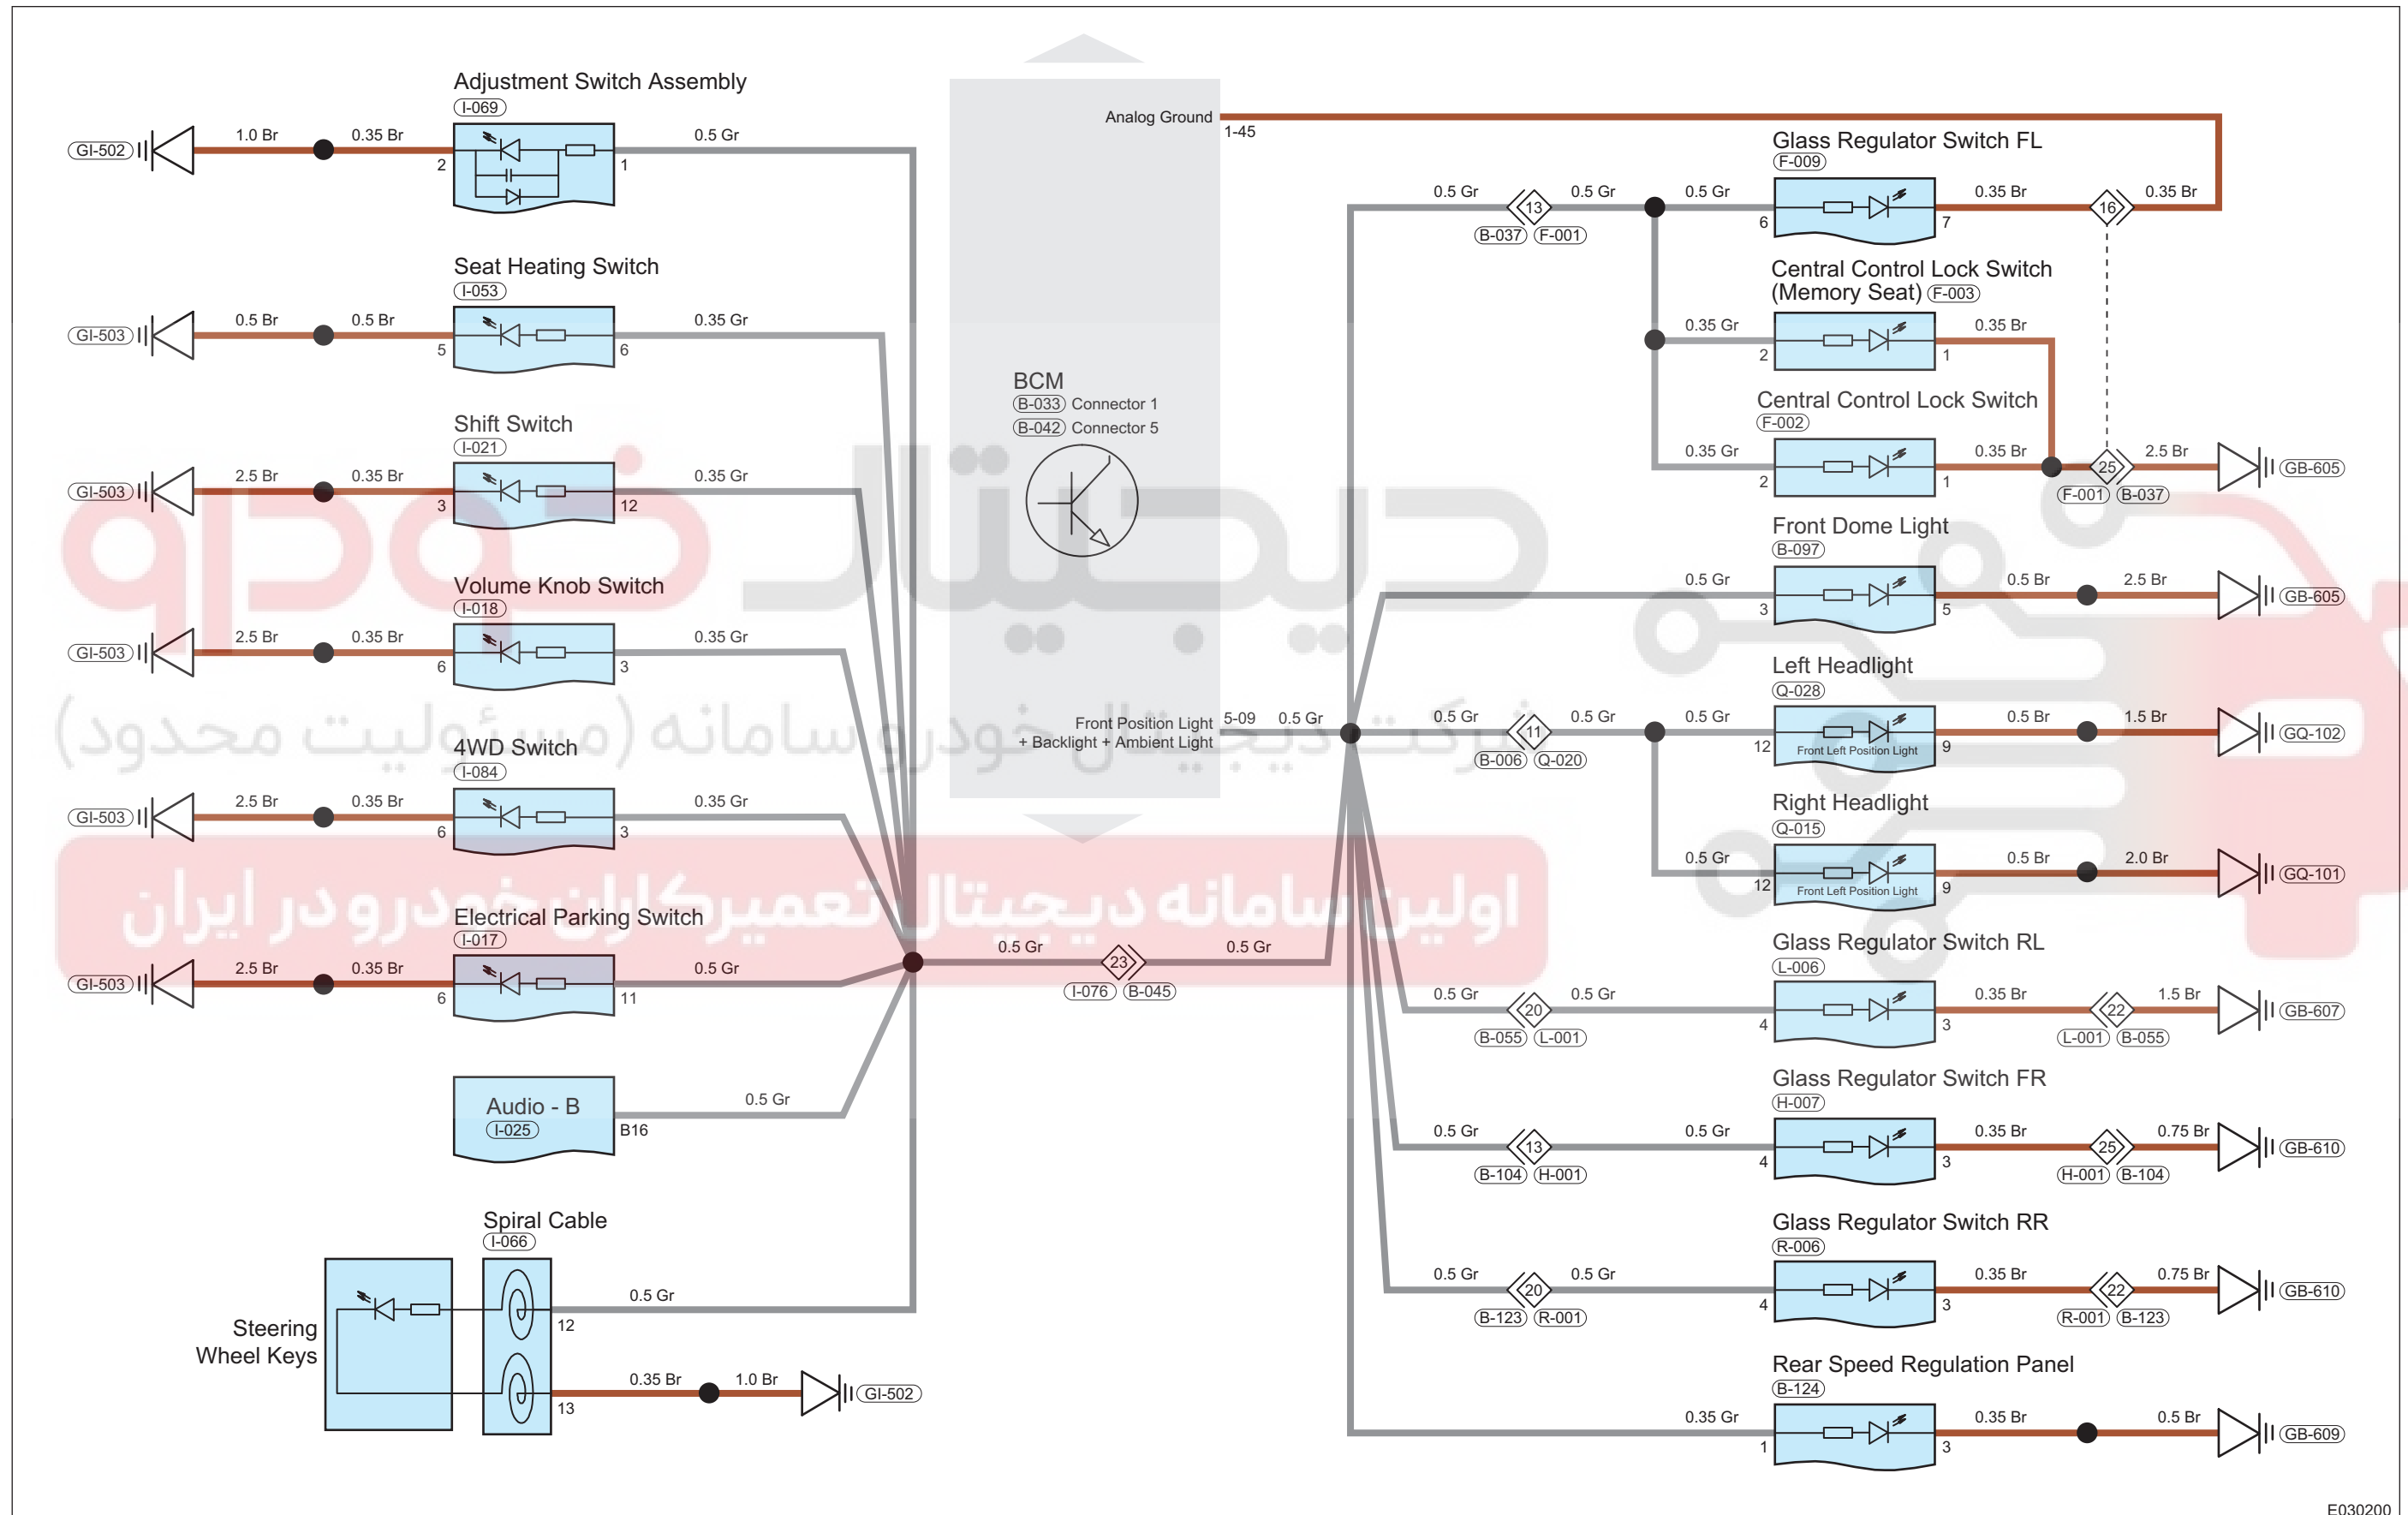



8.4. Ambient Light

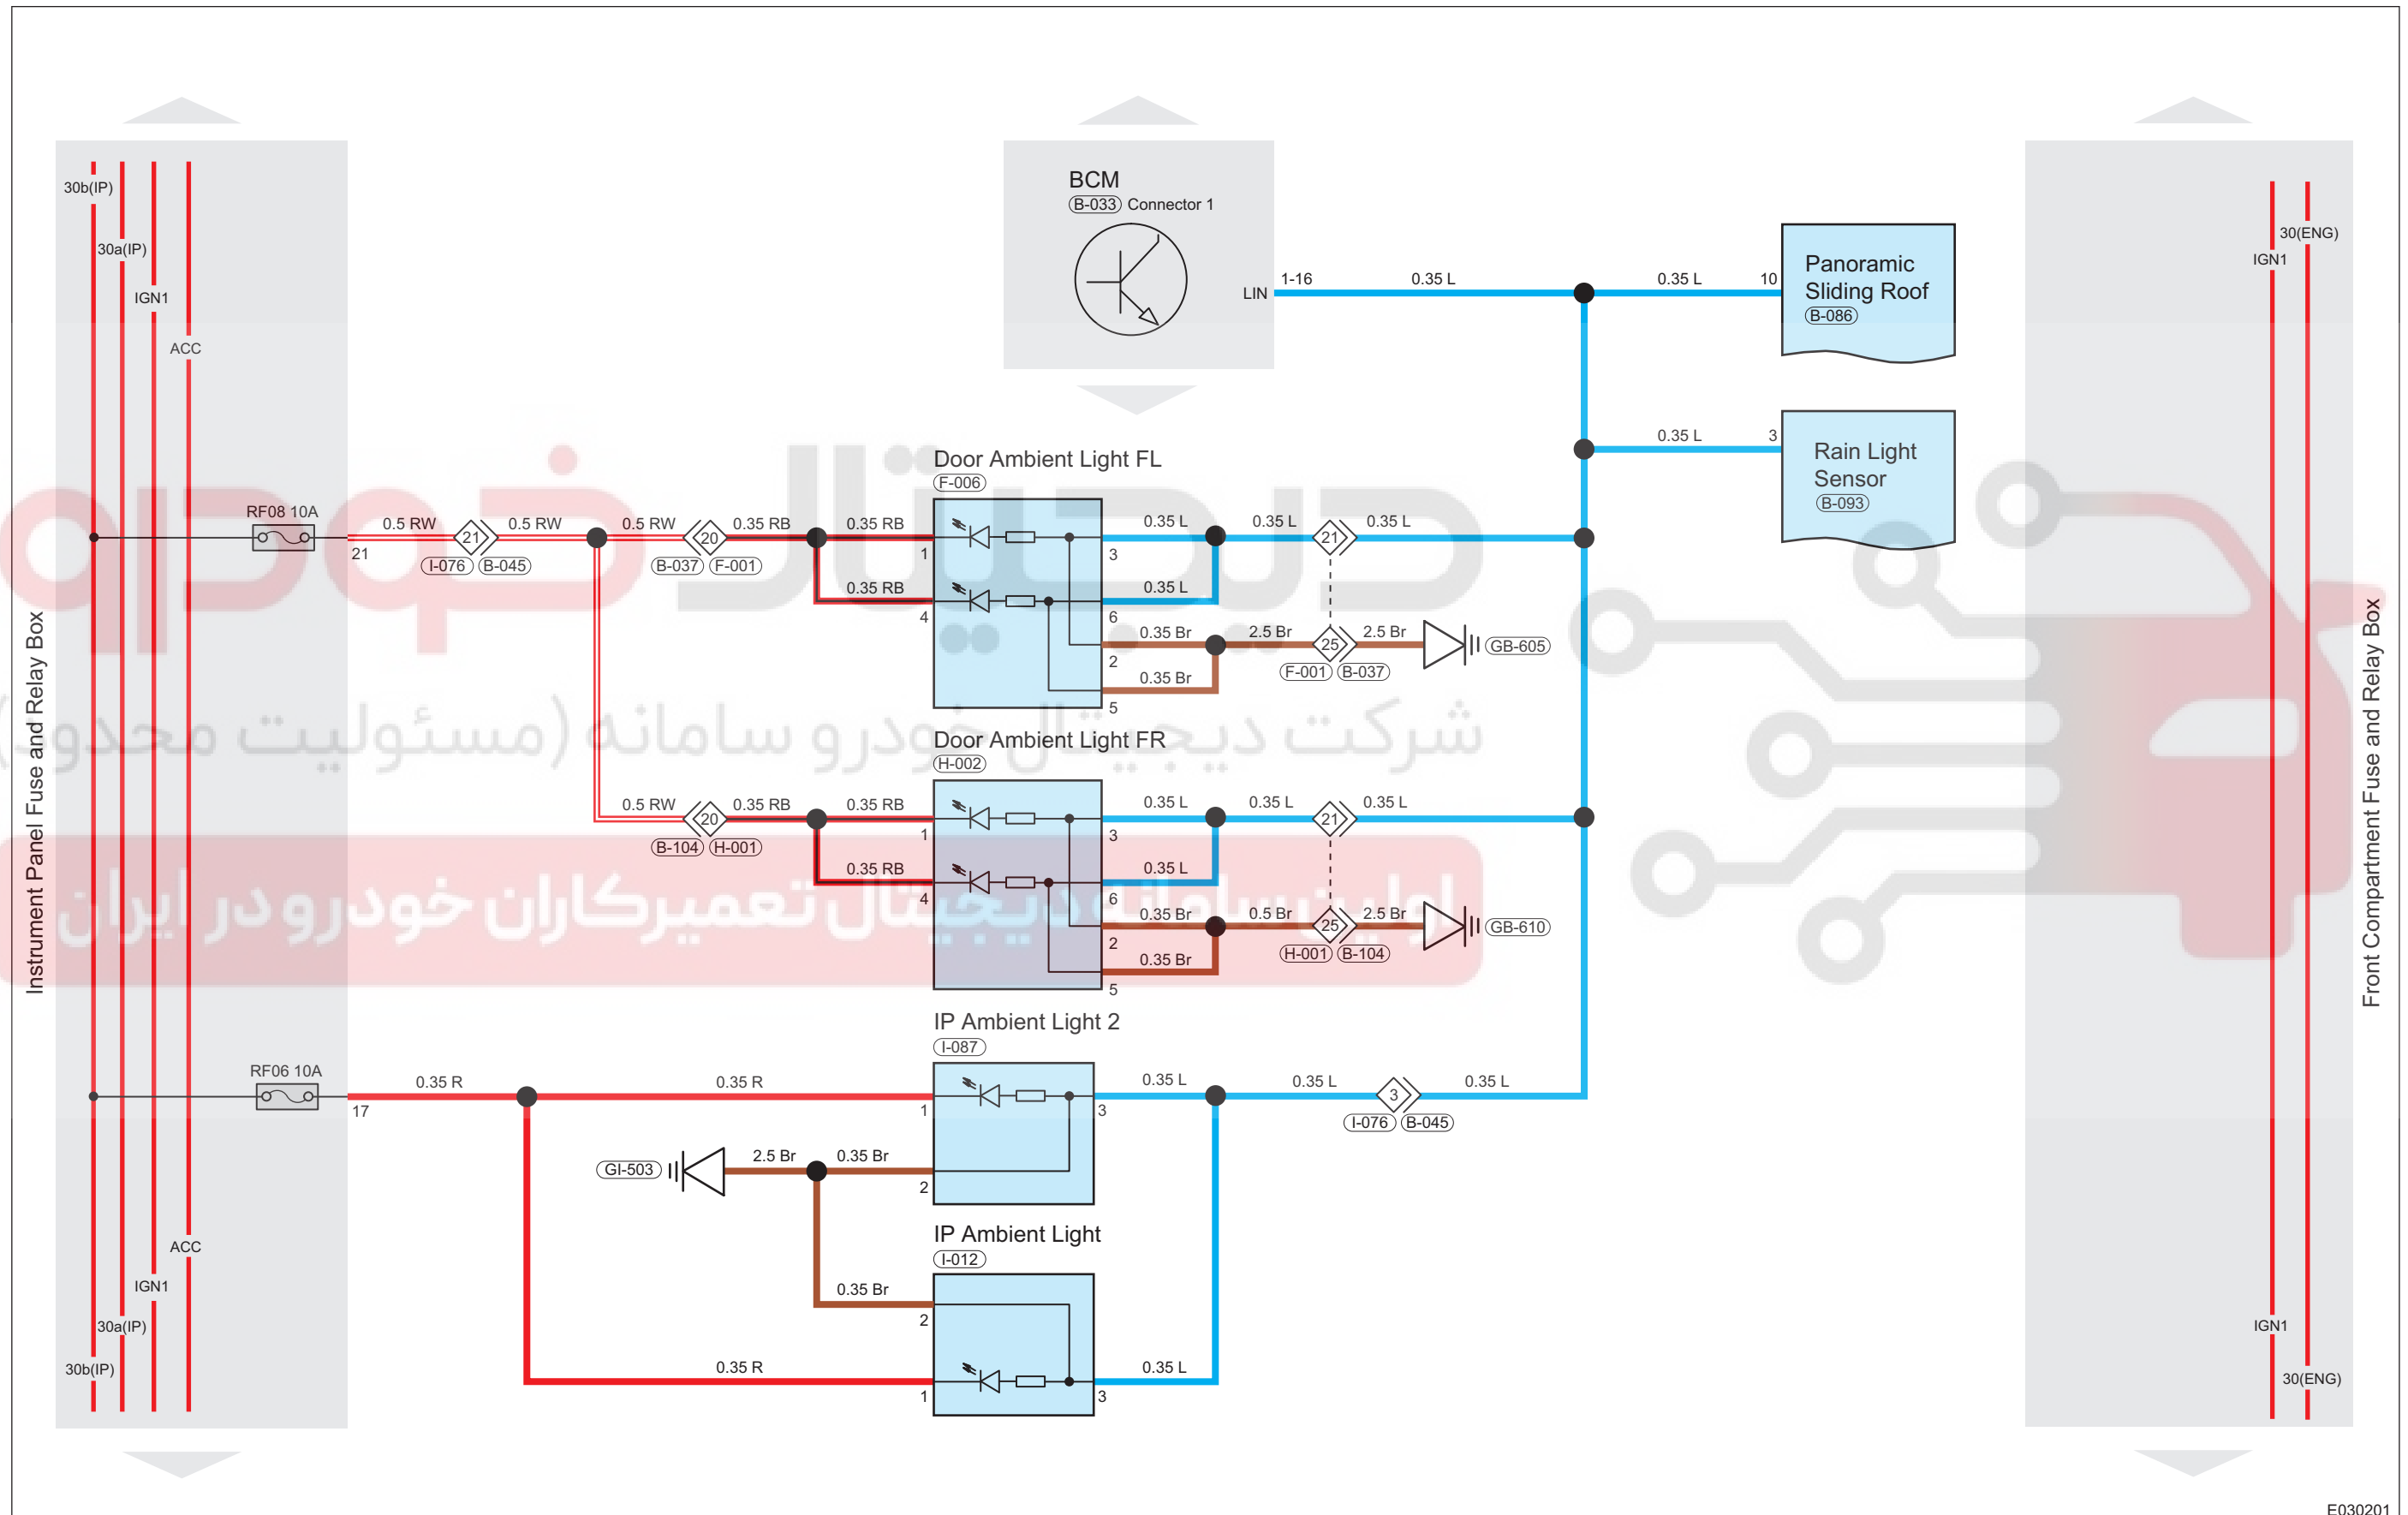

E030201


8.5. Brake Switch, Brake Light

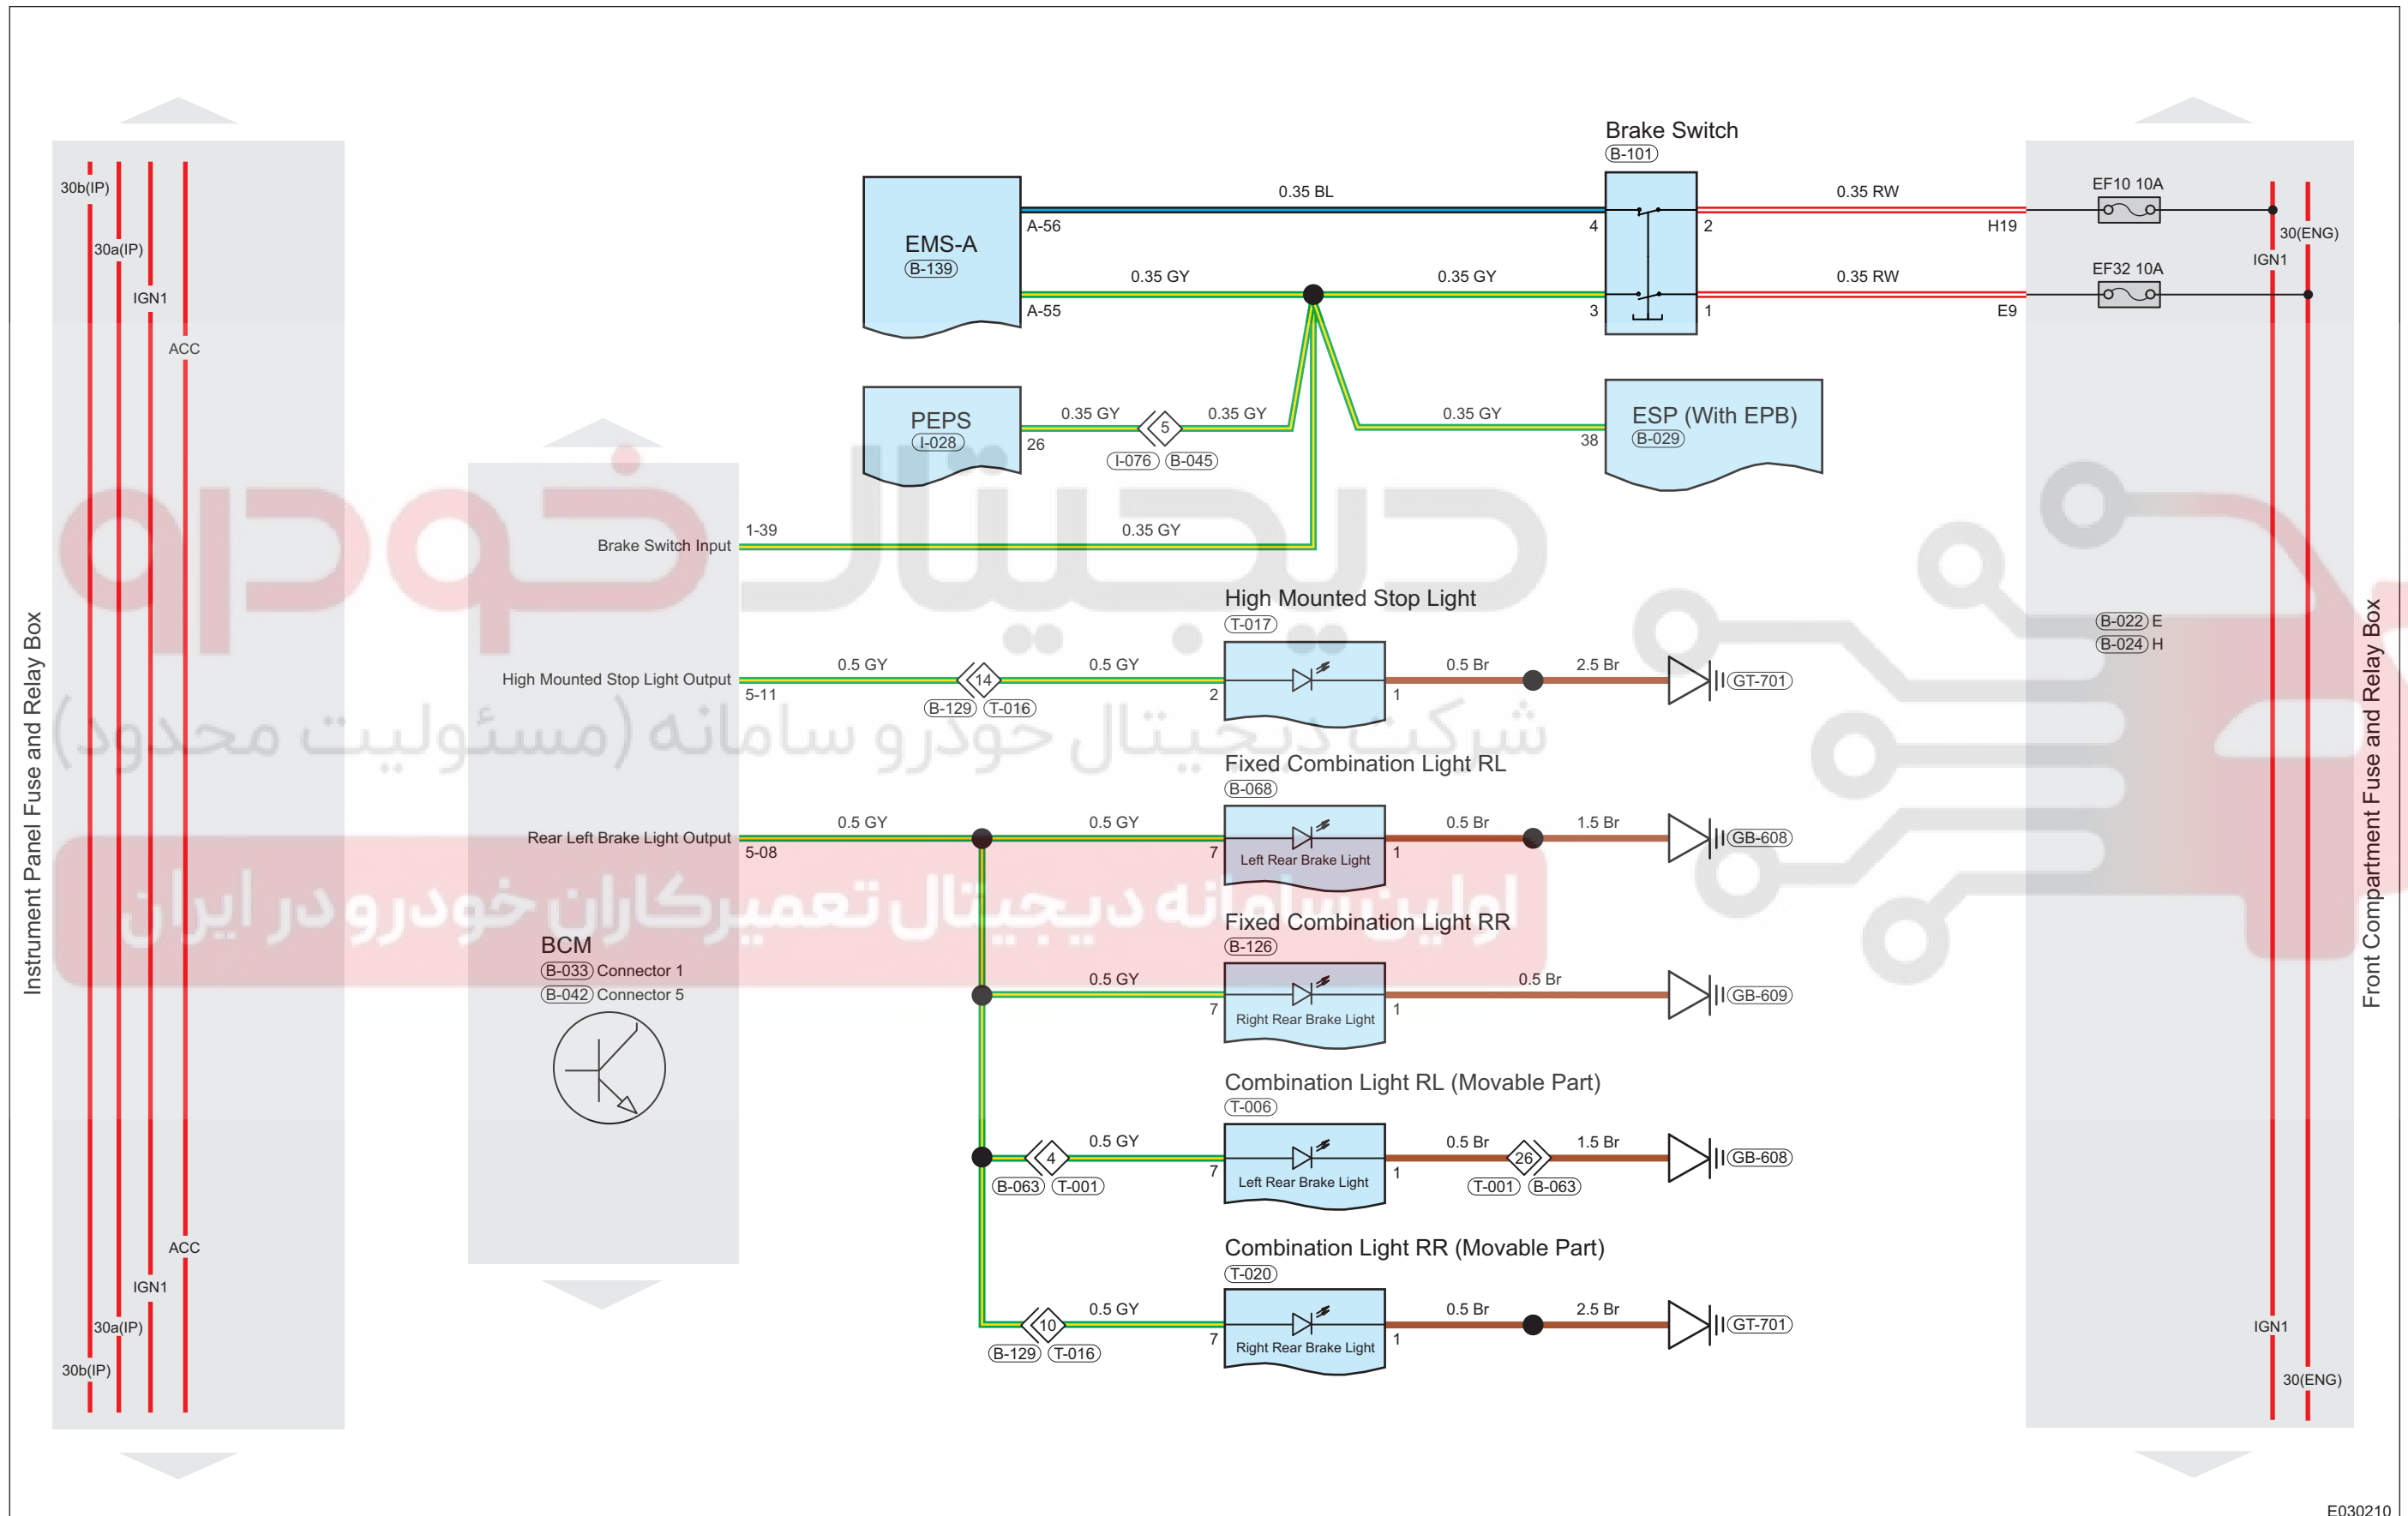

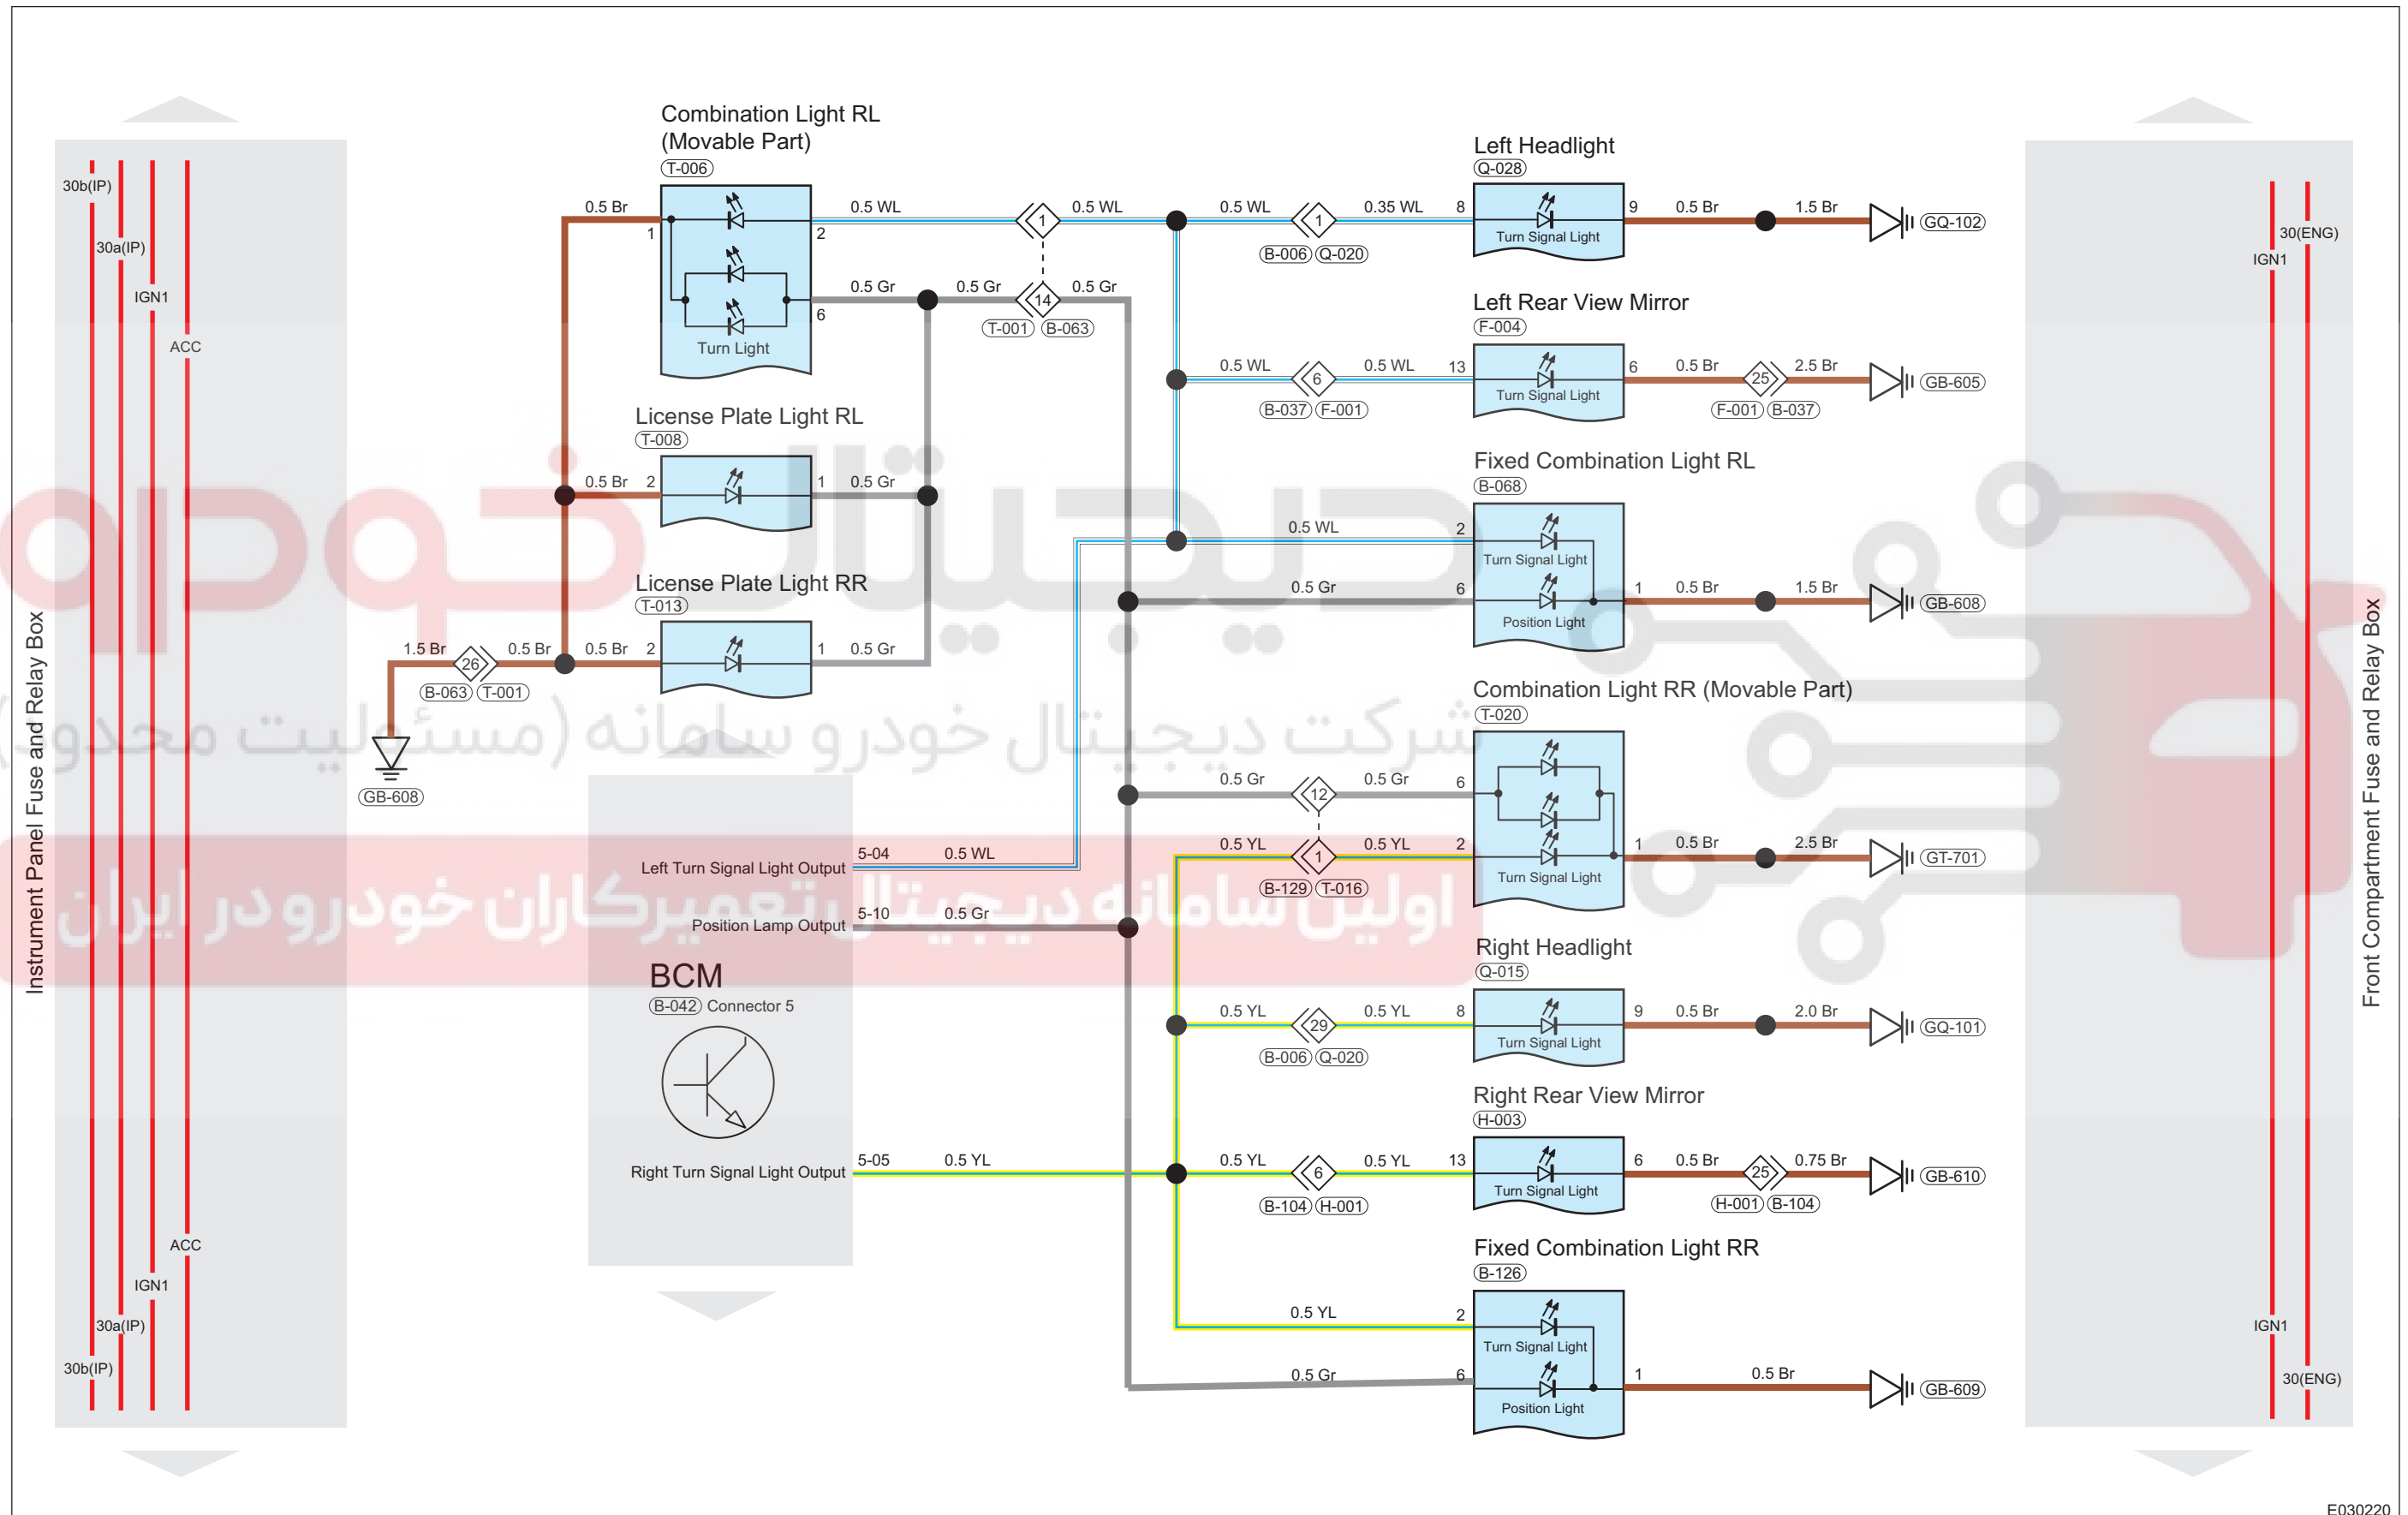


CHAPTER 3. SCHEMATIC DIAGRAM

8.7. Turn Light Diagnosis, Hazard Light Signal

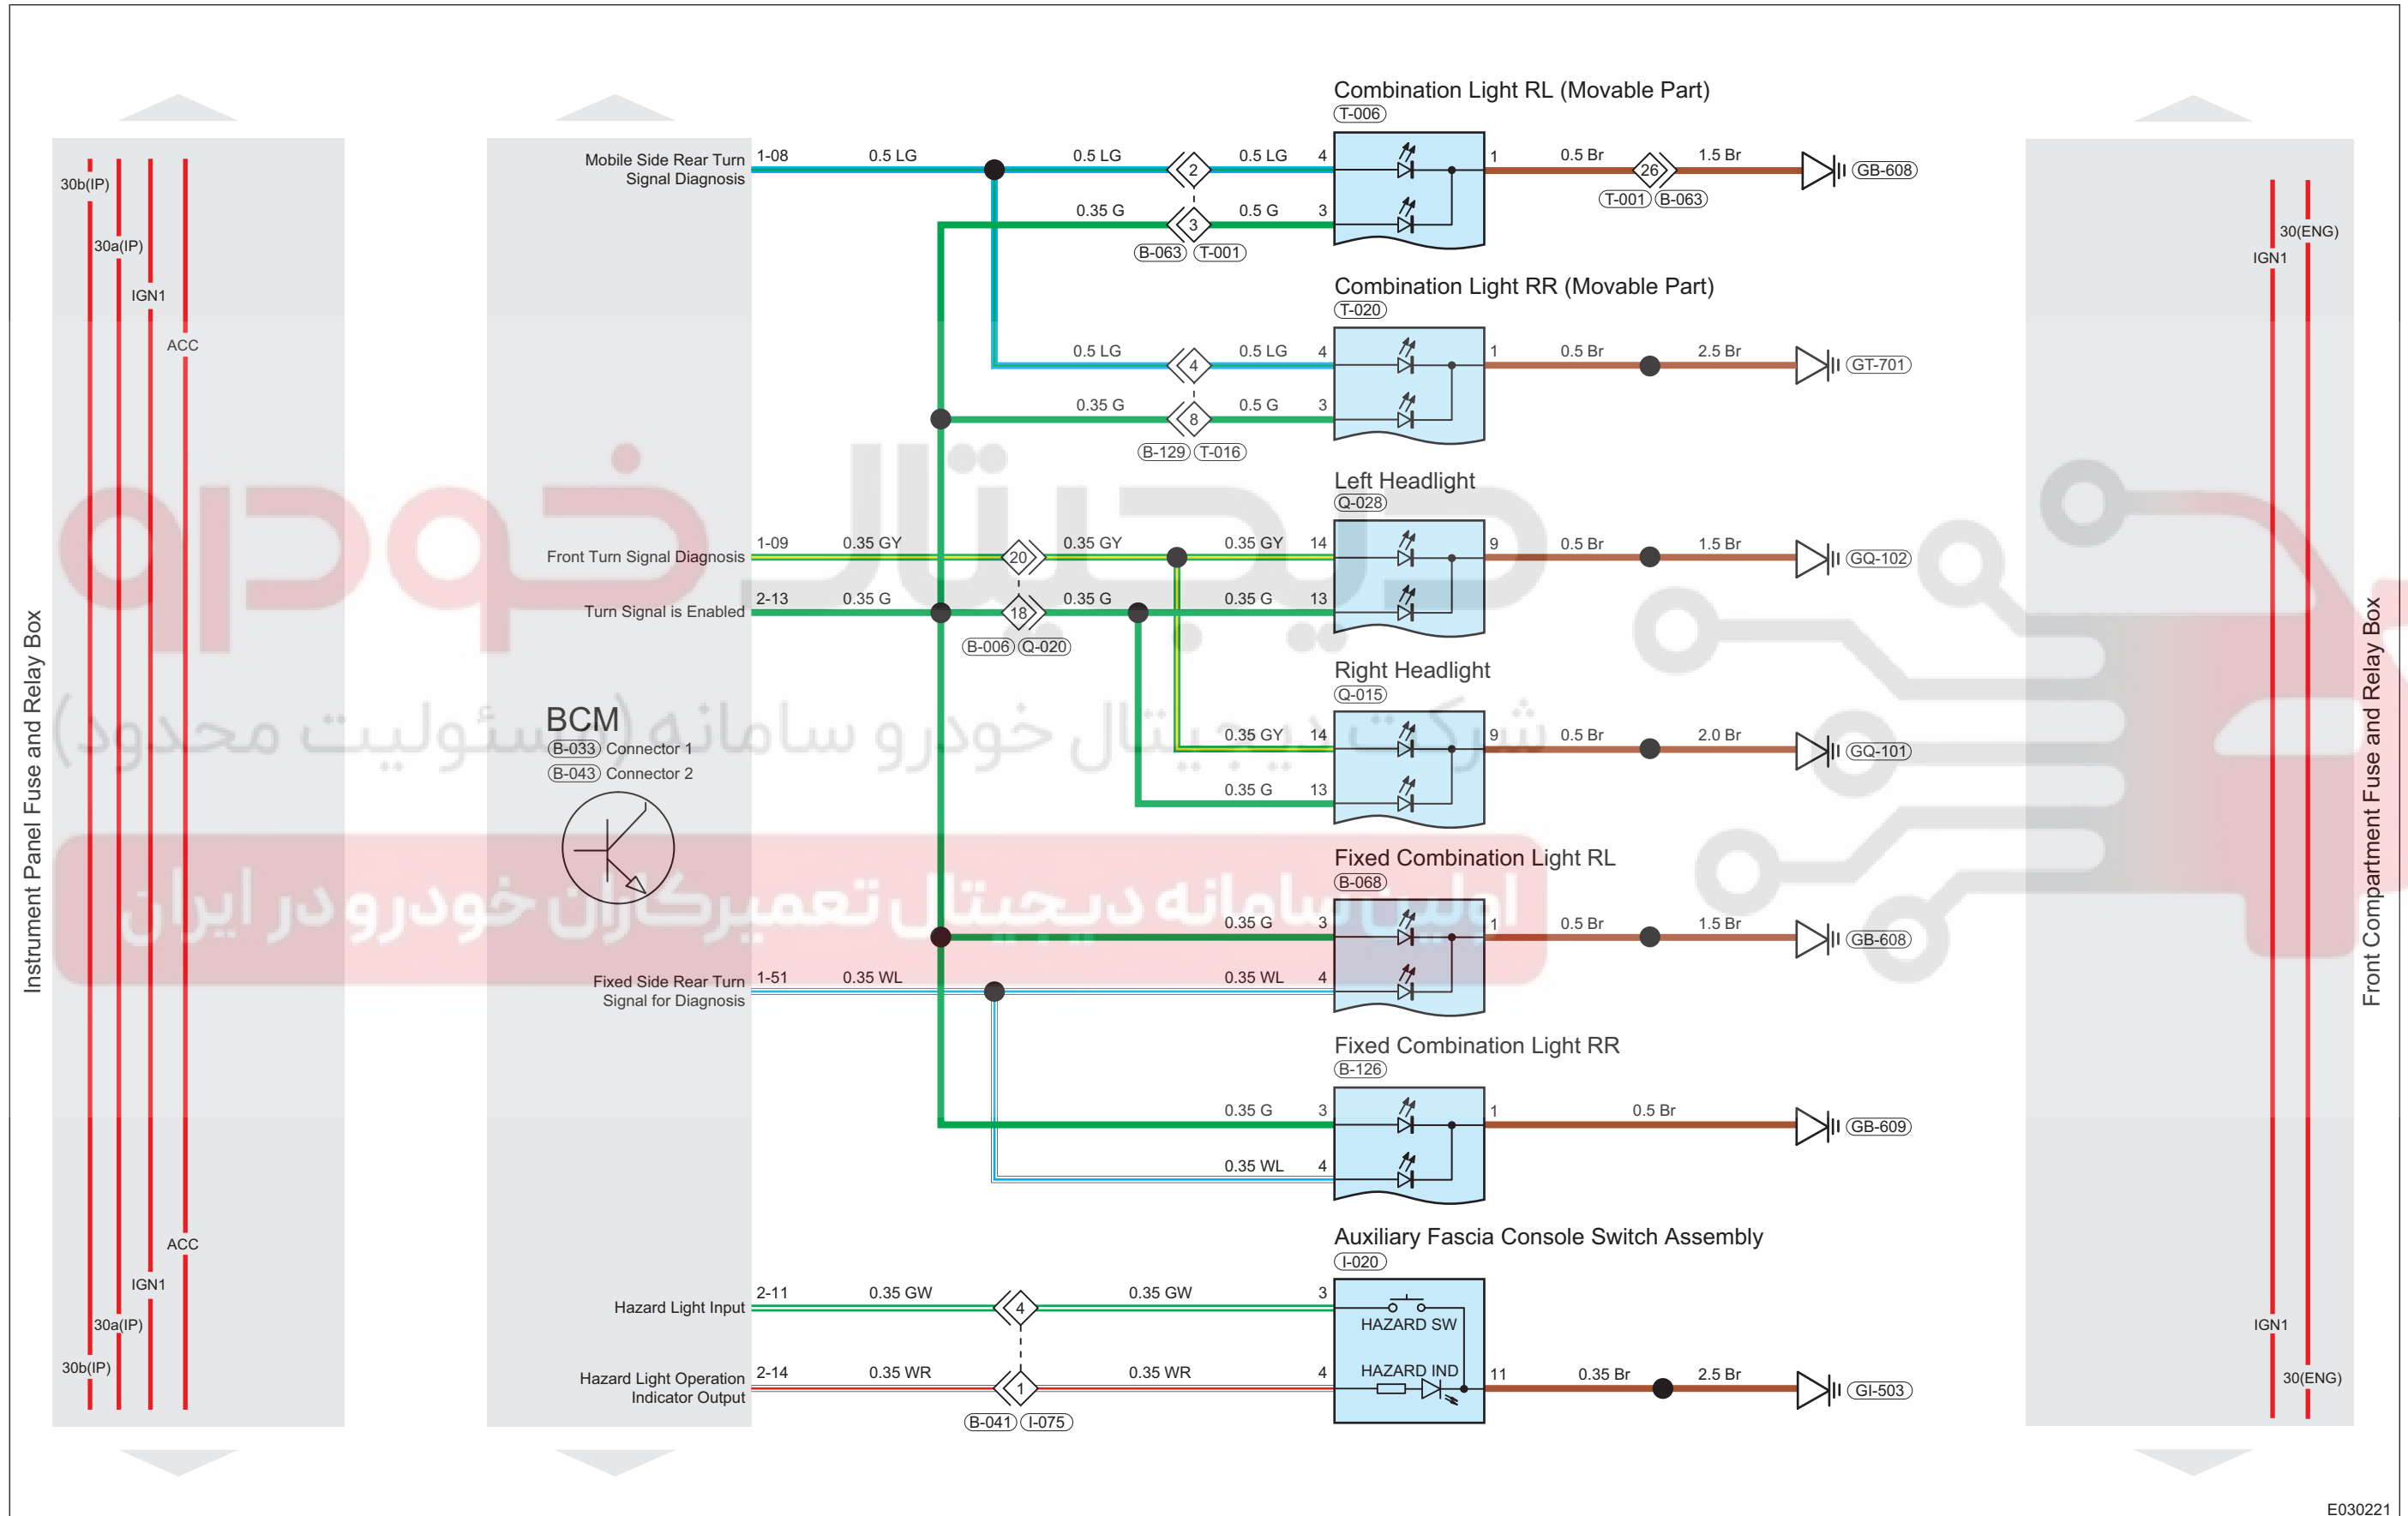

E030221


8.8. Welcome Light Enable, Daytime Running Light

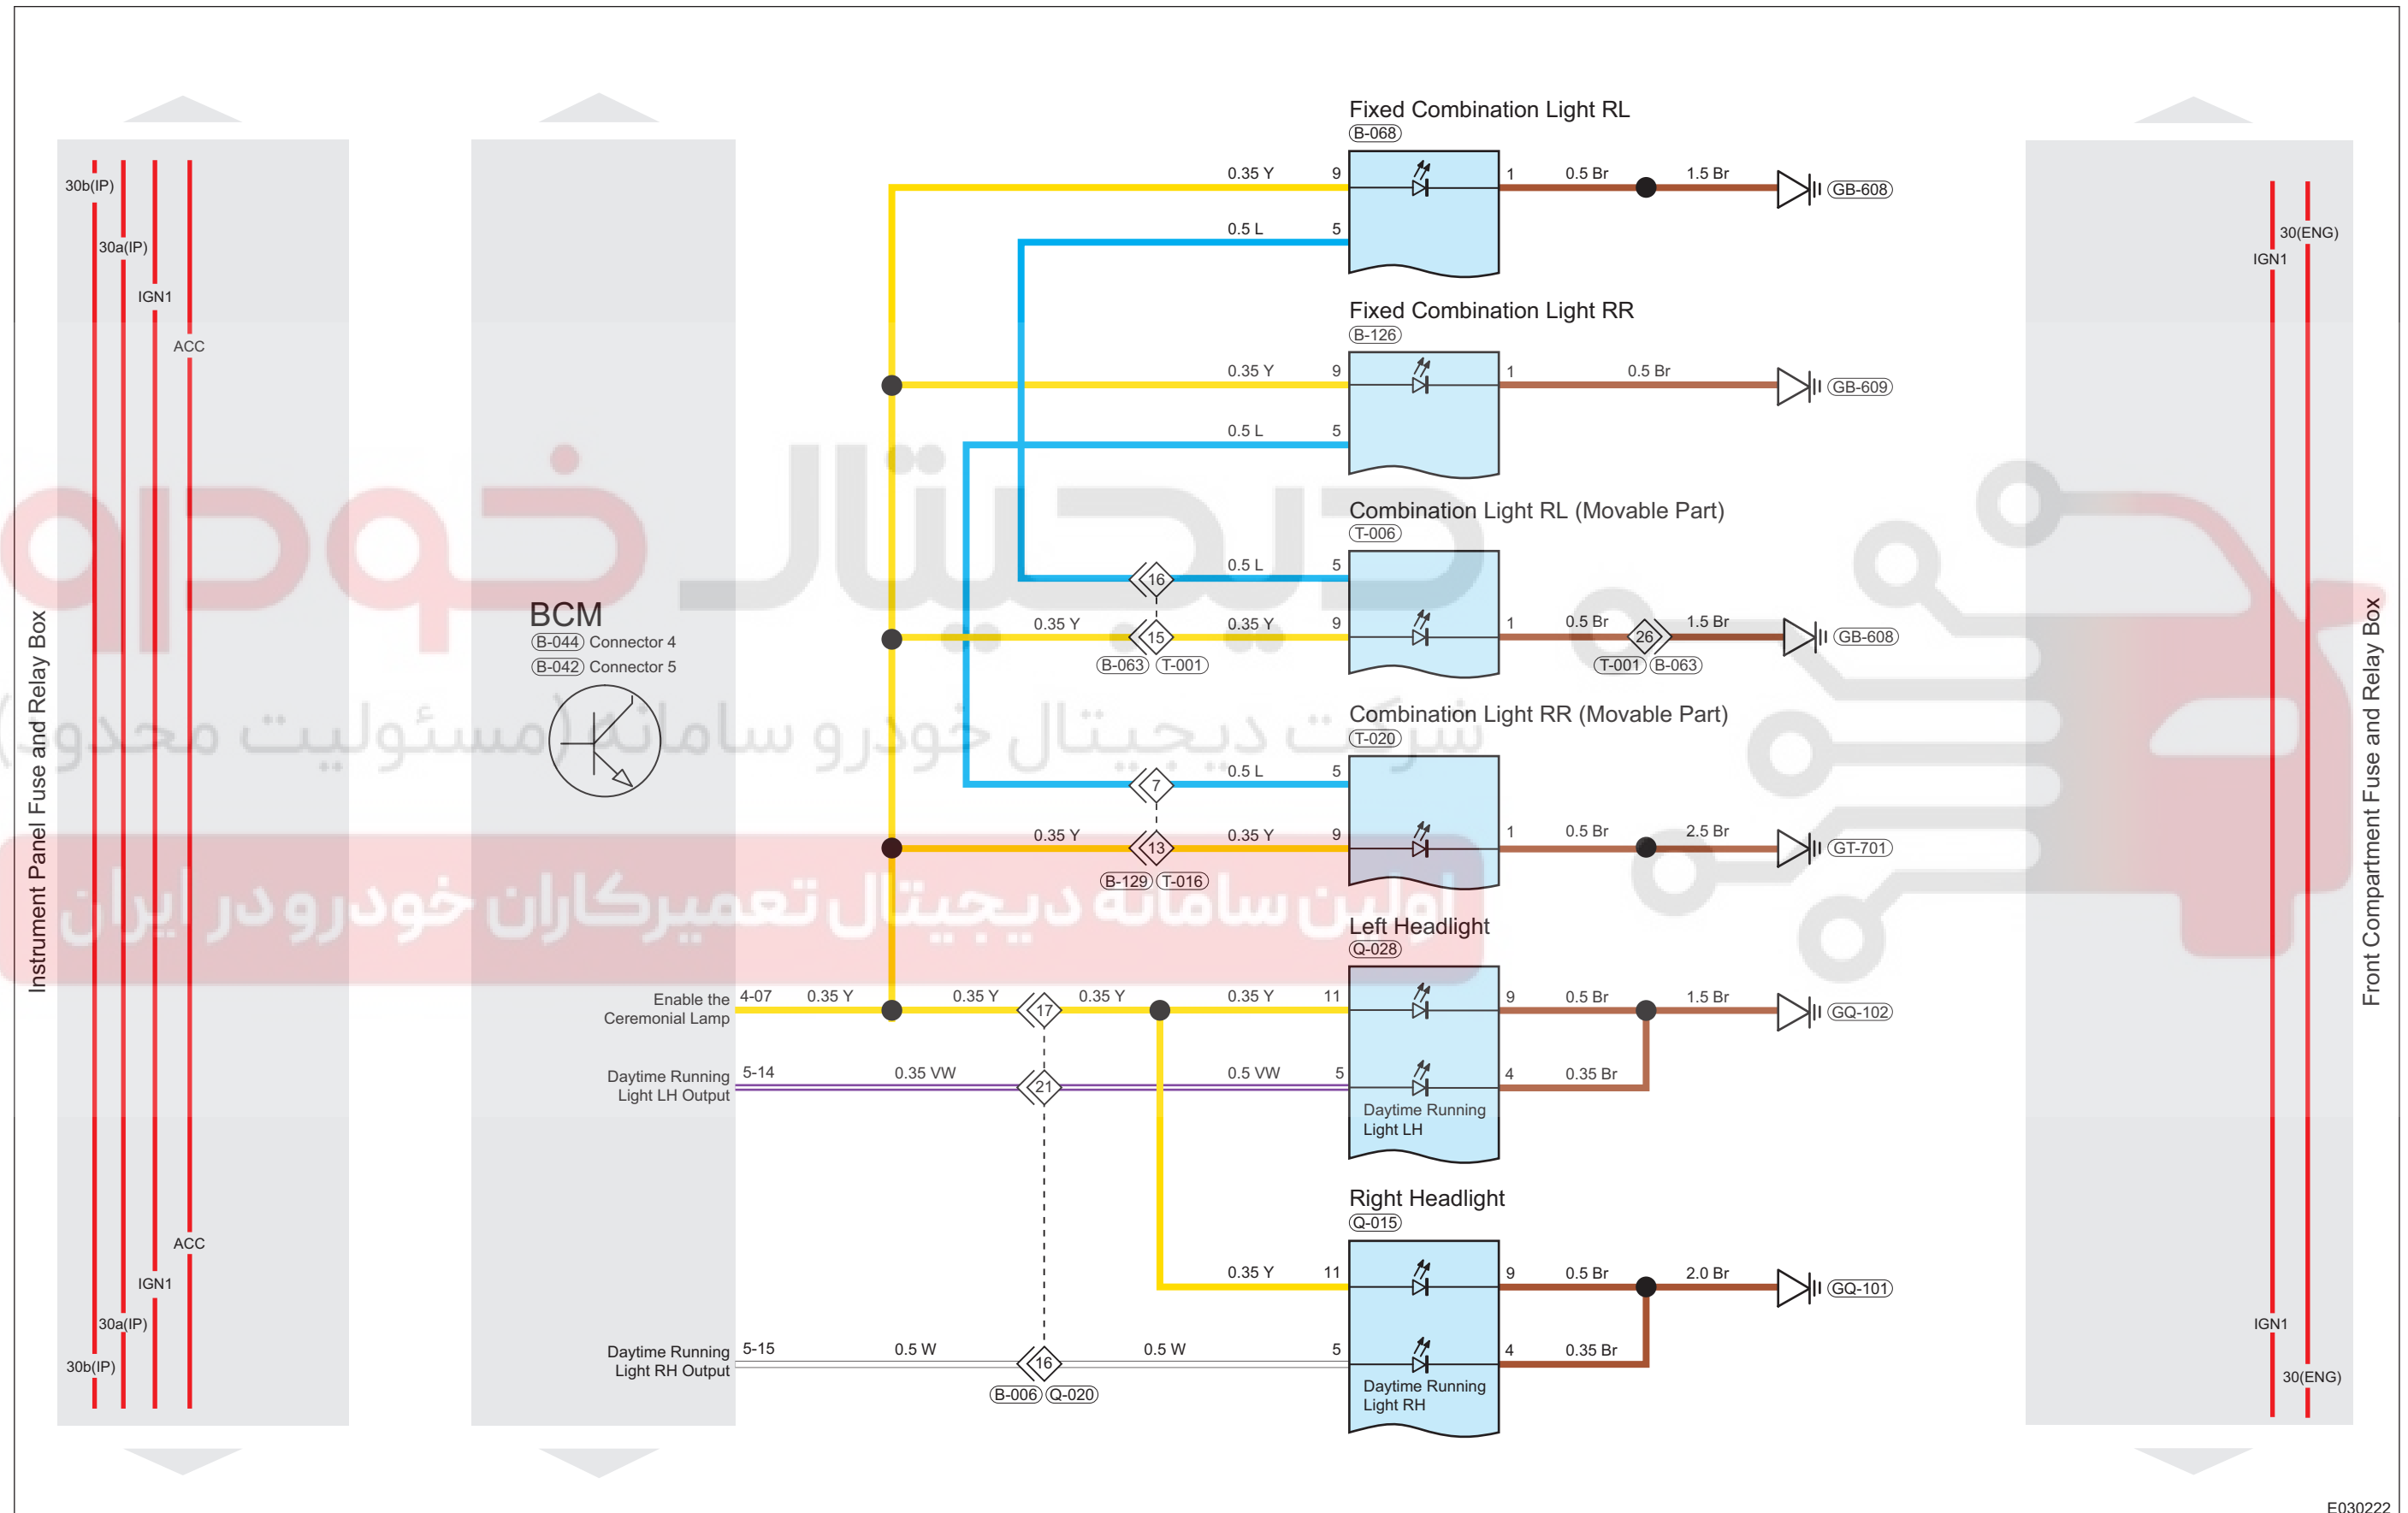

E030222


CHAPTER 3. SCHEMATIC DIAGRAM

8.9. Fog Light, Back-up Light, Anti-glare Inside Rear View Mirror

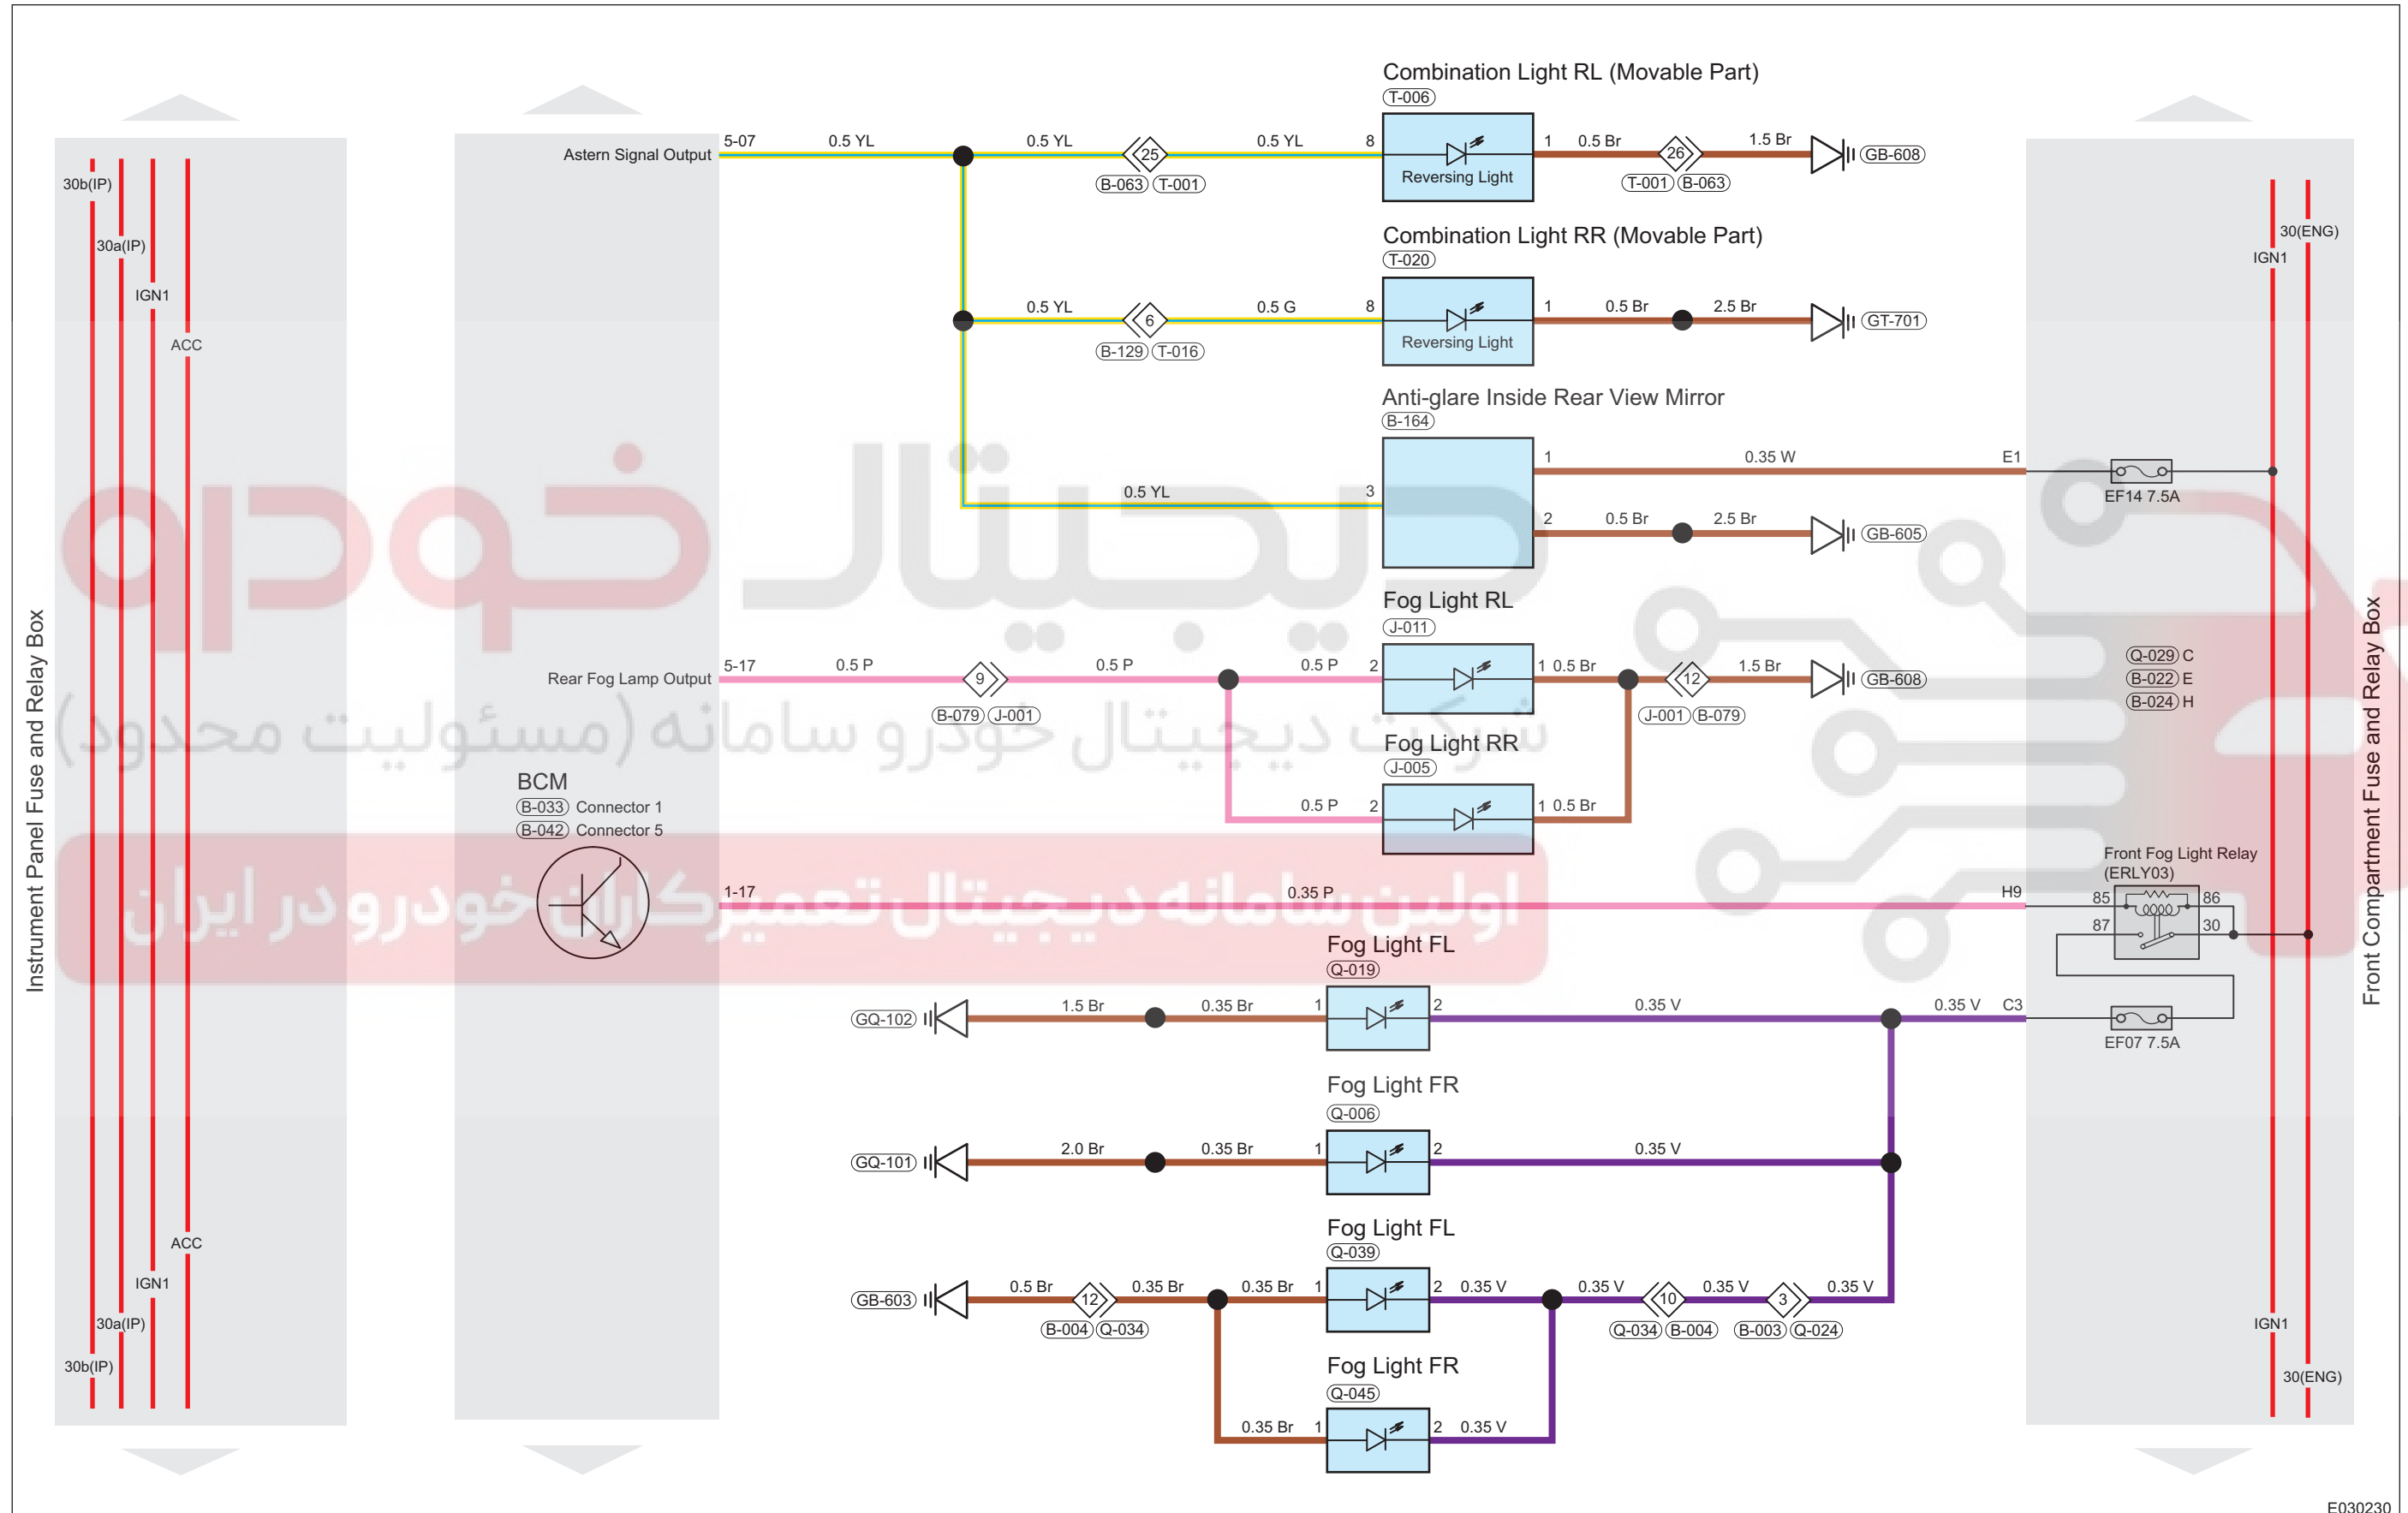


E030230

8.10. High/Low Beam Light, Headlight Adjustment Switch, Headlight Adjustment Motor

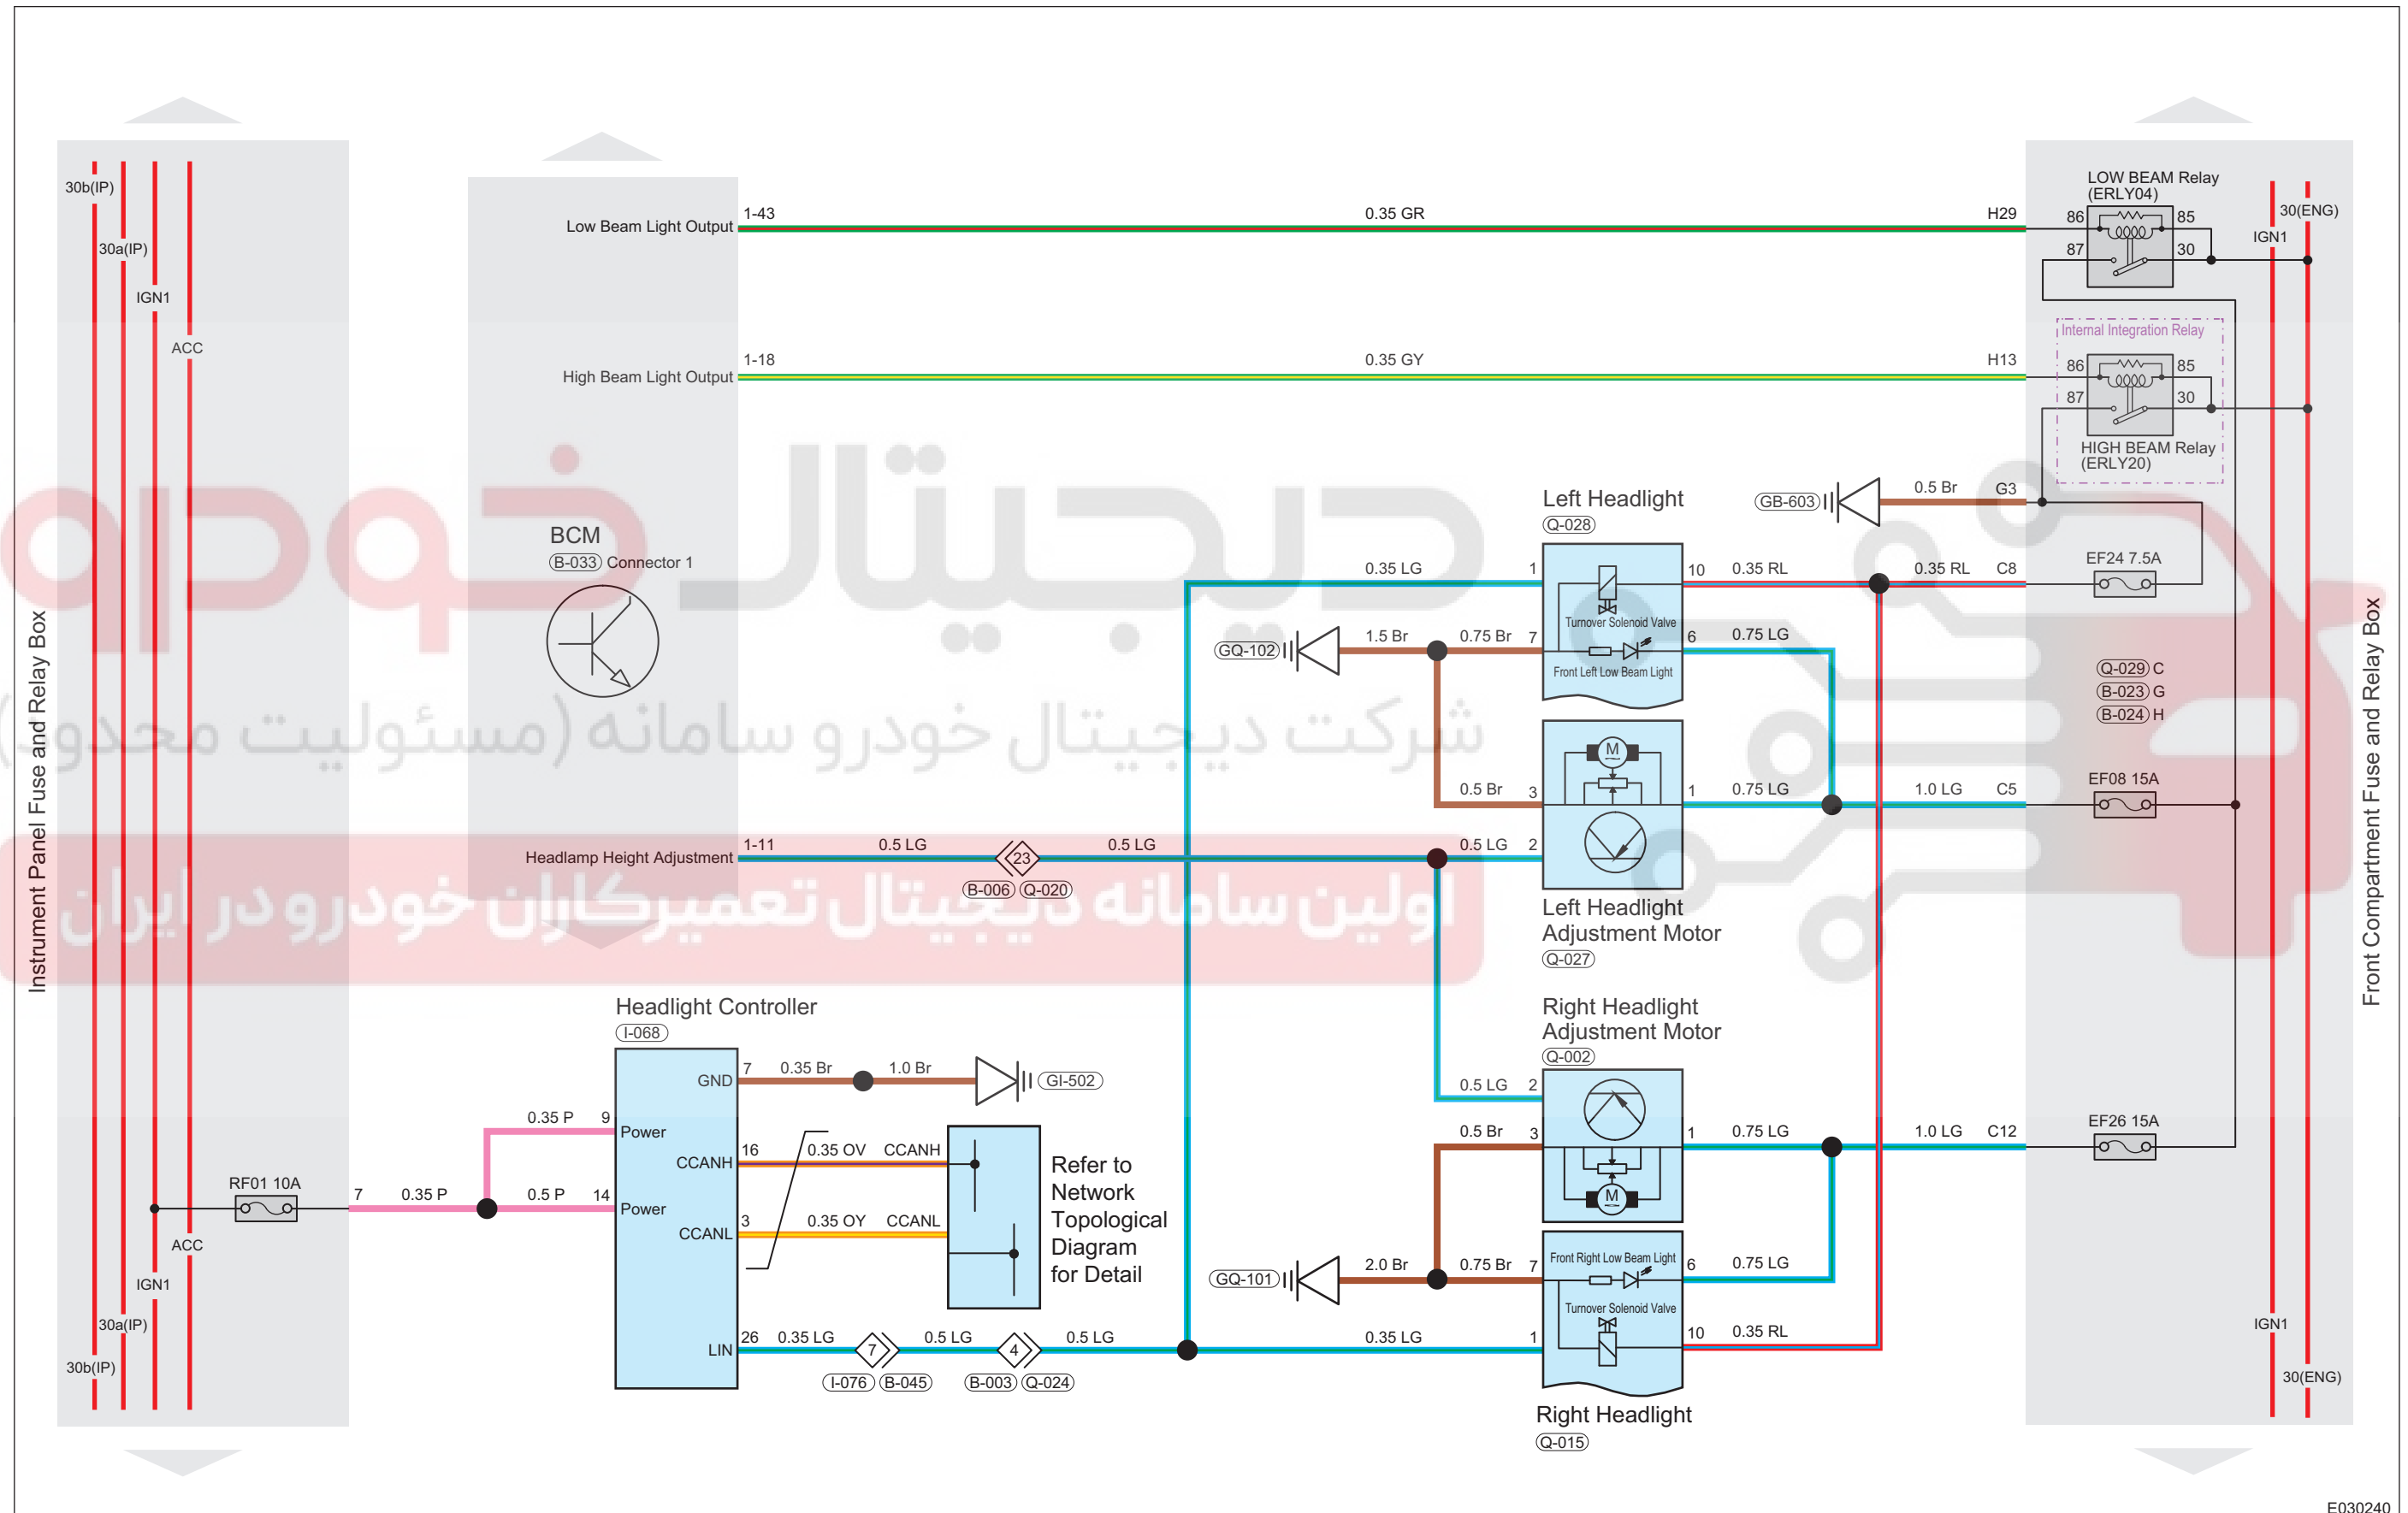


CHAPTER 3. SCHEMATIC DIAGRAM

8.11. Ground Light, Vanity Mirror Light, Door Scuff Plate Light

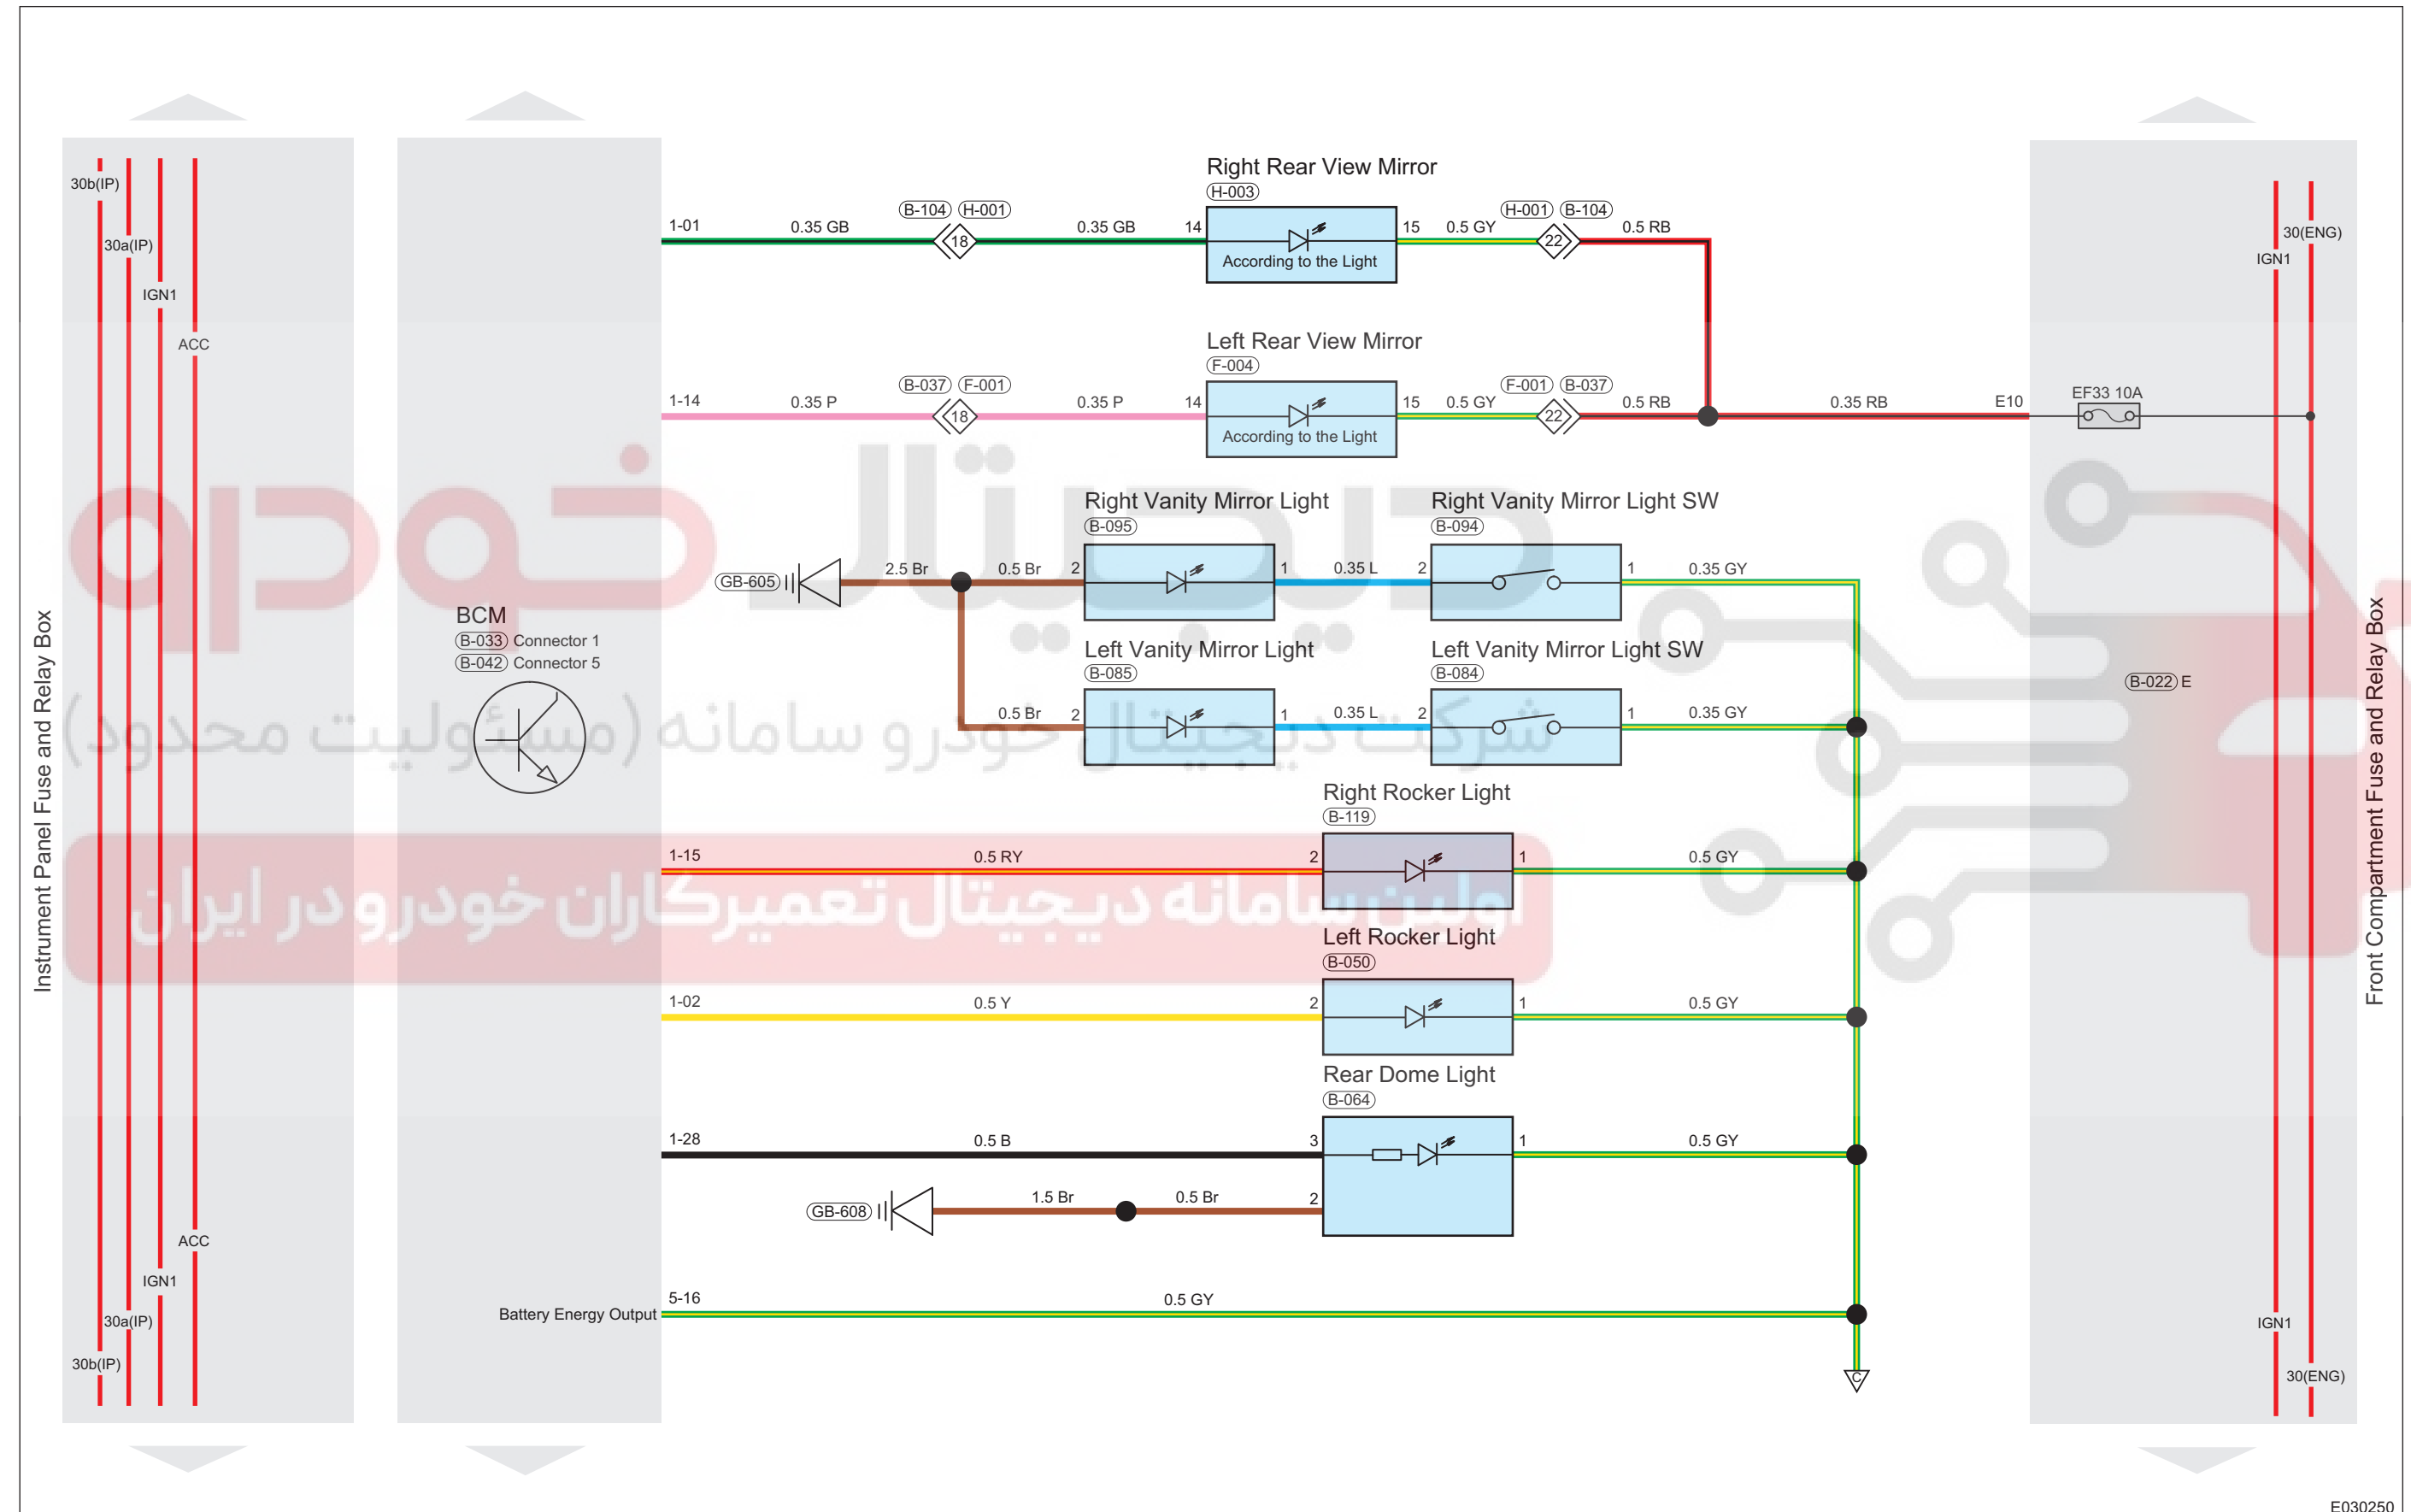

E030250


8.12. Light Switch, Wiper Switch

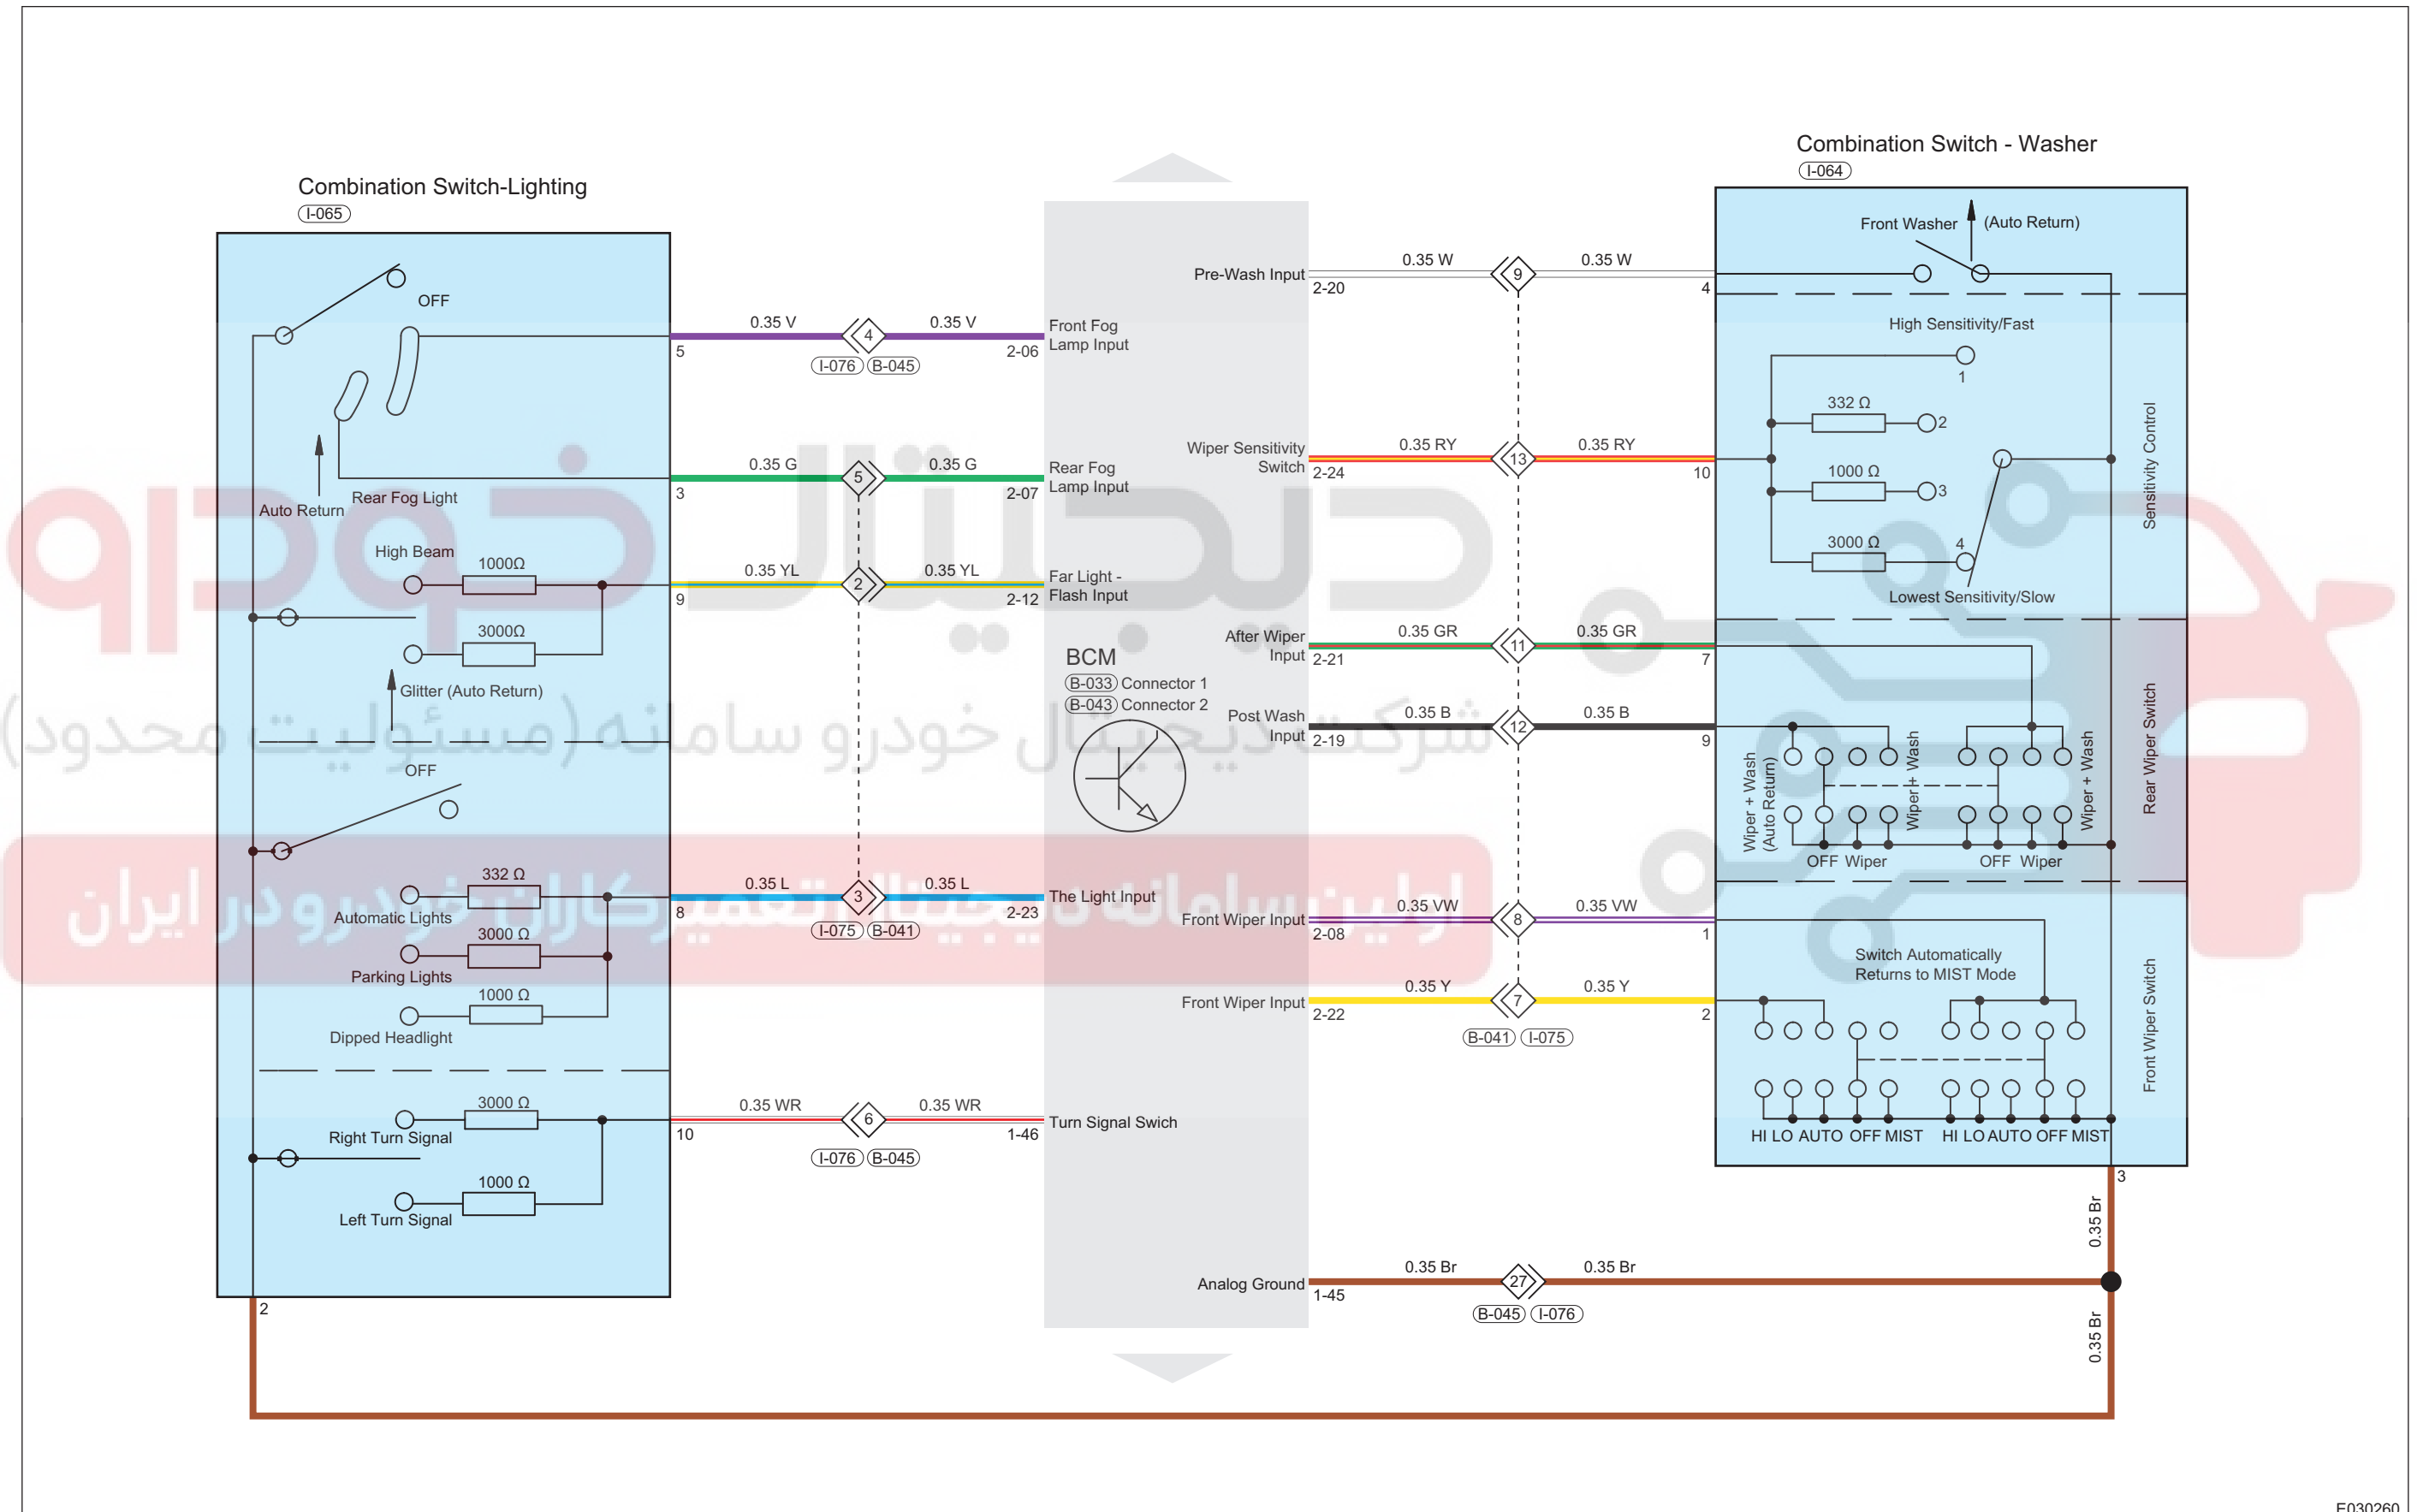


E030260

CHAPTER 3. SCHEMATIC DIAGRAM

8.13. Wiper System, Solar Sensor, Dome Light

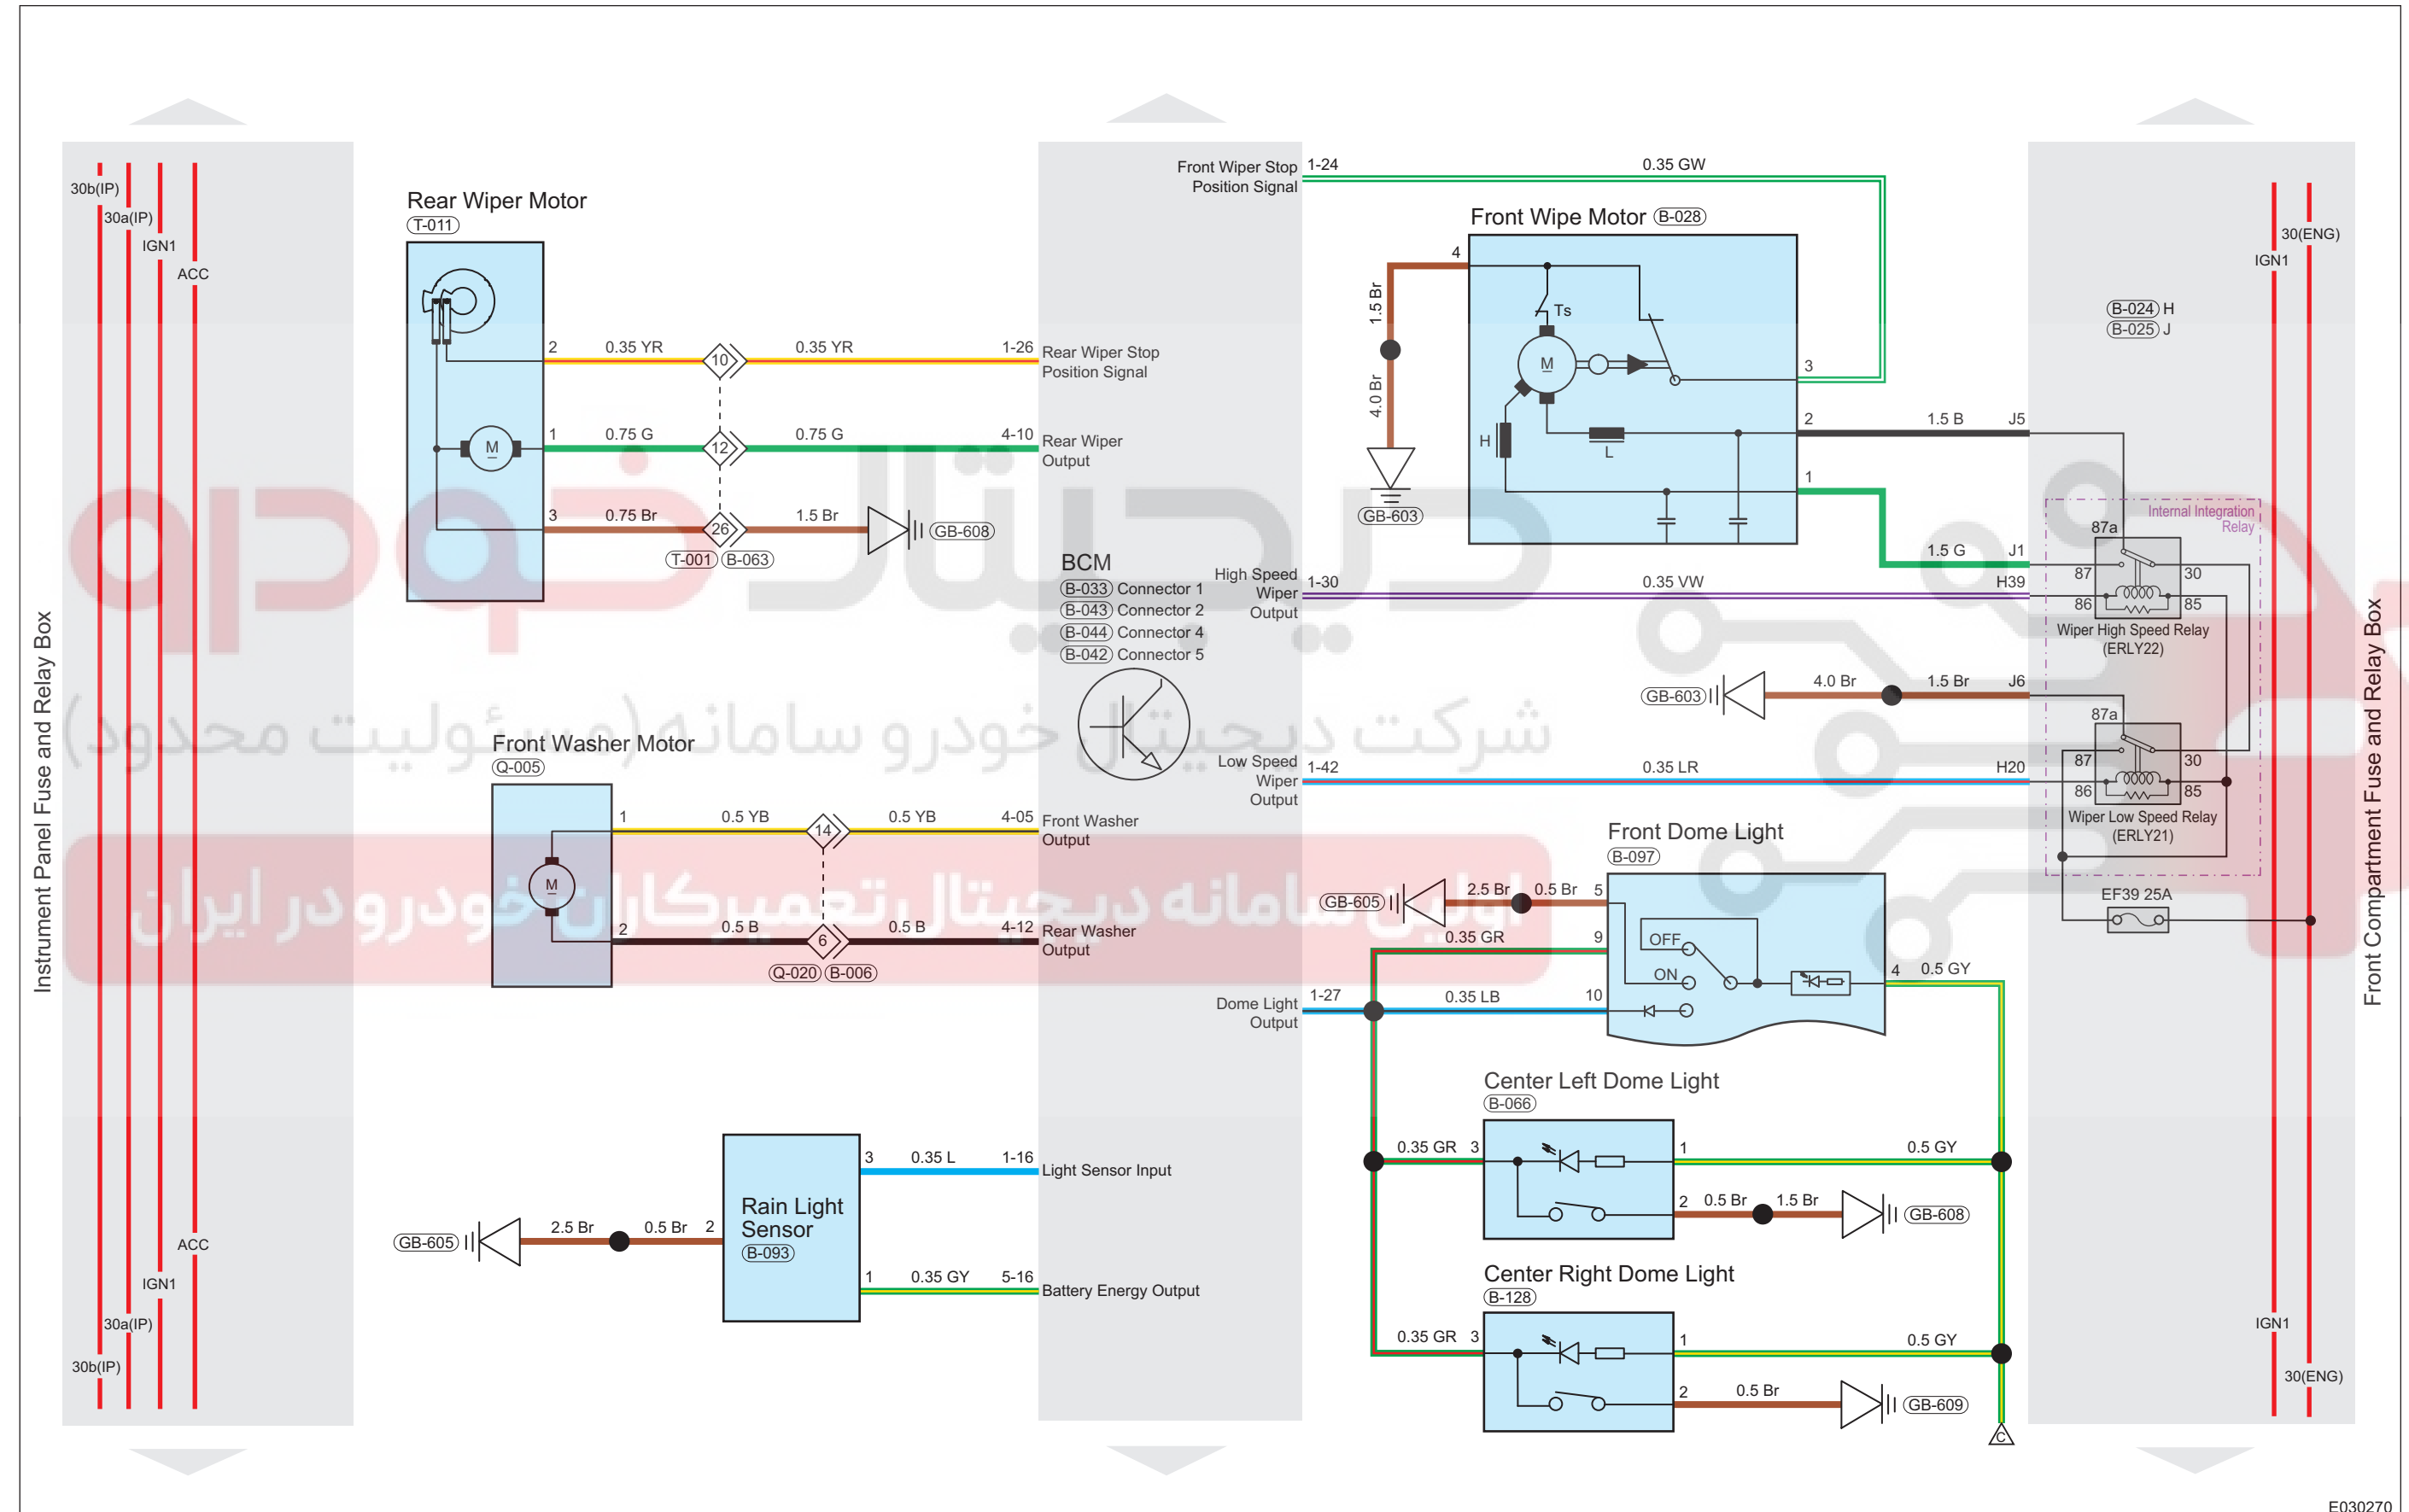


E030270

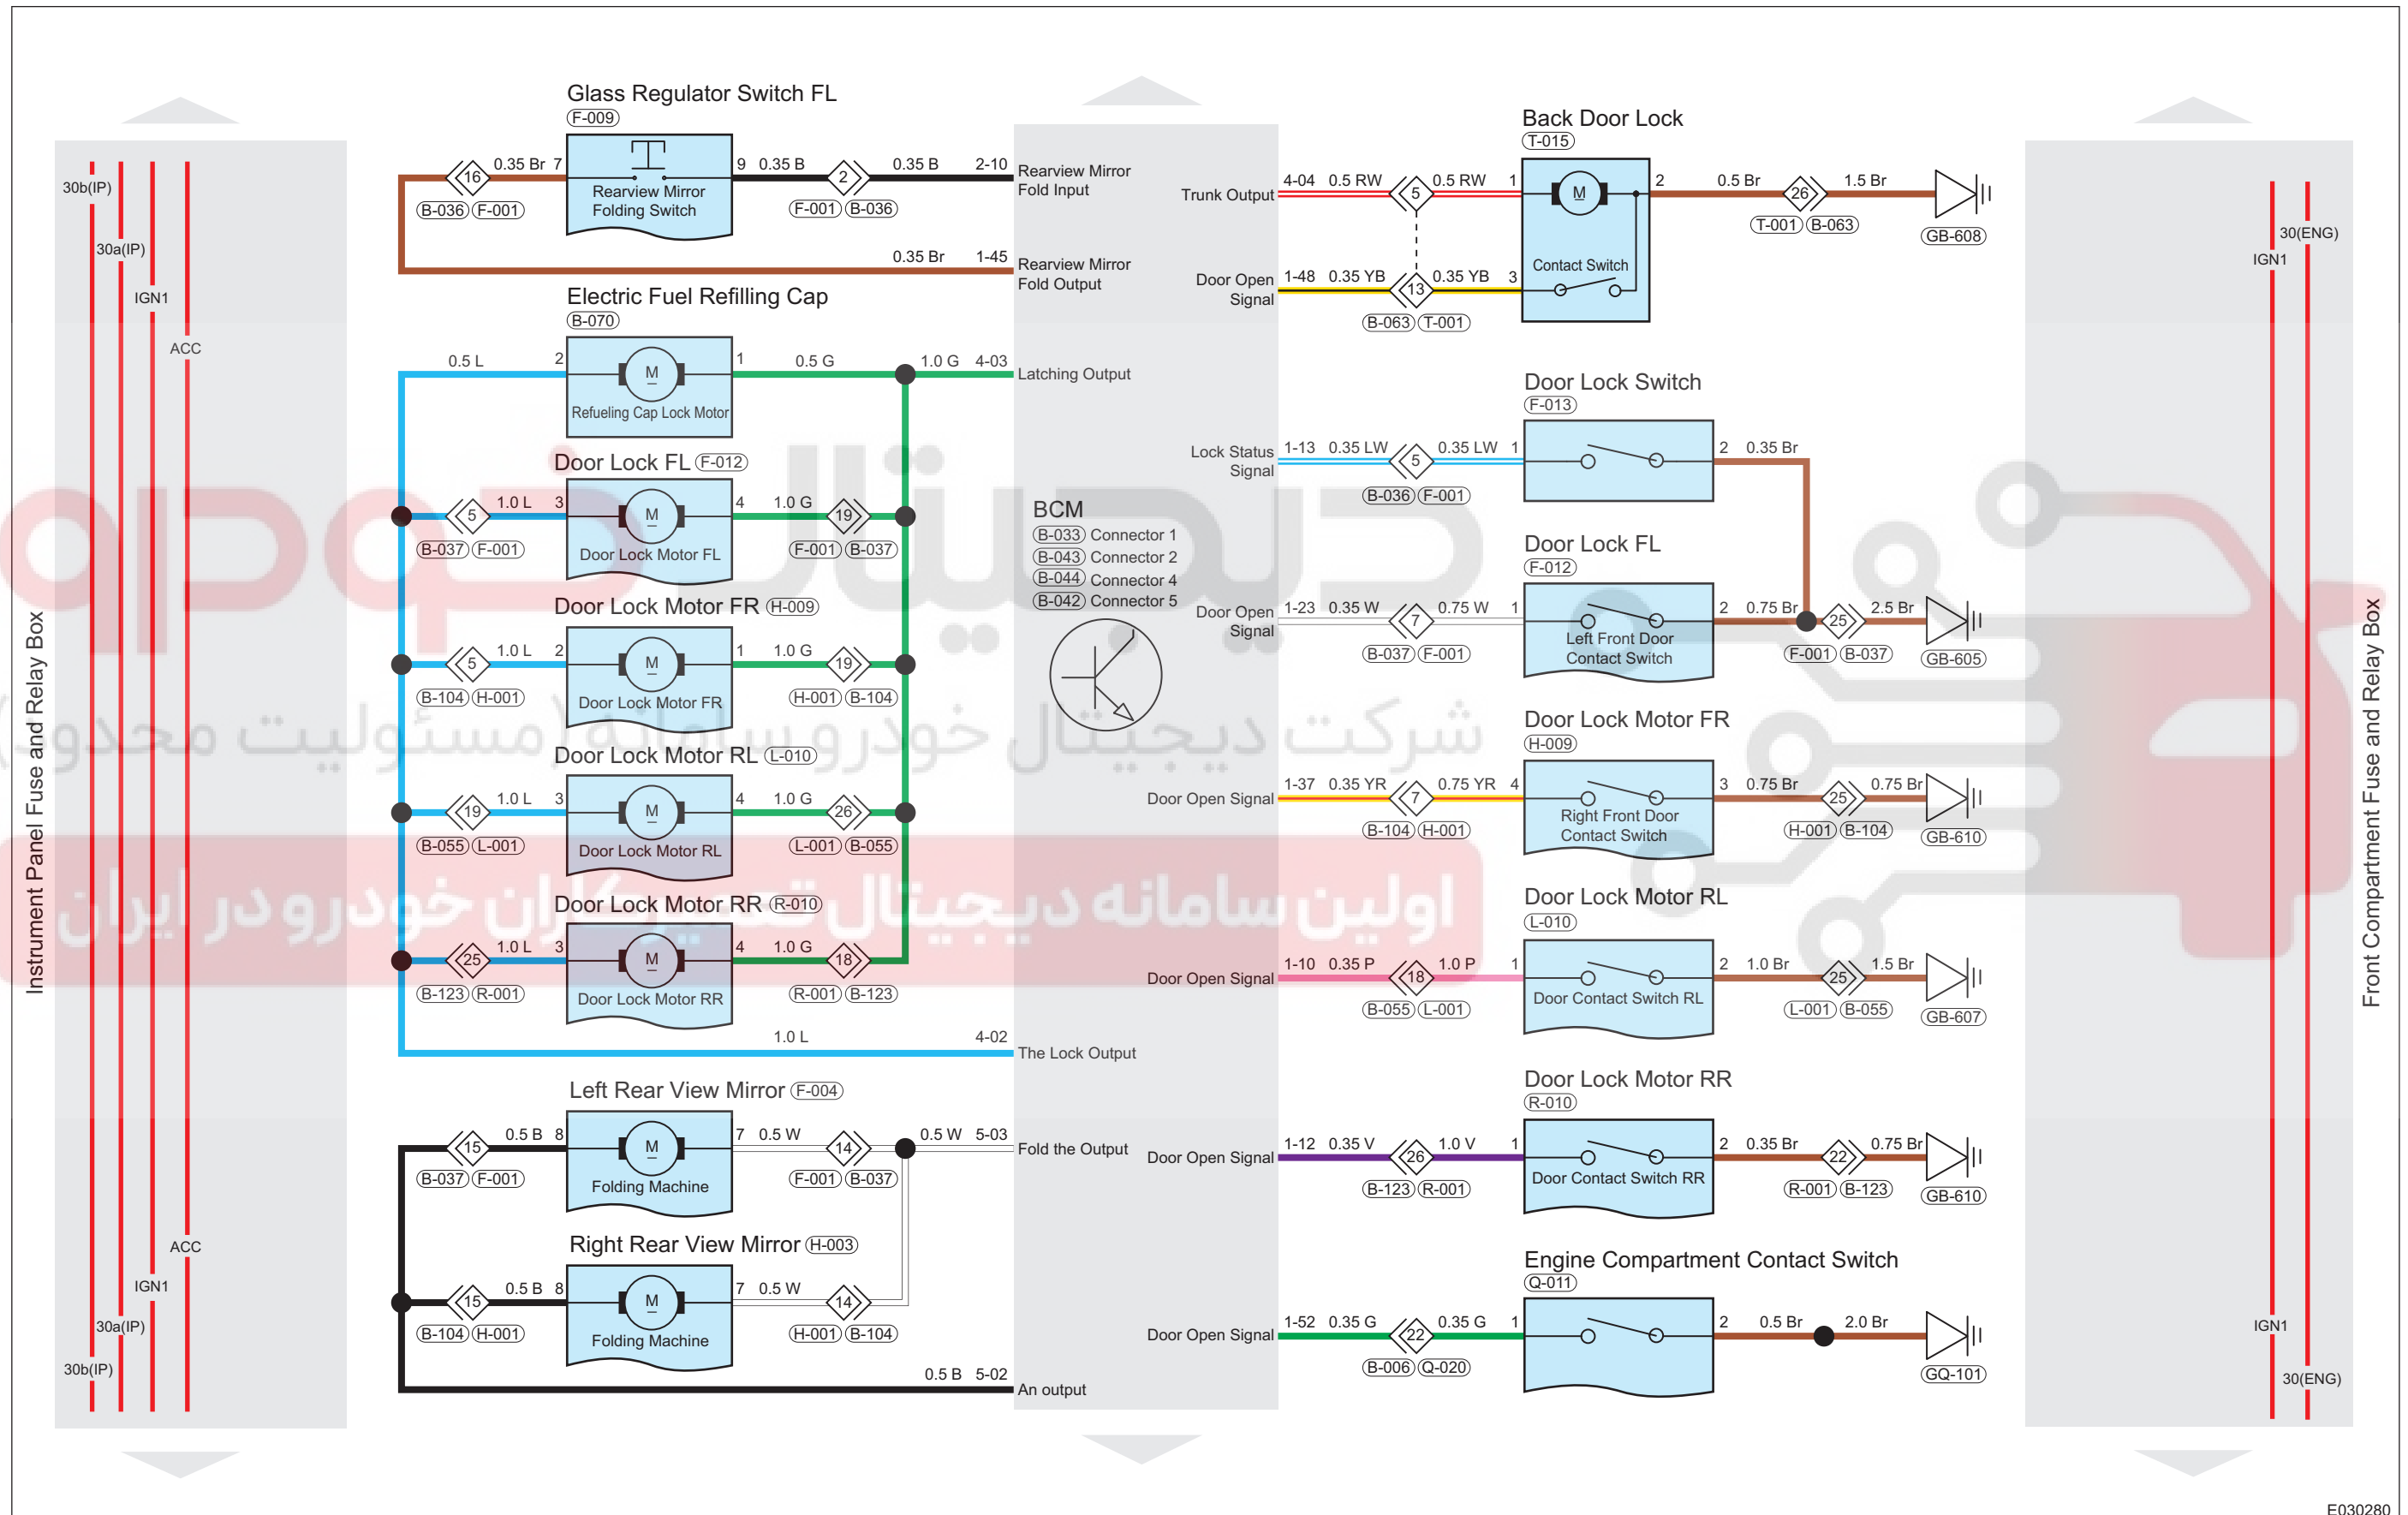

CHAPTER 3. SCHEMATIC DIAGRAM


8.15. 4-Door Glass Regulator Switch

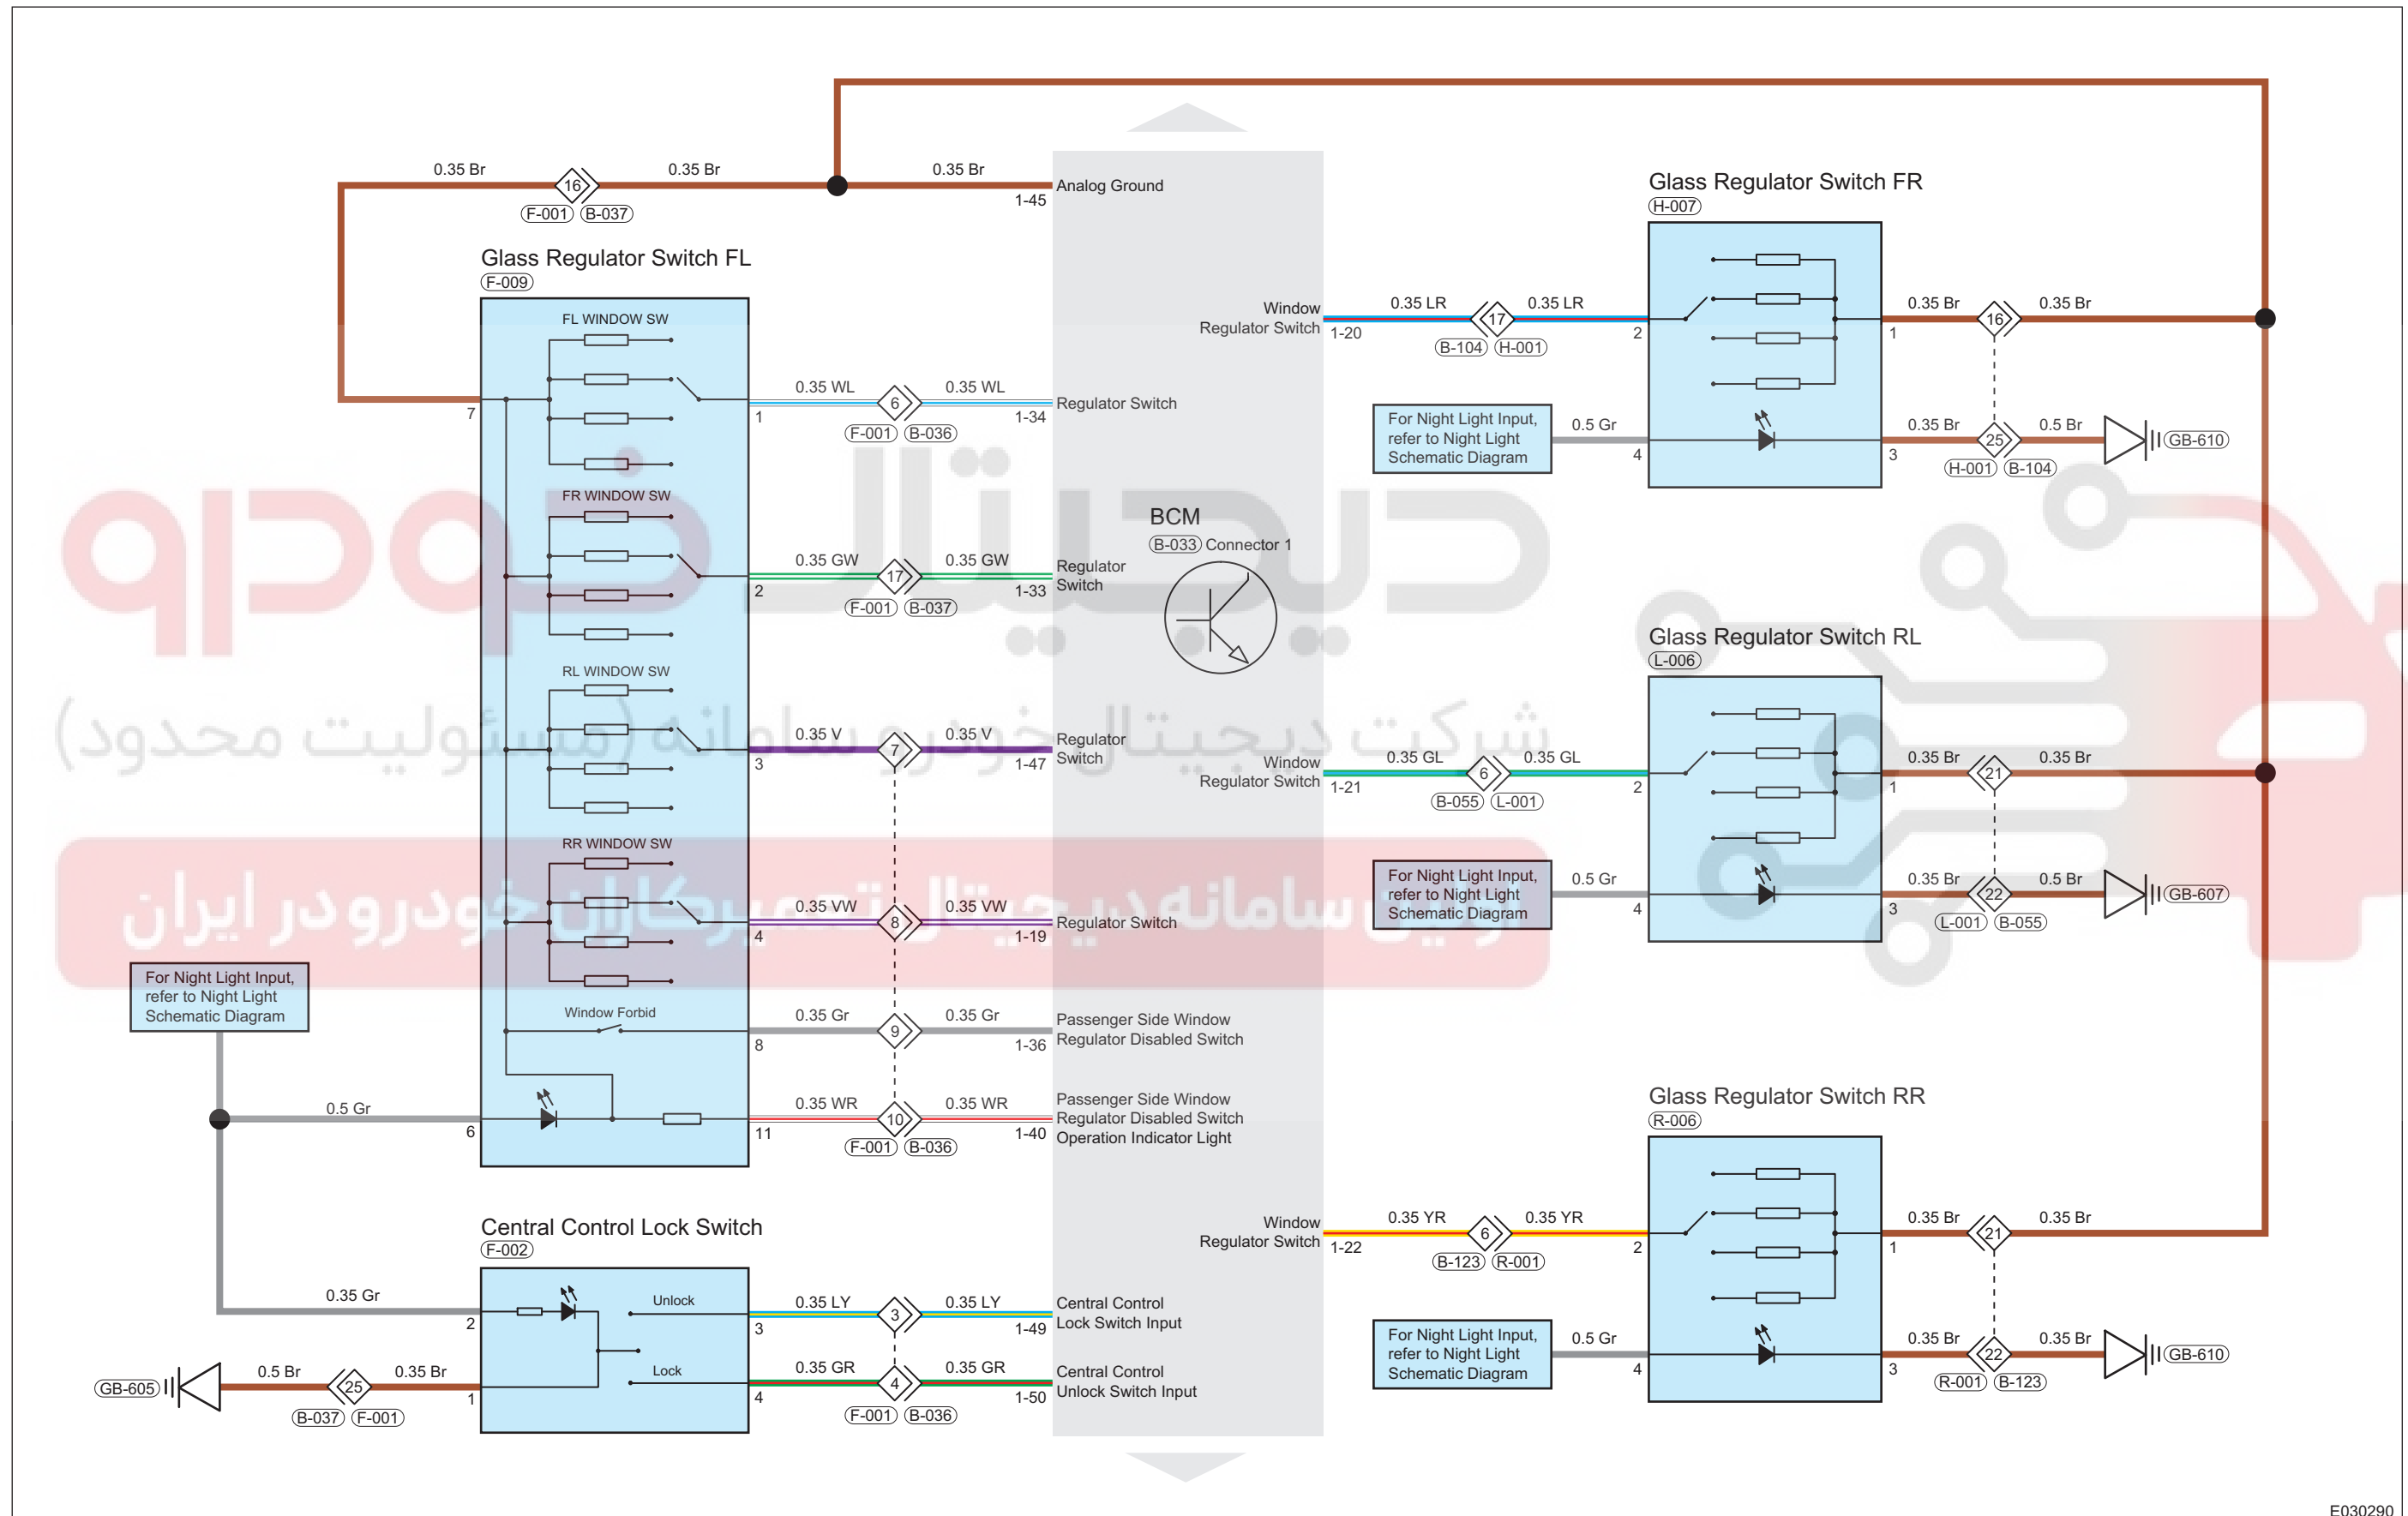

E030290

CHAPTER 3. SCHEMATIC DIAGRAM


8.16. 4-Door Glass Regulator Motor, Defrosting, Horn

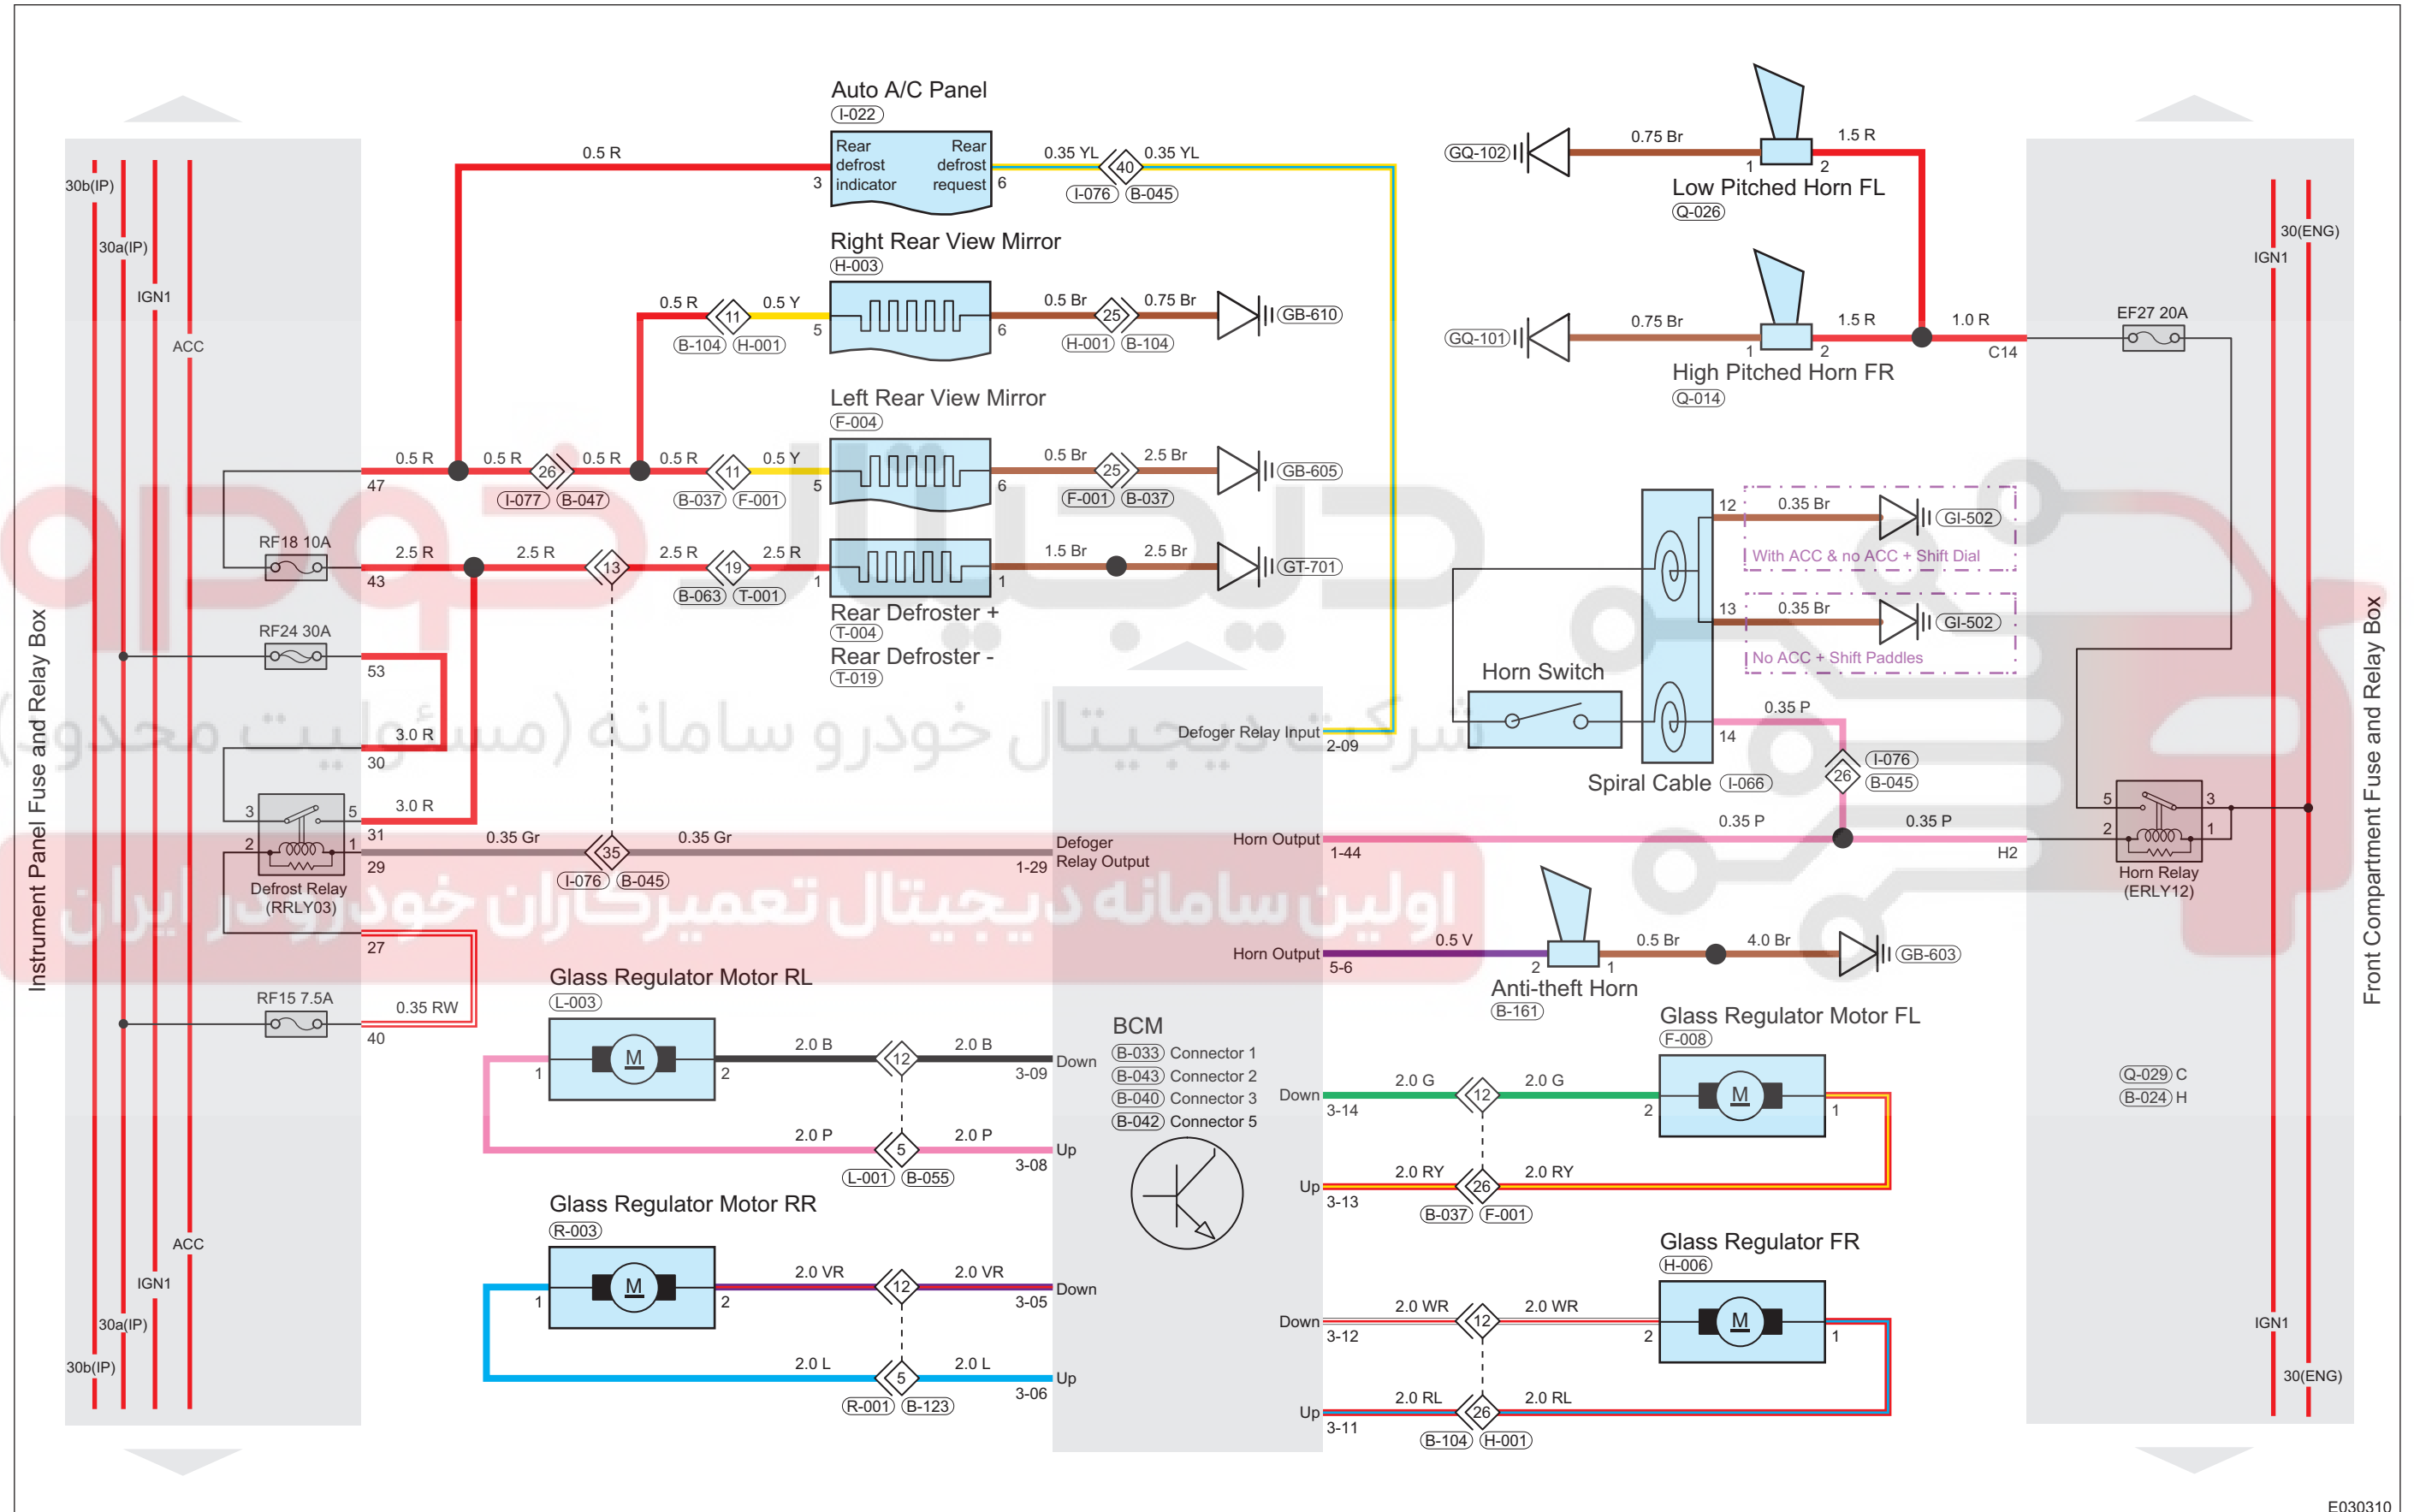

E030310


CHAPTER 3. SCHEMATIC DIAGRAM

8.17. Windshield Heating, Nozzle Heating, Steering Wheel Heating

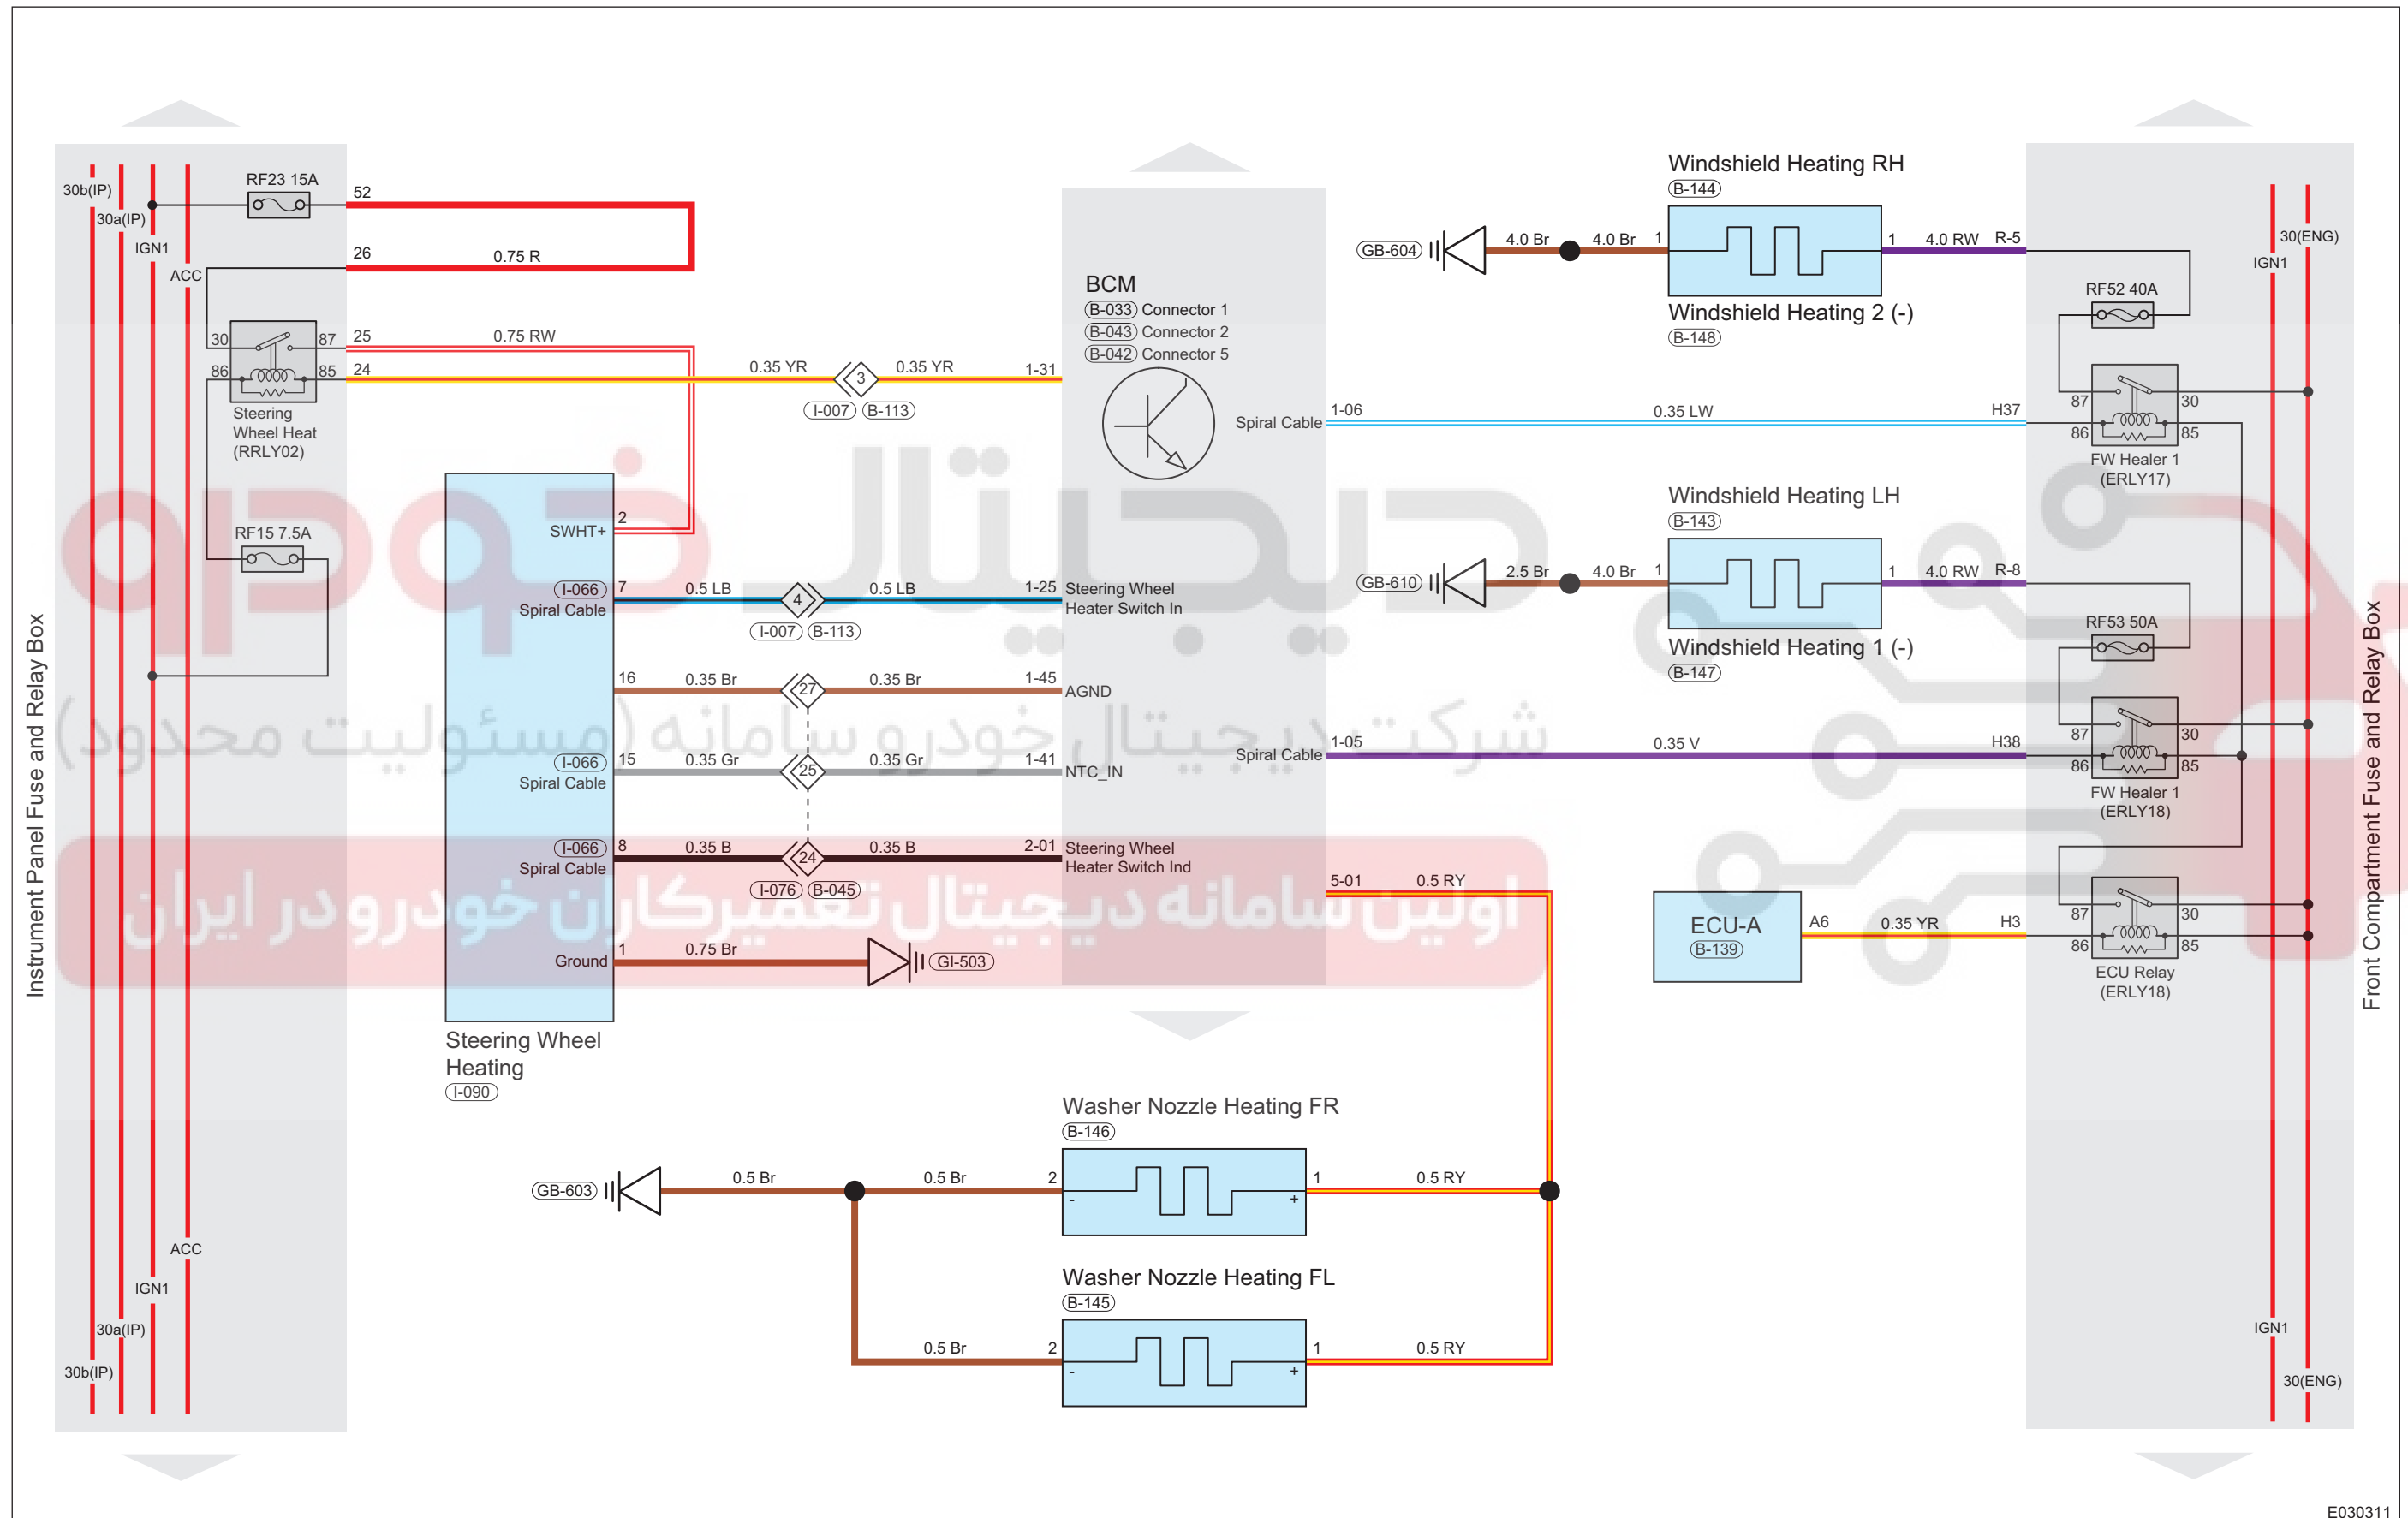

E030311

8.18. Jam Protection Module

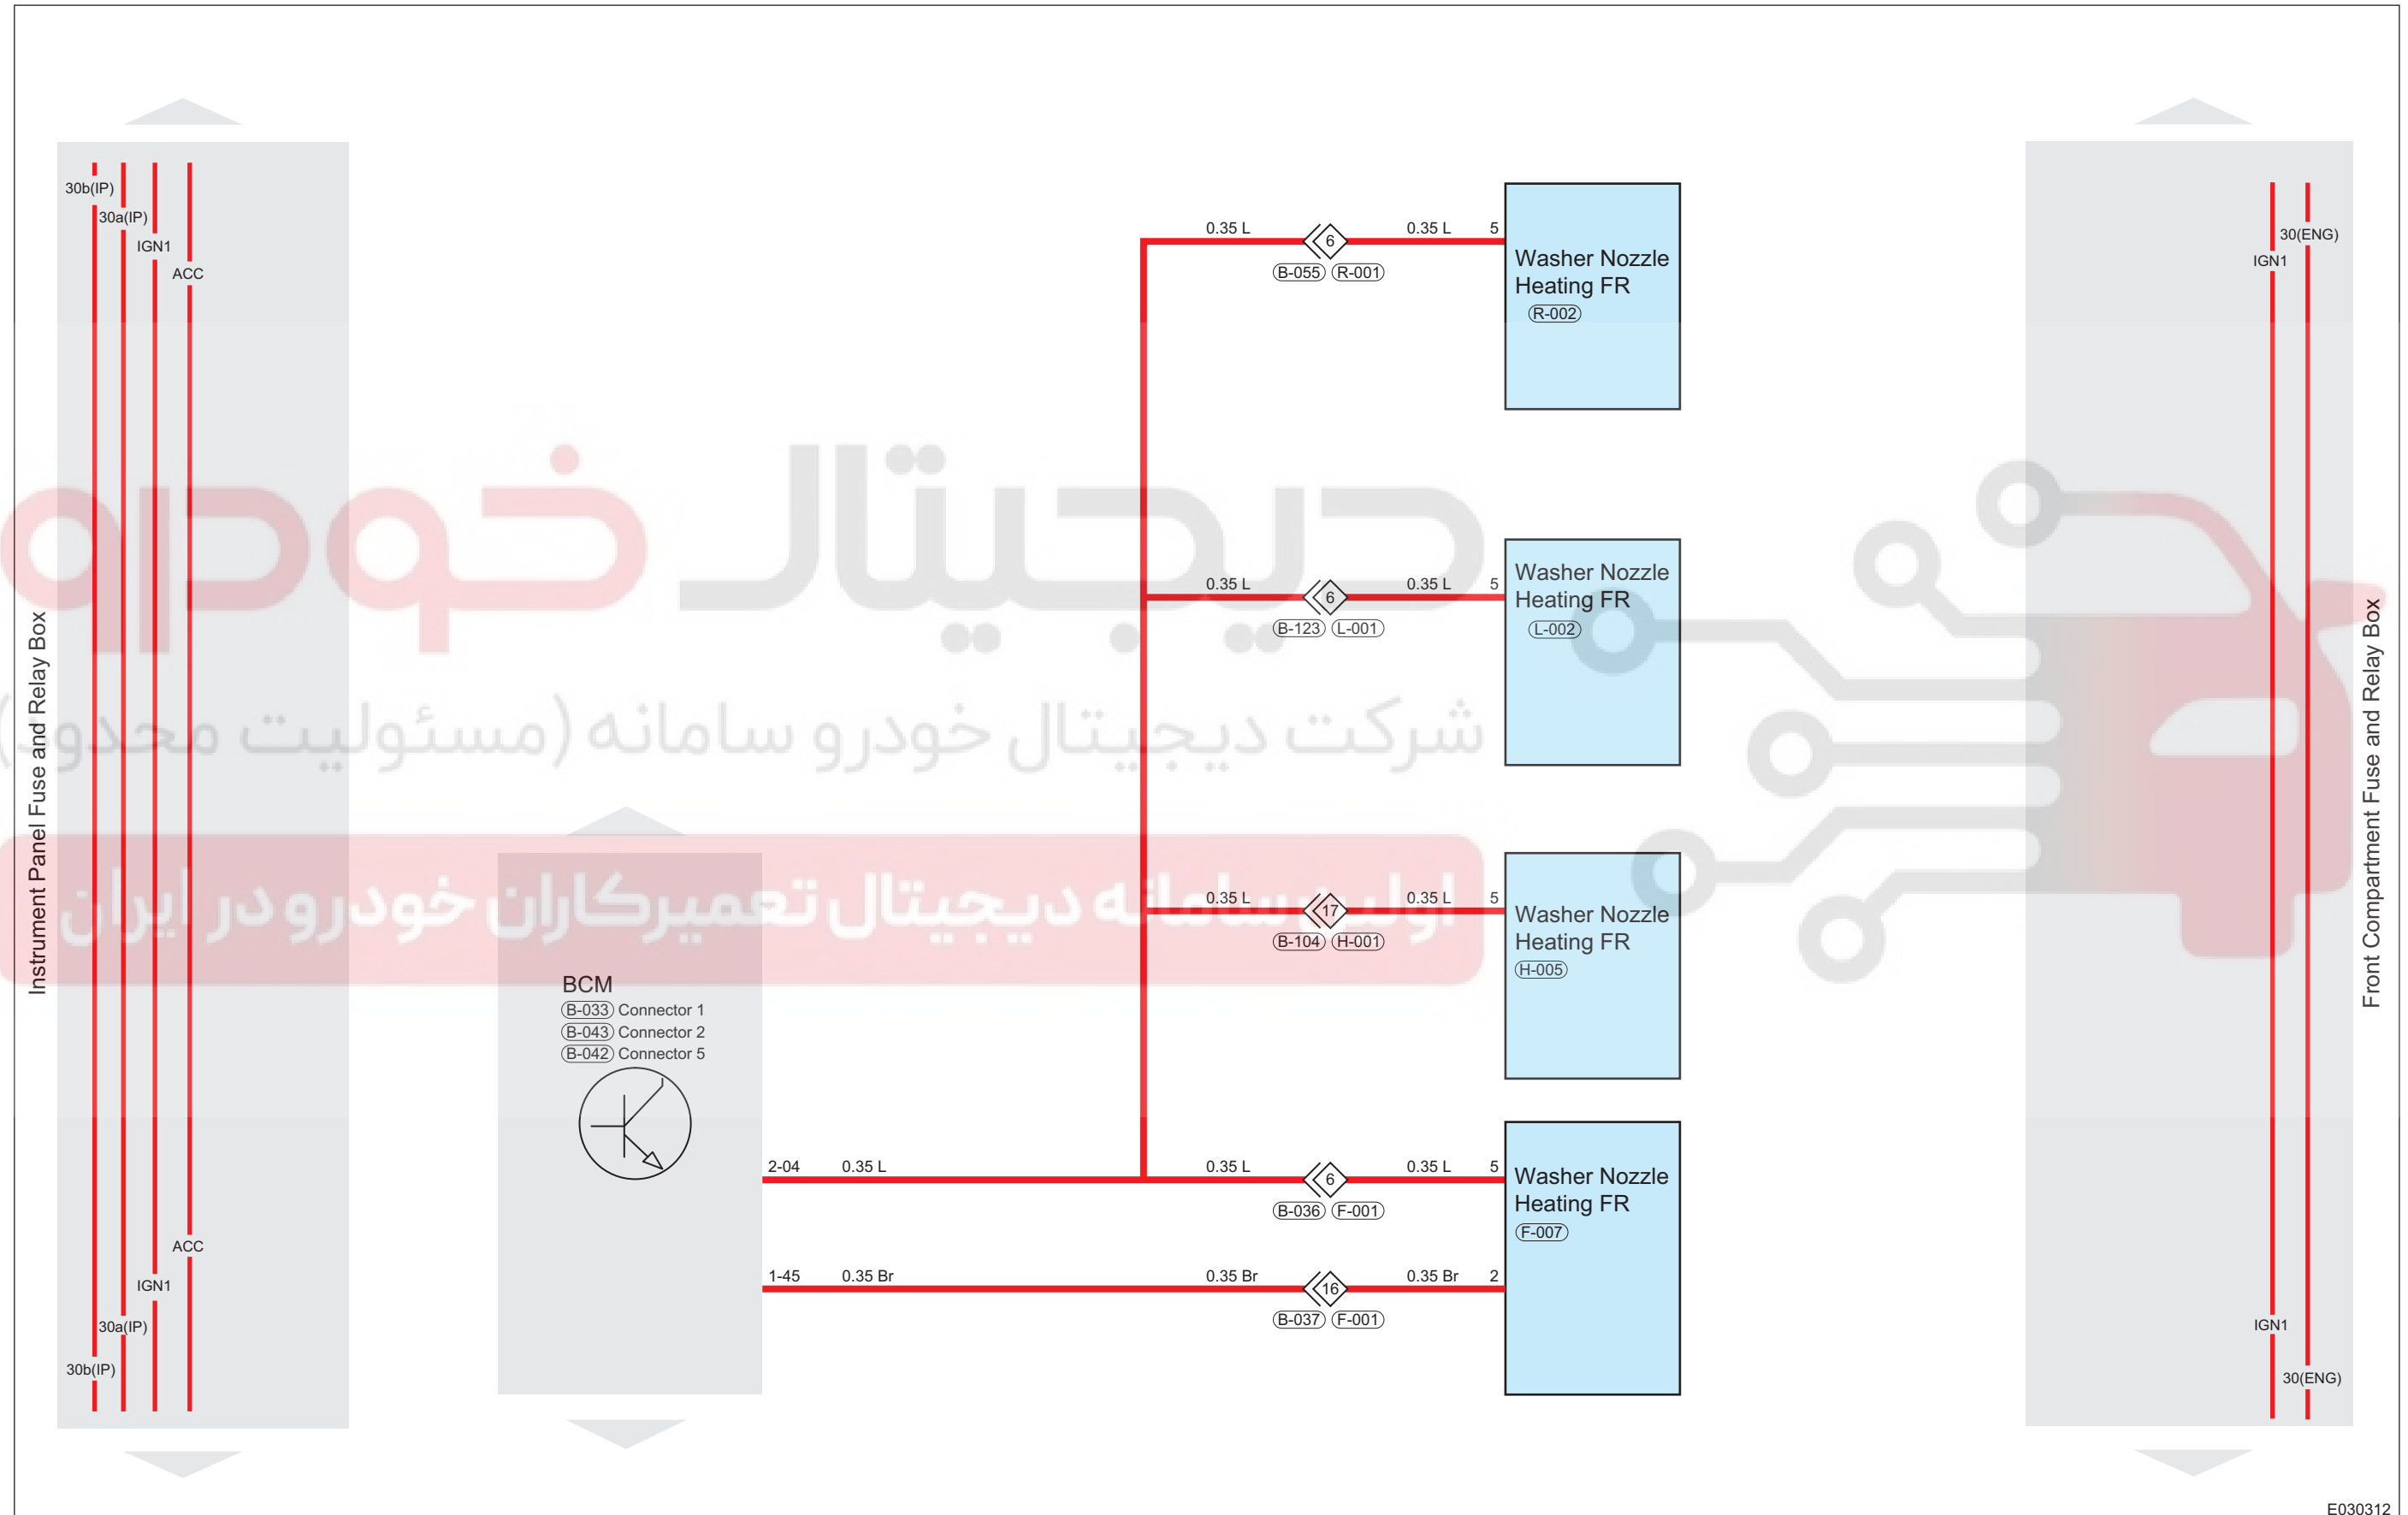

E030312