



Start System

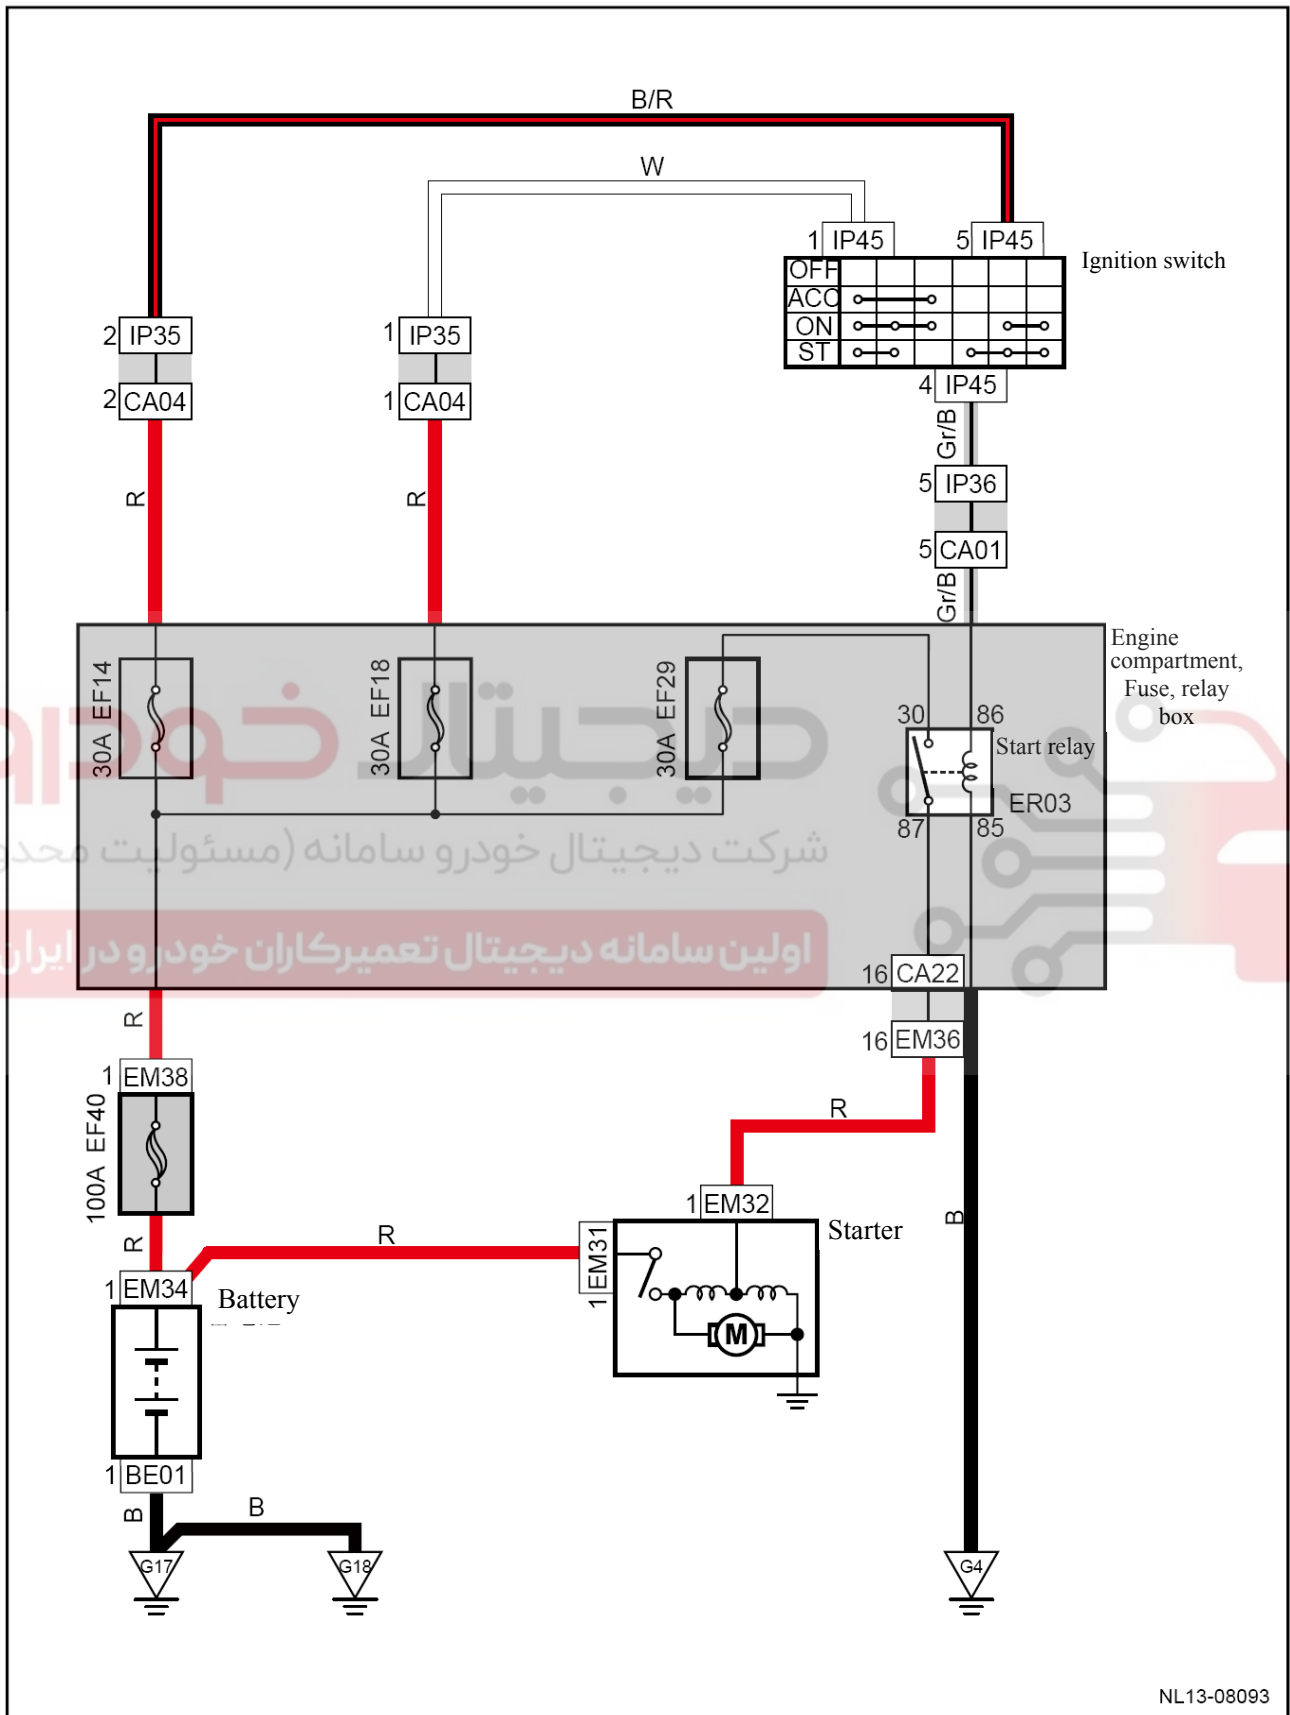

Starting system (DSI)

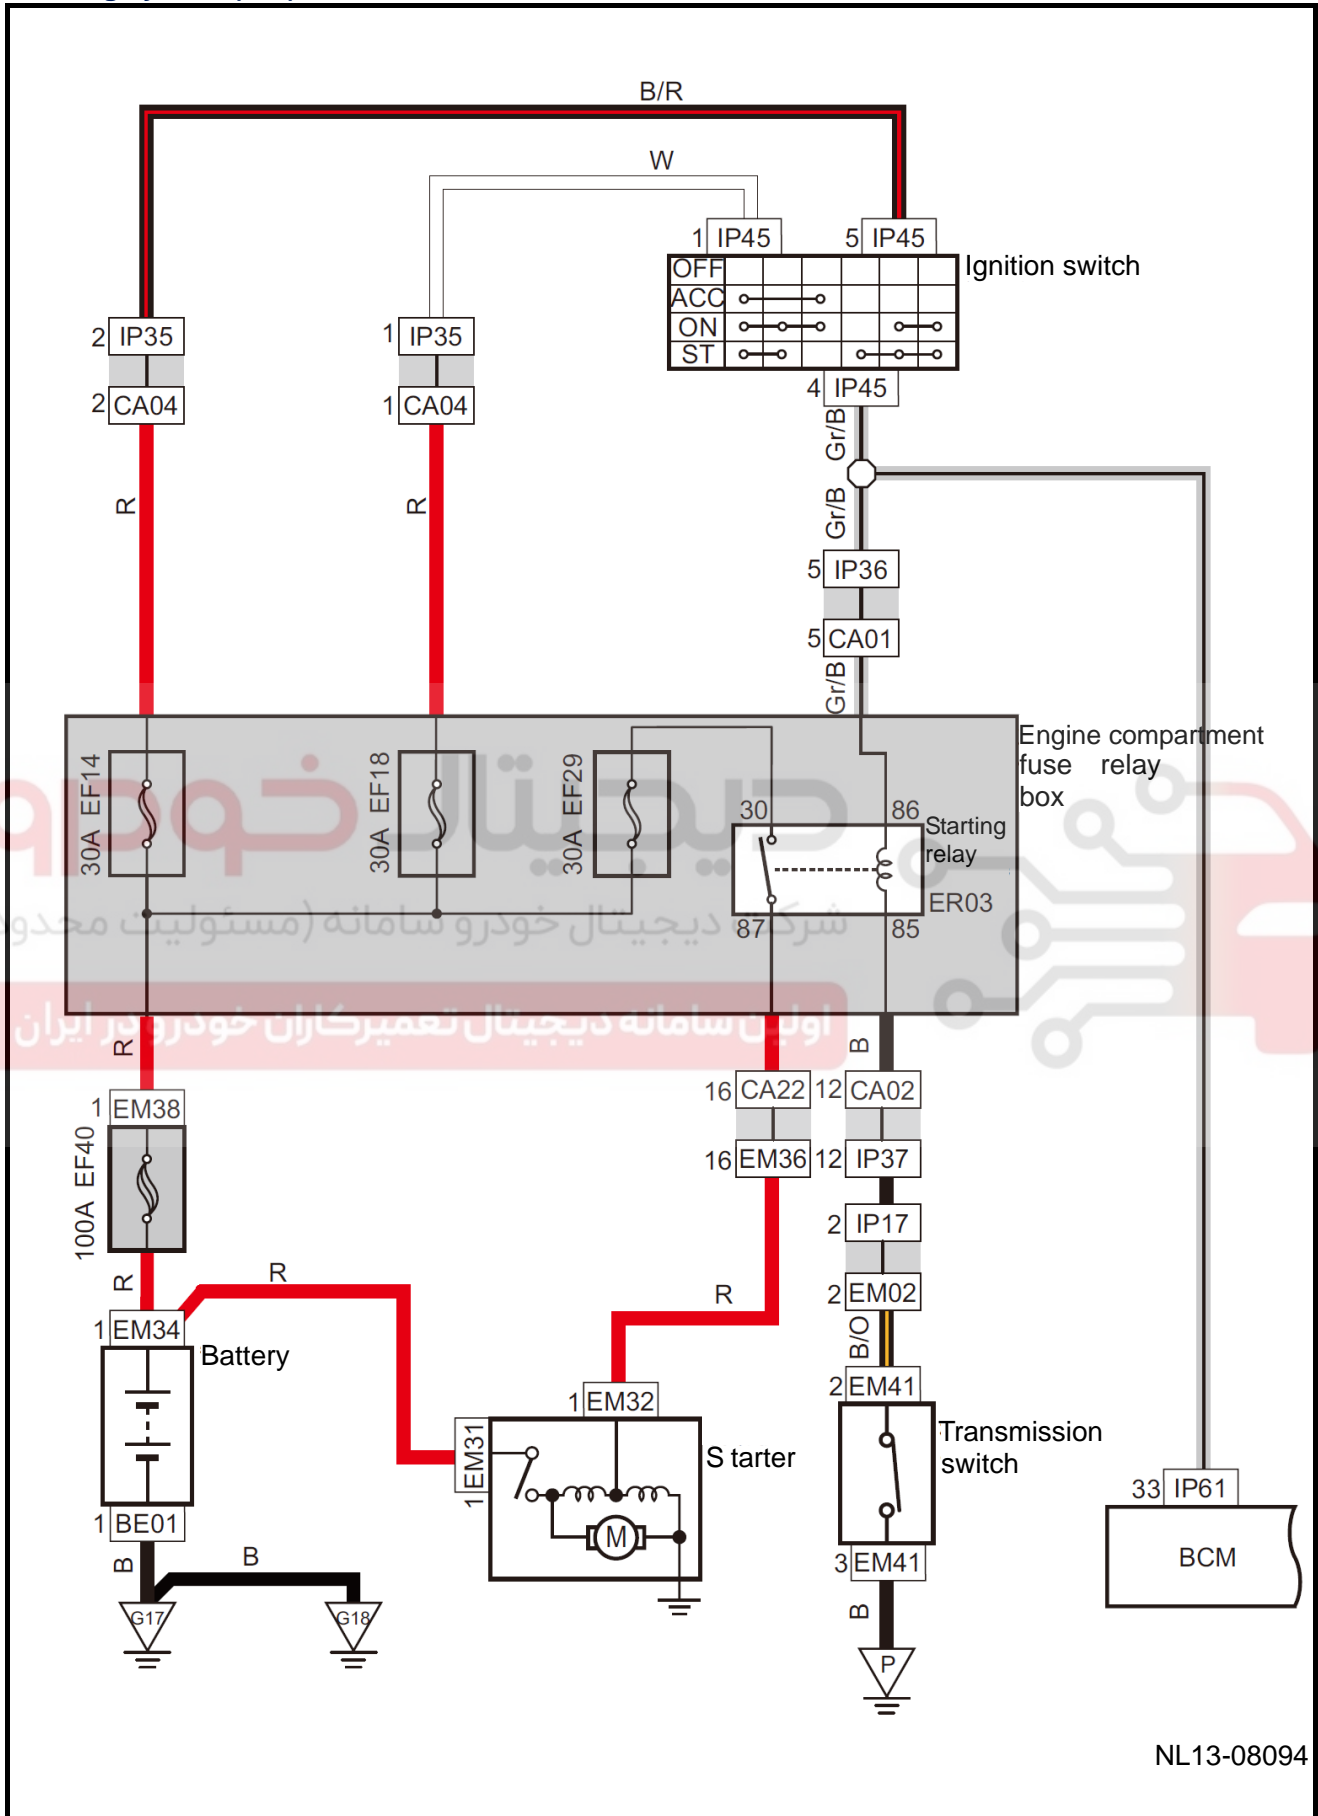

Harness connector	Description	Pages
BE01	To battery negative	27
CA01	To instrument harness connector 1	31
CA04	To instrument harness connector 4	31
CA22	To engine harness connector	31
CA02	To instrument harness connector 2	31
EM02	To instrument harness connector	37
EM32	Harness connector of starter solenoid switch	37
EM31	Harness connector of starter	37
EM36	To harness connector of engine compartment distribution box	37
EM34	Battery fuse box (connecting wire plate2)	37
EM38	Battery fuse box	37
IP36	To engine compartment harness connector 2	43
IP45	Harness connector of ignition switch	43
IP37	To engine compartment harness connector 3	43
IP17	To engine harness connector	43
G6	Instrument panel grounding	72
G17	Battery grounding	71
G18	Battery grounding	71
P	Engine grounding	70