



## Instrument Panel Relay Box

### 1. Position of Instrument Panel Fuse and Relay Box

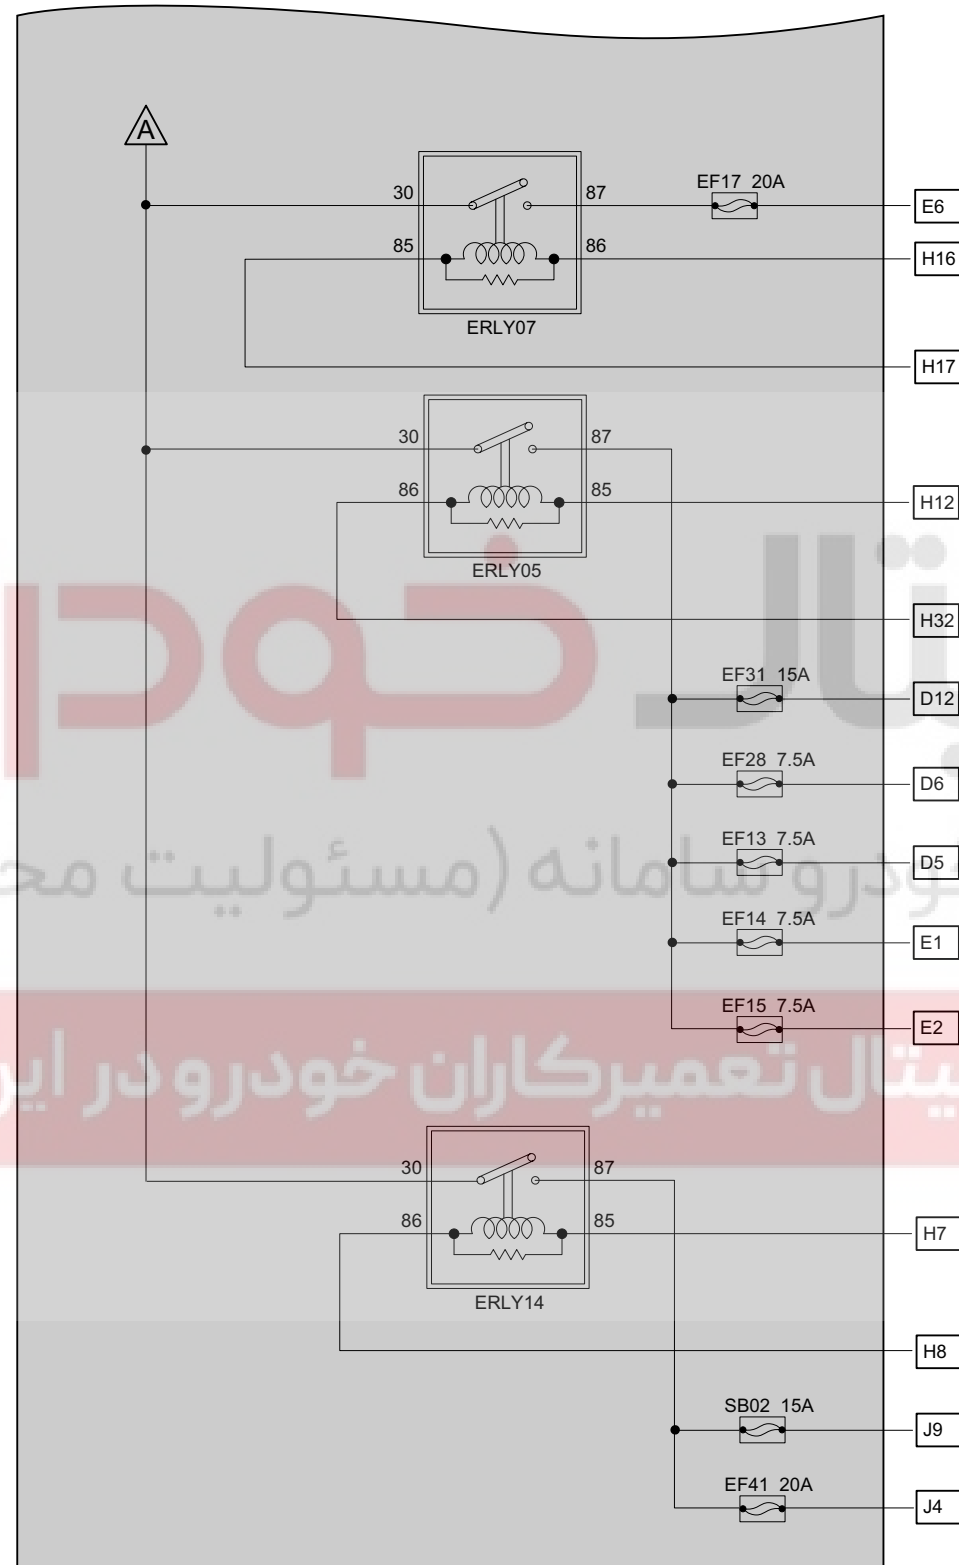


RFE0100

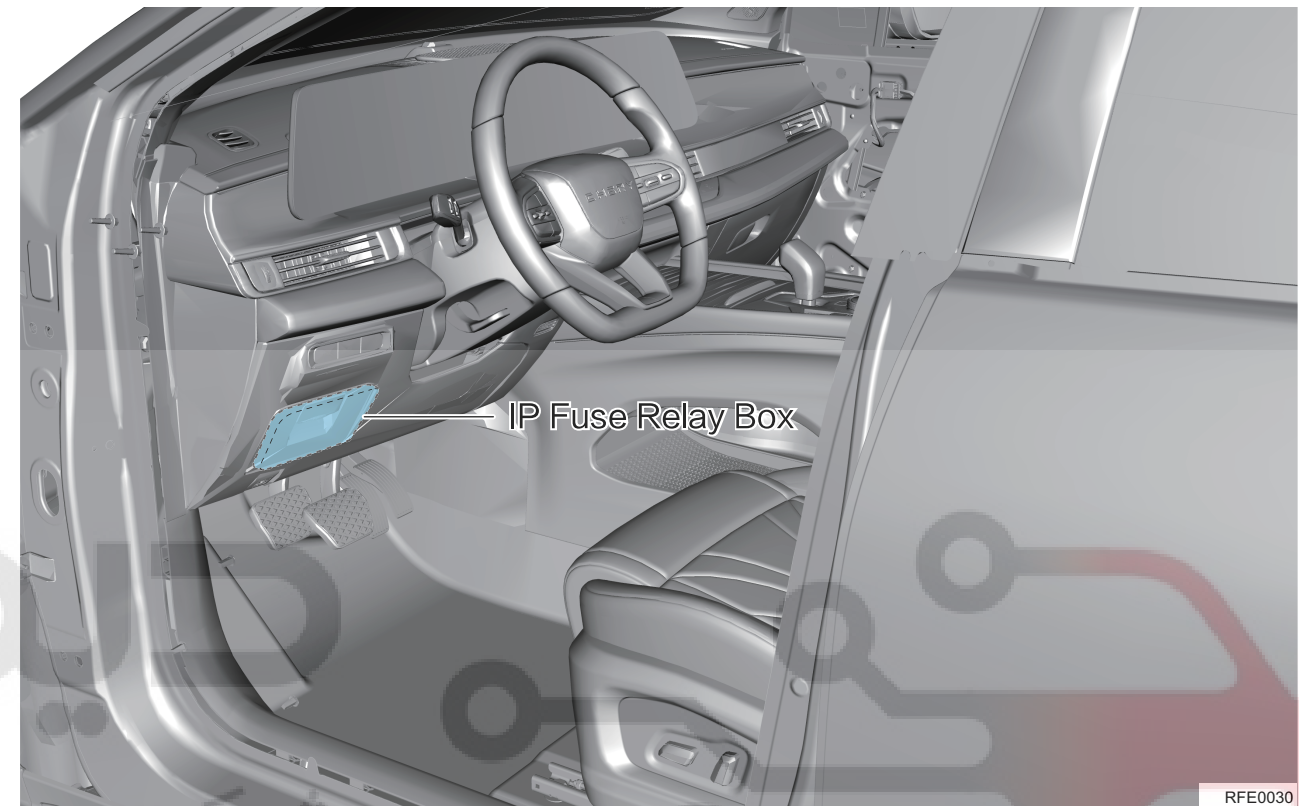

RFE0030

Fuse and Relay Information

2. Instrument Panel Fuse and Relay Box Layout

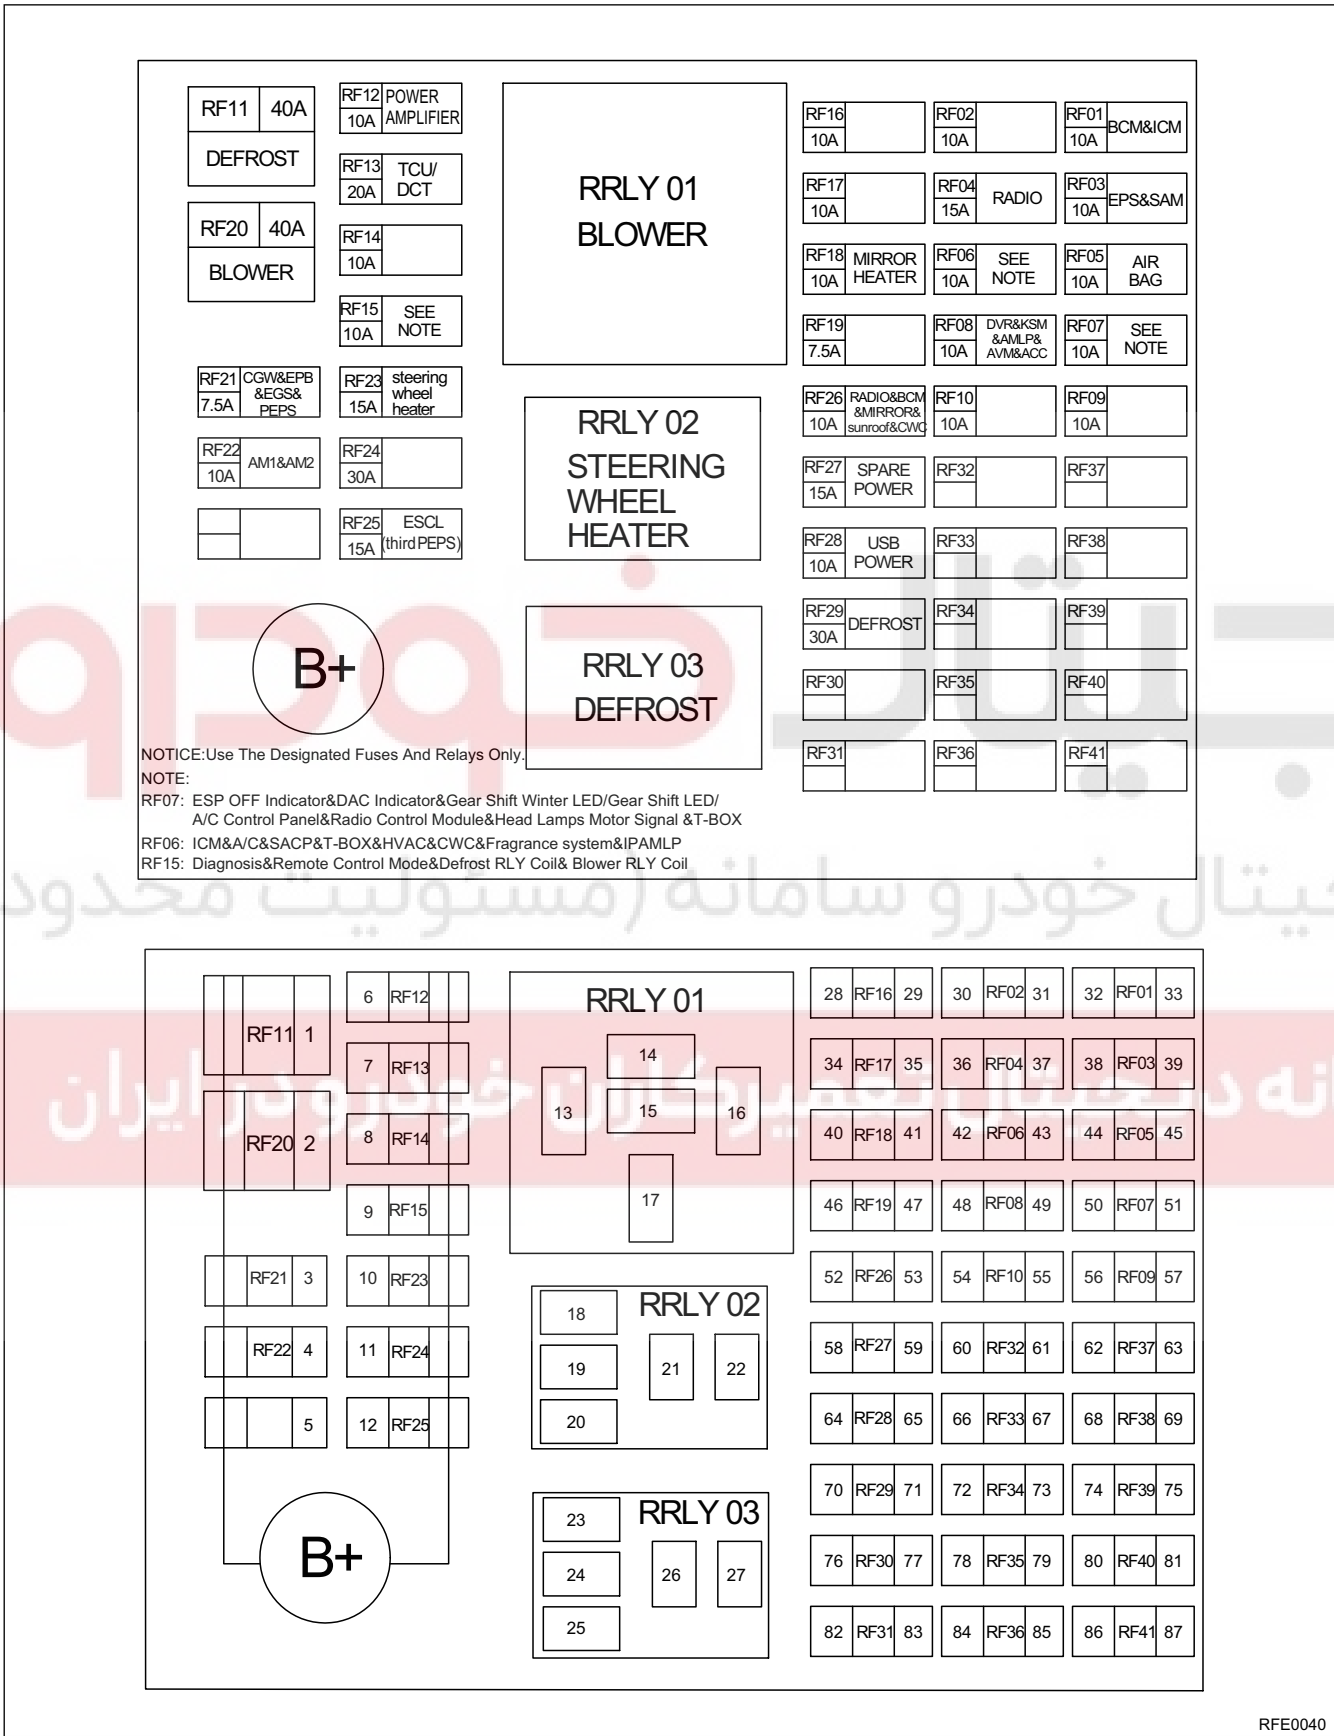

3. Description of Instrument Panel Fuse and Relay Box

| Name | Load | Function                                                                                            | Name | Load | Function                                                                                                              |
|------|------|-----------------------------------------------------------------------------------------------------|------|------|-----------------------------------------------------------------------------------------------------------------------|
| RF01 | 10A  | BCM/Domain Controller (Audio)/PEPS/Central Gate-way/Instrument Cluster/E call Module/GLONASS Module | RF16 | 10A  | -                                                                                                                     |
| RF02 | 10A  | Rear USB Charging Module                                                                            | RF17 | 10A  | -                                                                                                                     |
| RF03 | 10A  | Electronic Power Steering EPS/Angle Sensor                                                          | RF18 | 10A  | Rear View Mirror Heating                                                                                              |
| RF04 | 15A  | Domain Controller (Audio)                                                                           | RF19 | 7.5A | -                                                                                                                     |
| RF05 | 10A  | Airbag Controller                                                                                   | RF20 | 40A  | Blower Relay                                                                                                          |
| RF06 | 10A  | Instrument Cluster/IP Ambient Light/Auto A/C System/Auto A/ C Panel/Mobile Wireless Charging Module | RF21 | 7.5A | PEPS/Central Gateway/Elec-tronic Shift Actuator/EPB SW (Electronic Shift)                                             |
| RF07 | 10A  | Electronic Shift Actuator/Auto A/C Control Module-A/Auto A/ C Panel/Anti-glare Rear View Mirror     | RF22 | -    | -                                                                                                                     |
| RF08 | 10A  | Door Ambient Light/E call Module/GLONASS Module                                                     | RF23 | 15A  | Steering Wheel Heating                                                                                                |
| RF09 | 10A  | -                                                                                                   | RF24 | 30A  | -                                                                                                                     |
| RF10 | 10A  | -                                                                                                   | RF25 | 15A  | -                                                                                                                     |
| RF11 | 40A  | Rear Defroster Relay                                                                                | RF26 | 10A  | BCM/Domain Controller (Audio)/Rear View Mirror Ad-justment Switch/Mobile Wire-less Charging Module/Seat Heating Relay |
| RF12 | 10A  | -                                                                                                   | RF27 | 15A  | Backup Power                                                                                                          |
| RF13 | 20A  | Transmission TCU (CVT25)                                                                            | RF28 | 10A  | Quick Charge/Driving Record-er Charging Port                                                                          |
| RF14 | 10A  | -                                                                                                   | RF29 | 30A  | Rear Defroster Positive                                                                                               |
| RF15 | 10A  | Blower Relay/Diagnostic Inter-face/Rear Defroster Relay                                             |      |      |                                                                                                                       |

# Fuse and Relay Information

## 4. Instrument Panel F/R Box Inner Circuit

