


INDICATOR & GAUGES (SUPERVISION TYPE) EACDC5BE

Indicator & Gauges (Supervision Type) (1)

SD940-1

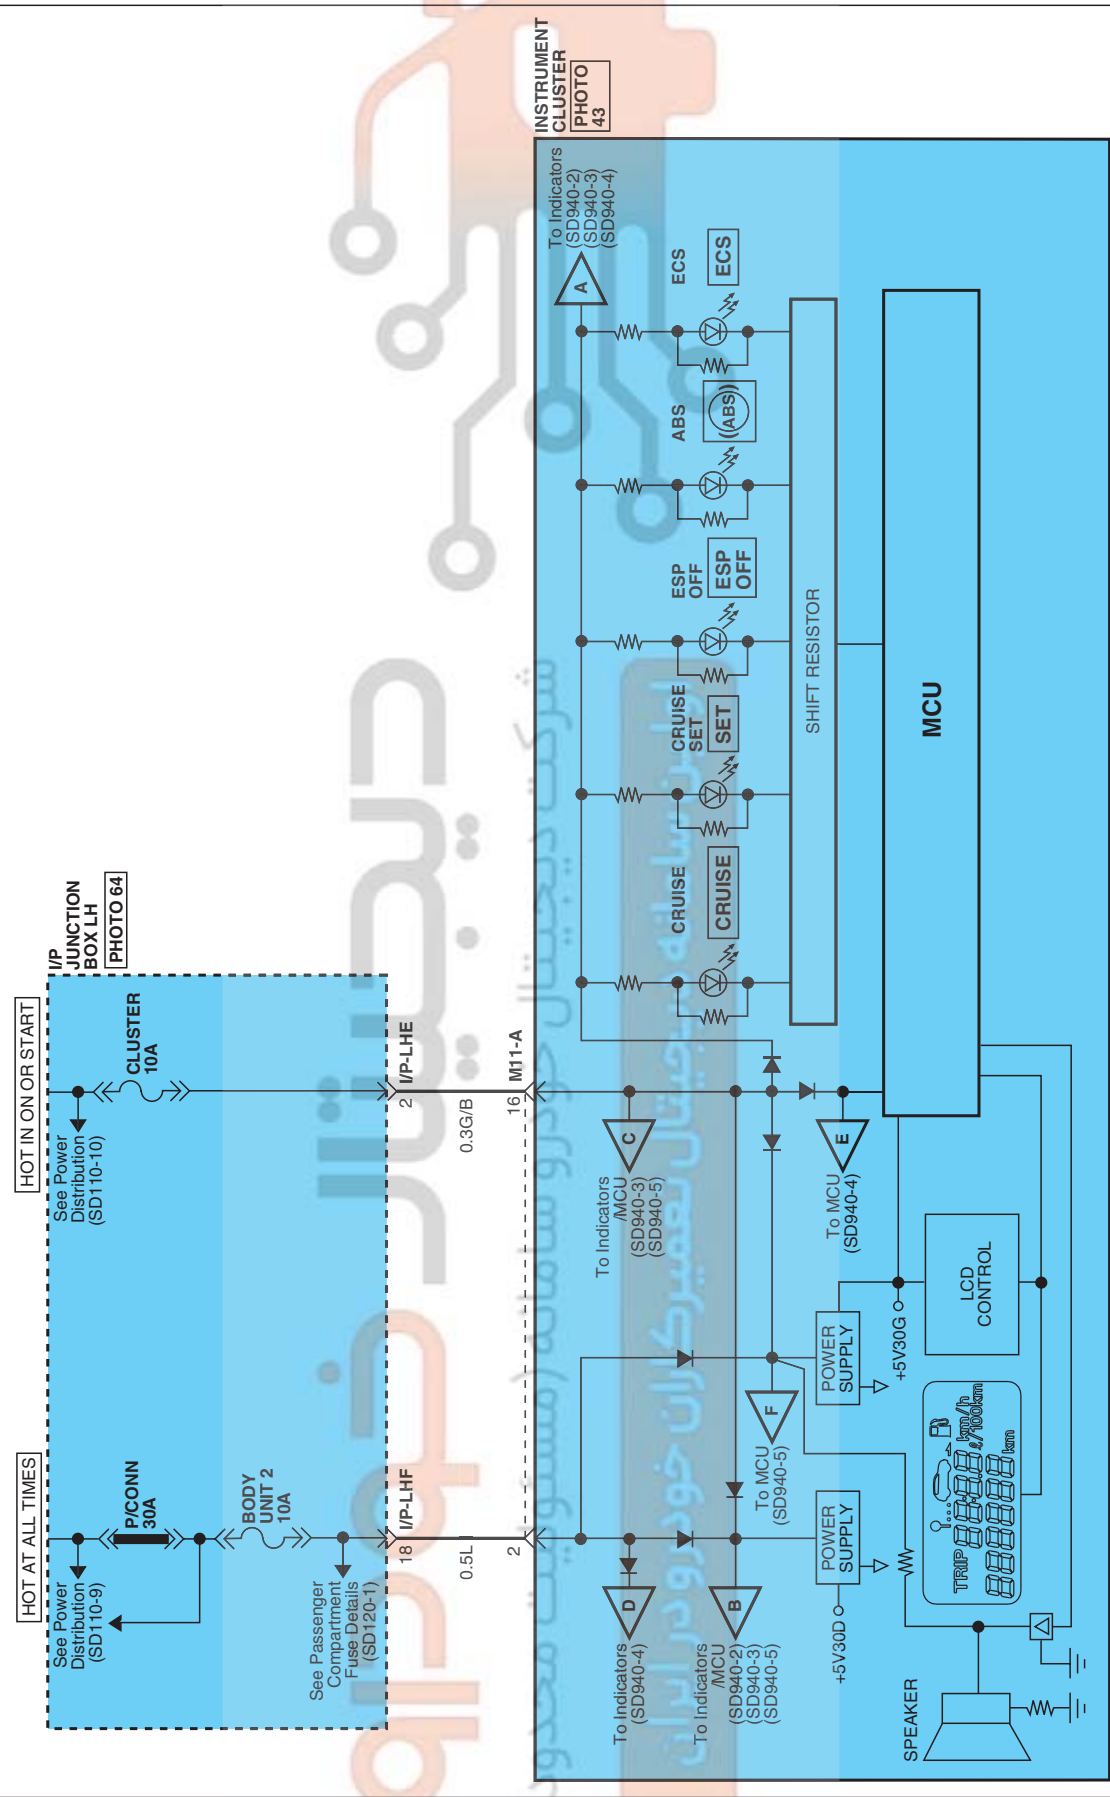


EPH509590A1

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (2)


SD940-2

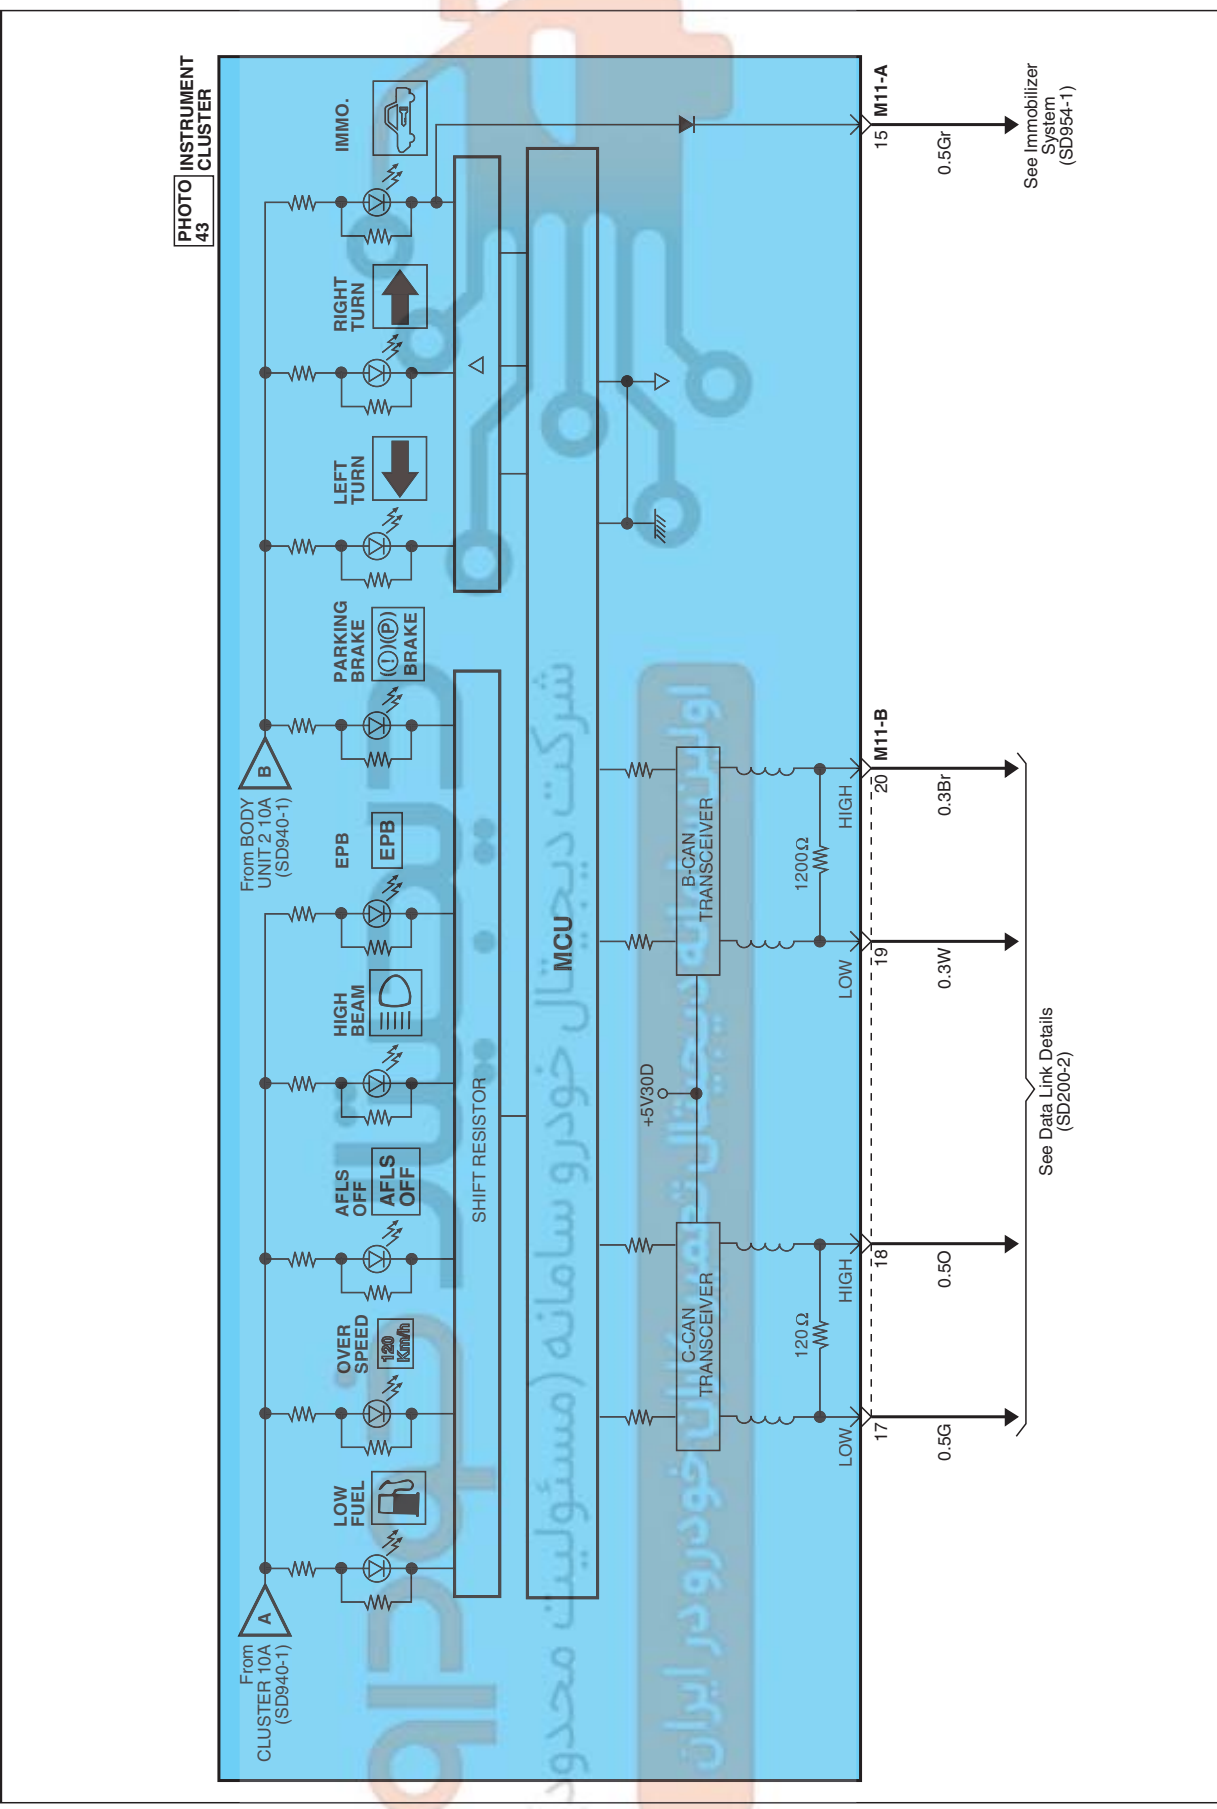

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (3)


SD940-3

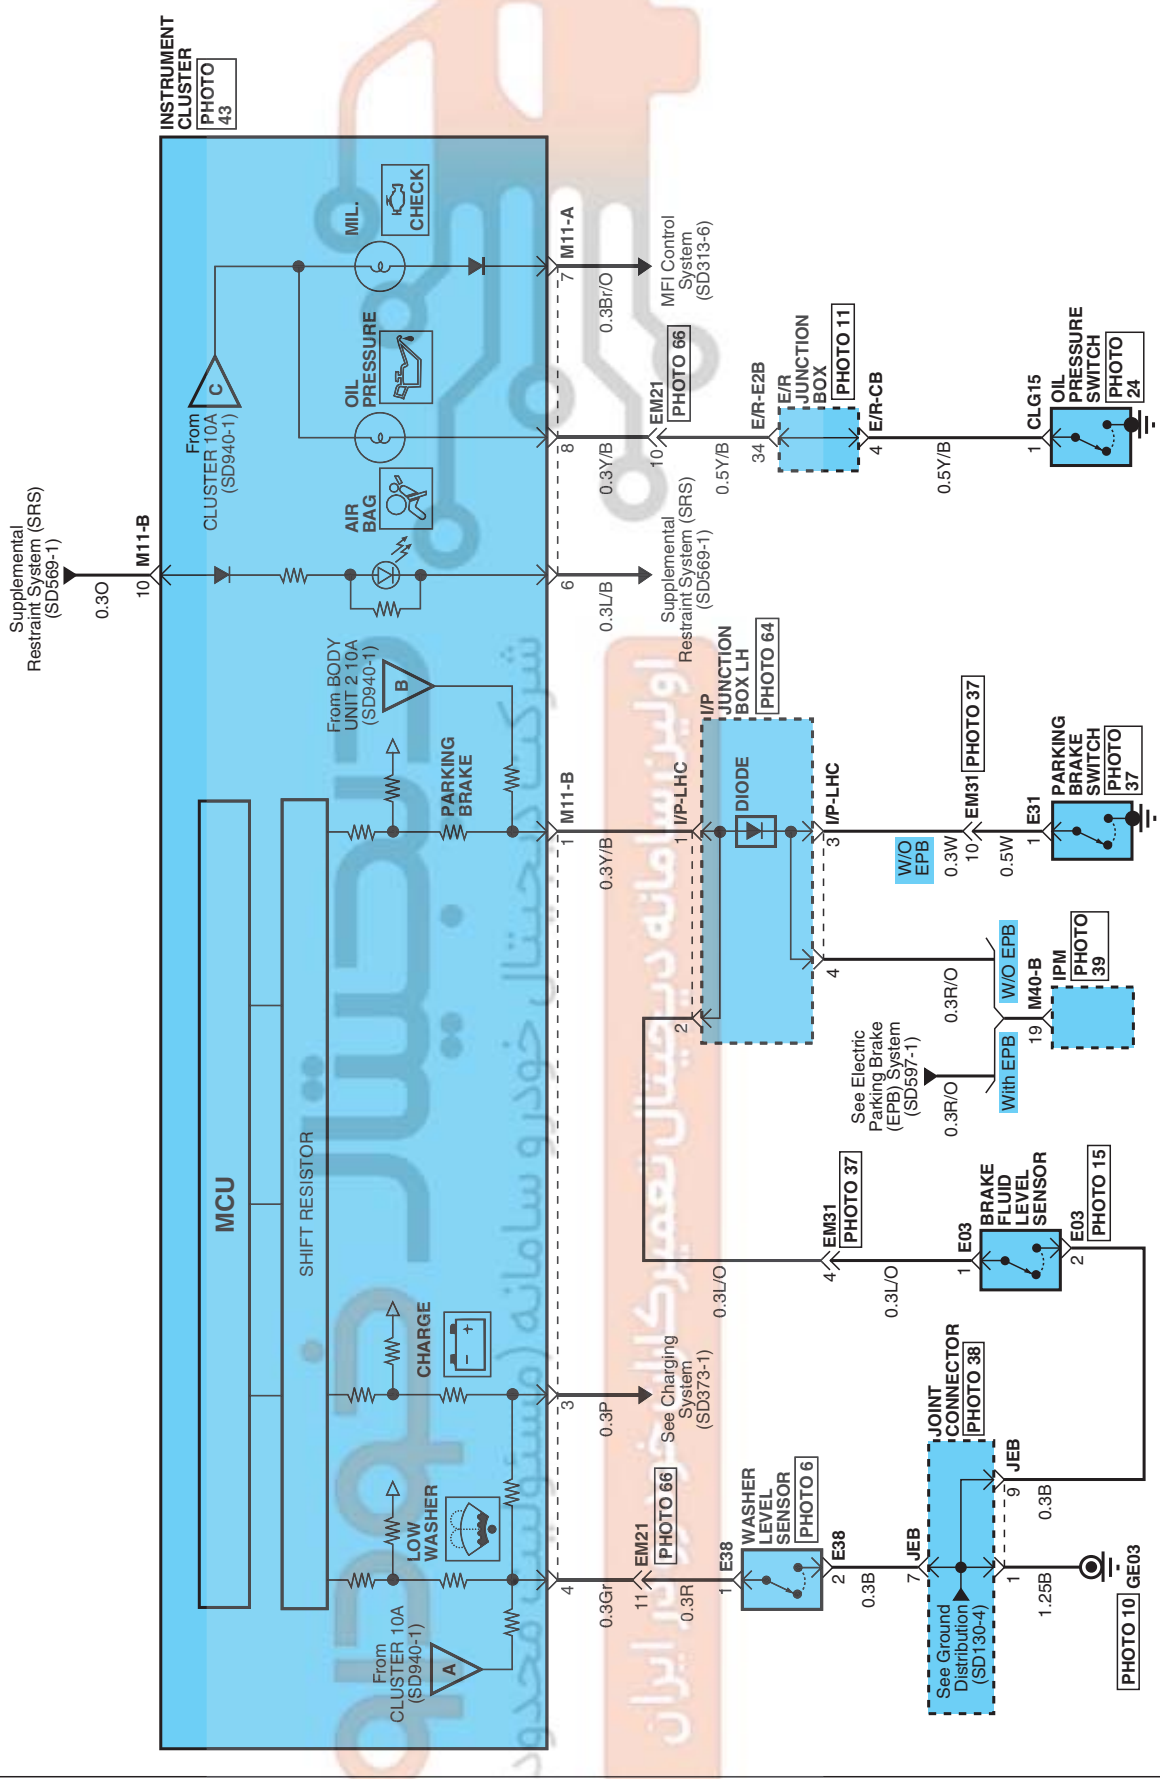

INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (4)


SD940-4

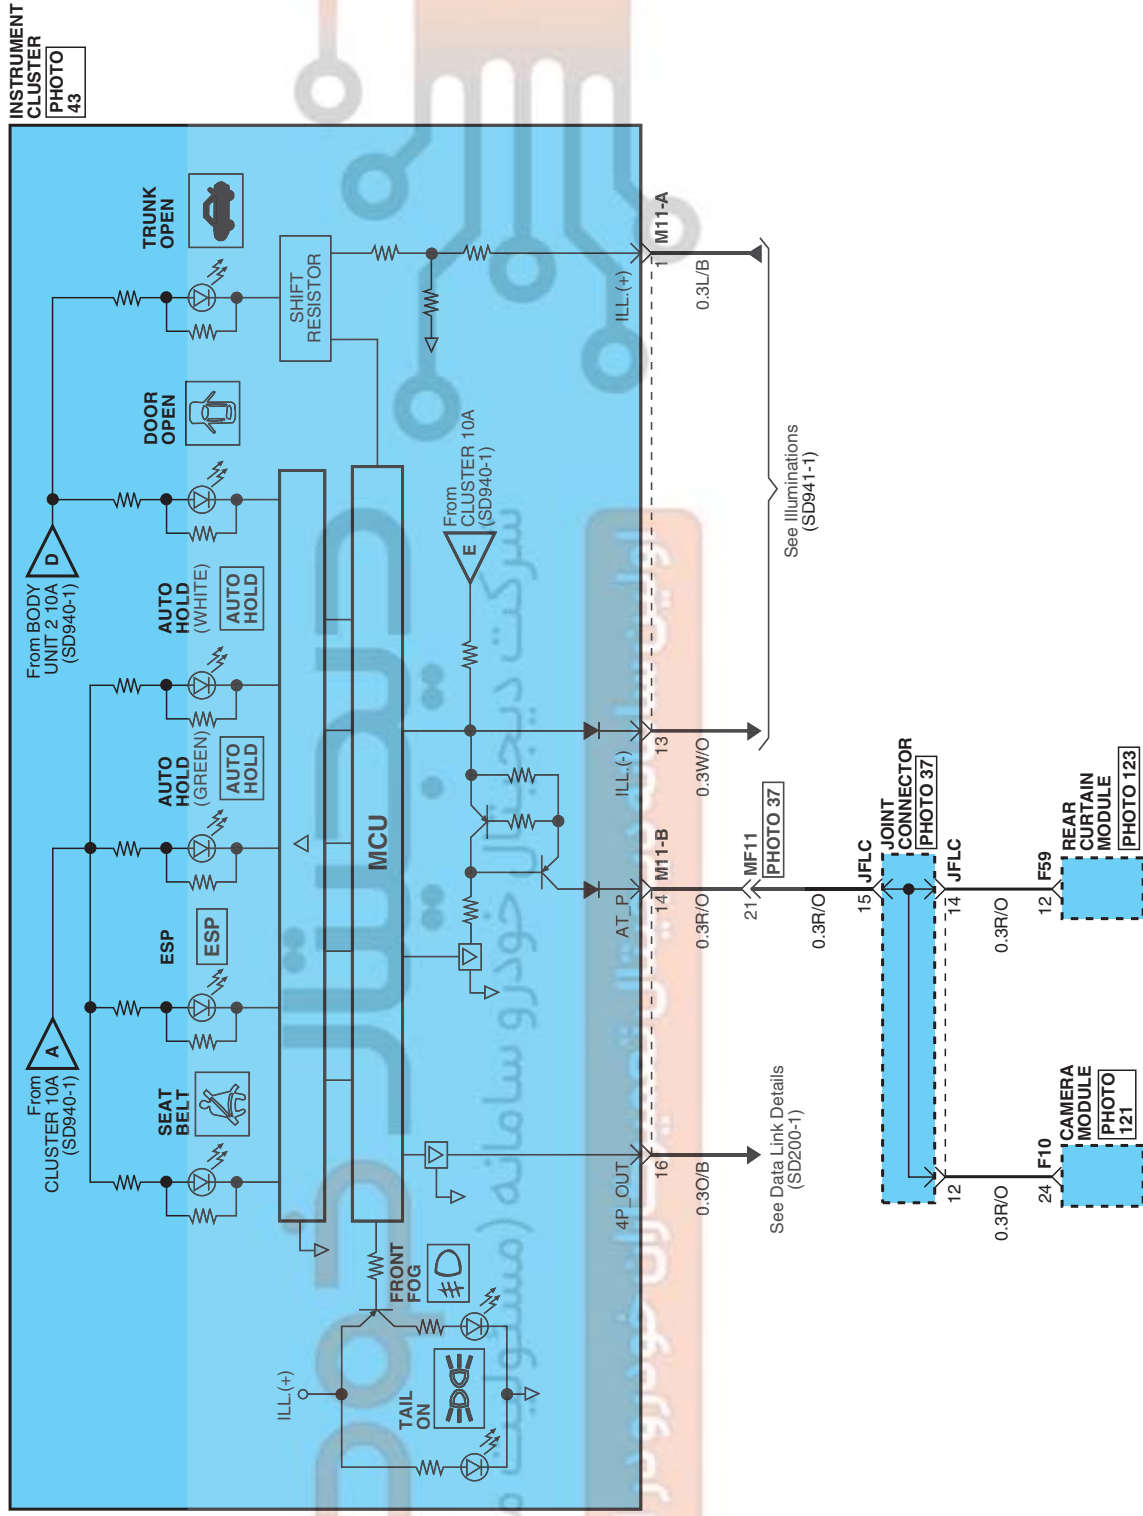




 
 

 
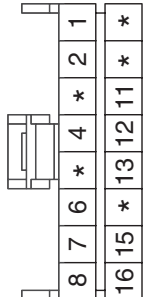
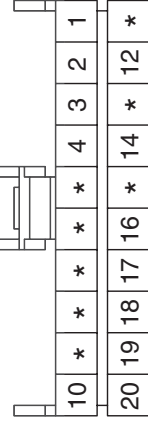
 
 
INDICATOR & GAUGES (SUPERVISION TYPE)

Indicator & Gauges (Supervision Type) (5)

SD940-5

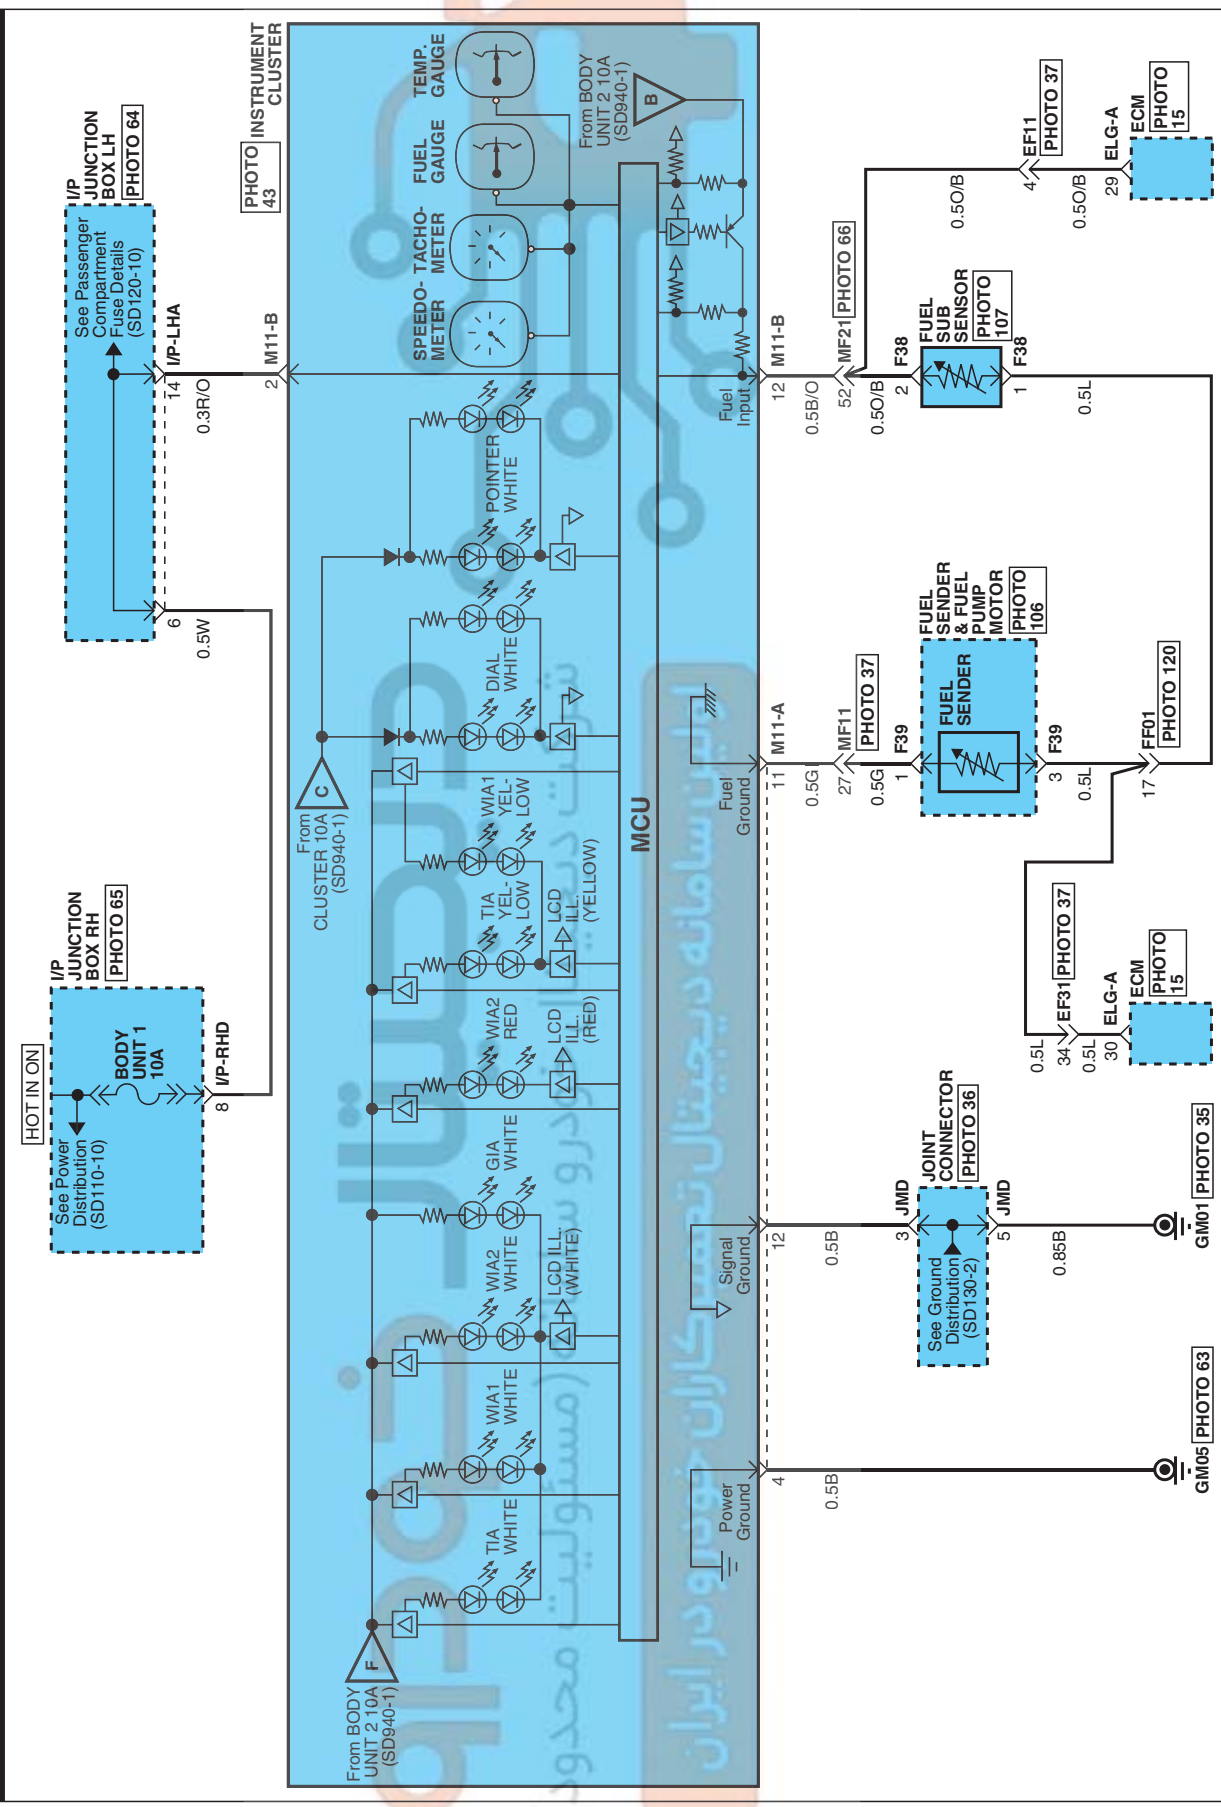

INDICATOR & GAUGES (SUPERVISION TYPE)

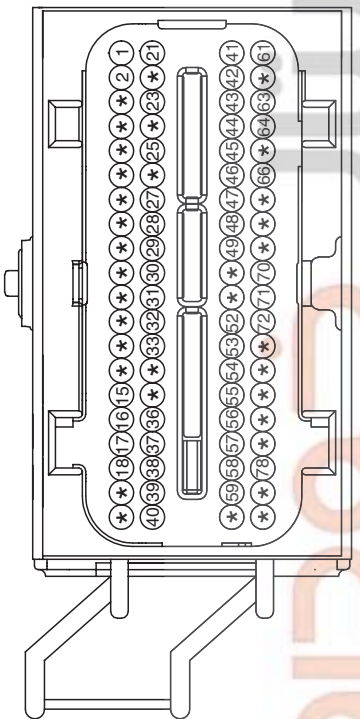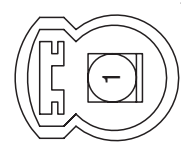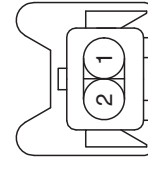Indicator & Gauges (Supervision Type) (6)		SD940-6	
ELG-A			
	 <p>CLG15</p> <p>KUM_NMW_P_01F_B</p>	 <p>E03</p> <p>AMP_JPT_02F_B_S1</p>	
 <p>F10</p> <p>AMP_040M1_24F_B</p>	 <p>F38</p> <p>PKD_ECU_80F_GL_1</p>	 <p>E31</p> <p>AMP_250DL_01F_B</p>	 <p>F59</p> <p>YAZ_62Z_02F_BR</p>
 <p>M11-A</p> <p>AMP_040M1_16F_B</p>	 <p>M11-B</p> <p>AMP_040M1_20F_B</p>	 <p>M40-B</p> <p>KET_090IWP_05F_GL_2</p>	 <p>AMP_070_14F_W</p>
		<p>BLANK</p> <p>AMP_0407_26F_W_HD</p>	