


ESP (with EPB) System

1. EPB Module Power Supply System, Wheel Speed Sensor, Left And Right Caliper

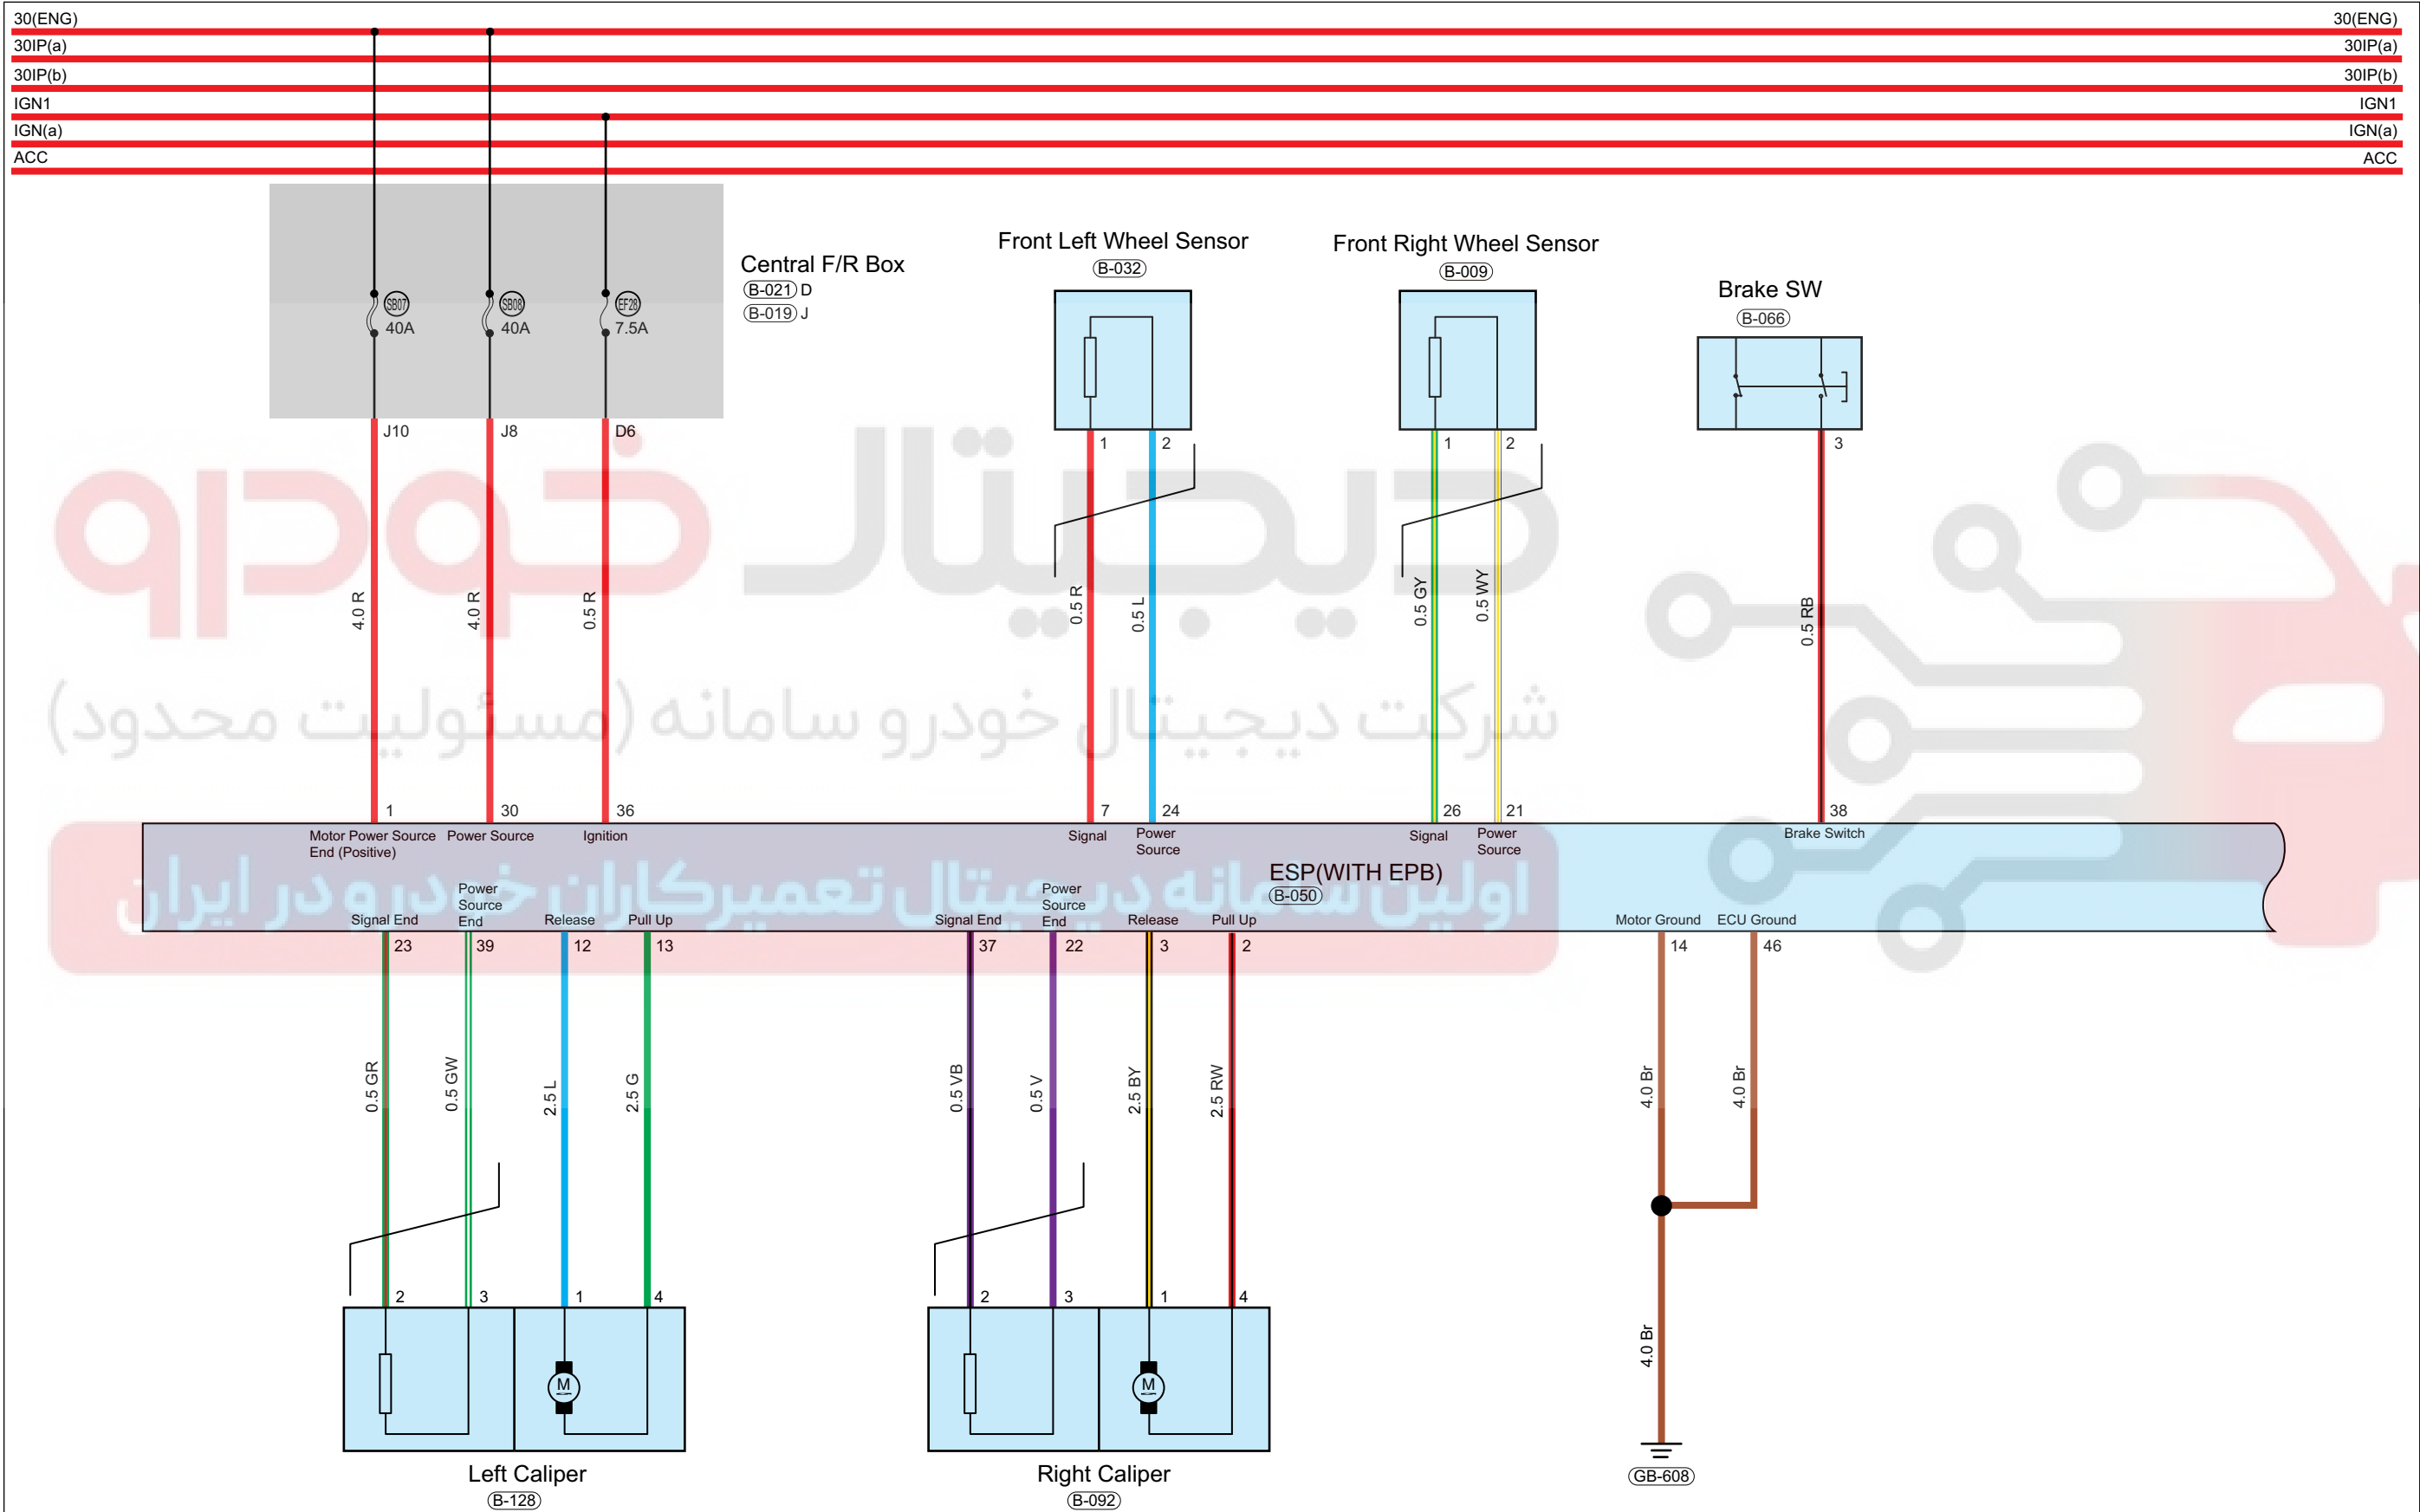

30(ENG) 30(ENG)
30IP(a) 30IP(a)
30IP(b) 30IP(b)
IGN1 IGN1
IGN(a) IGN(a)
ACC ACC

IP F/R Box
I-009
7.5A

0.35 GR
12
3

EPB SW(Electronic Shift)
I-064

AUTOHOLD SW
AUTOHOLD SW IND
EPB SW IND
S1 Pull Hand Brake
S2 Release Hand Brake

ILL
0.35 L
ILLUMINATION

2.5 Br
0.35 Br
GI-503

0.5 G
0.5 L
0.5 W
0.5 RY
0.5 RG
0.5 RW
0.5 RL

23
16
10
15
12
37
28

41
8
18
32
15
16
31

Auto Hold Switch
Auto Hold Switch Indicator
EPB Switch Indicator
EPB SW4
EPB SW3
EPB SW6
EPB SW1

ESP(WITH EPB)
B-050

Powertrain CAN
Chassis Safety CAN

0.5 O
0.5 OB
0.5 WR
0.5 RG

5
19
11
25

P-CAN H
P-CAN L
C-CAN H
C-CAN L

F03047