


# Turn Signal Light

Circuit Diagram (Page 1 of 2)

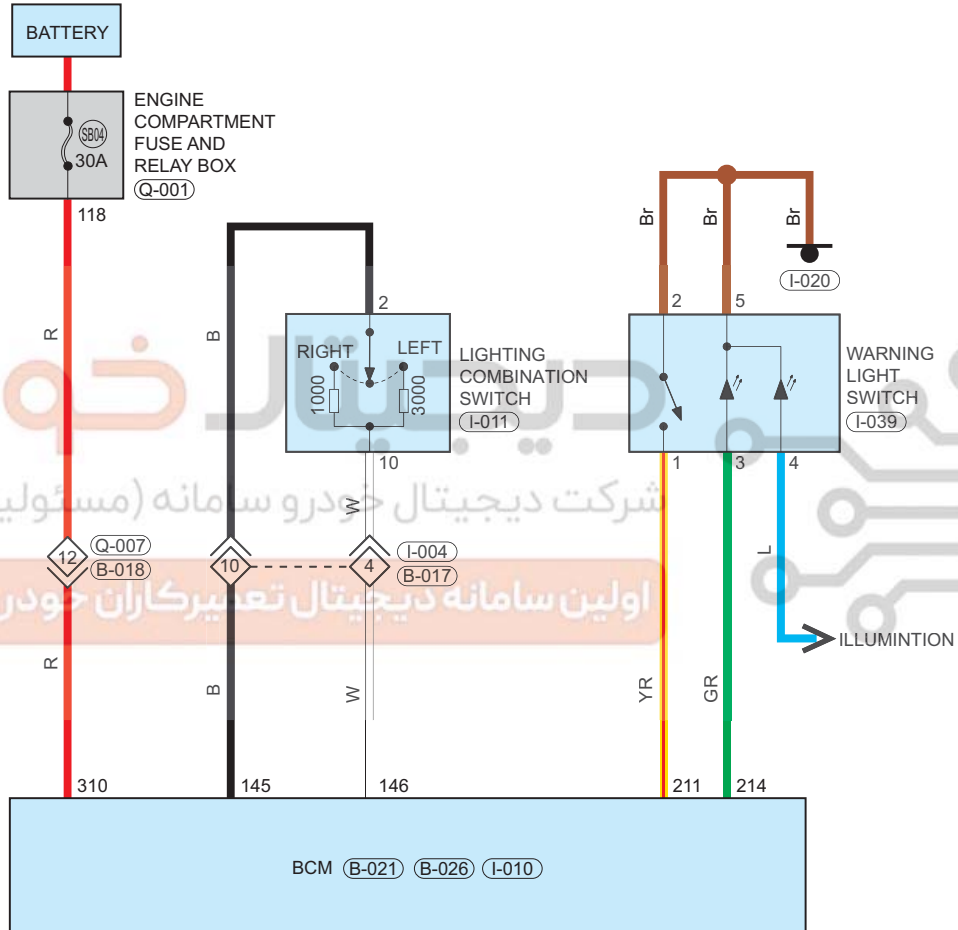

09

LIE011001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	I-011	08-23	I-039	08-23
B-021	08-36	B-026	08-36	I-010	08-23
I-020	08-23				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB04	06-2	Engine Compartment Fuse and Relay Box

## Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-007, B-018	08-10, 08-36	B-017, I-004	08-36, 08-23		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	I-011	12-4	I-039	12-4
B-021	12-8	B-026	12-8	I-010	12-4
I-020	12-4	Q-007, B-018	12-17, 12-8	B-017, I-004	12-8, 12-4

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 2 of 2)

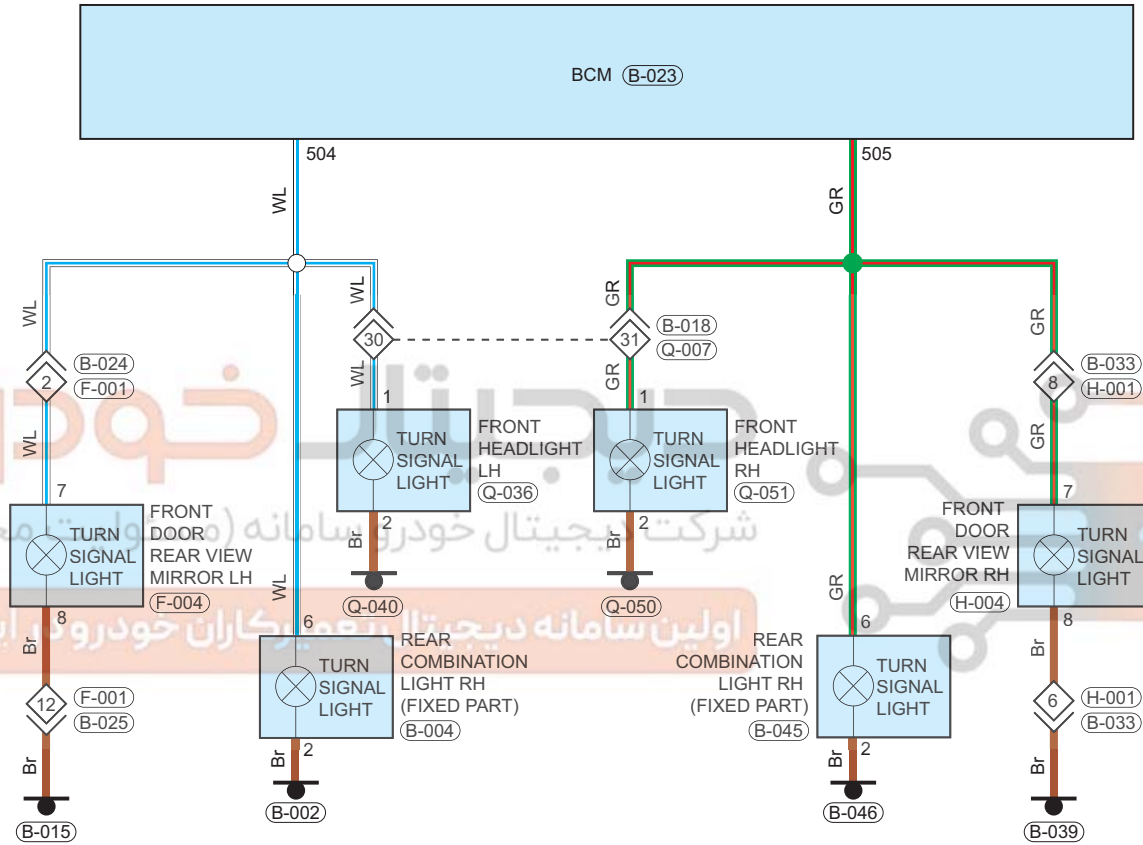

09

LIE012001