


Passenger Compartment / Closed Compartment Lighting

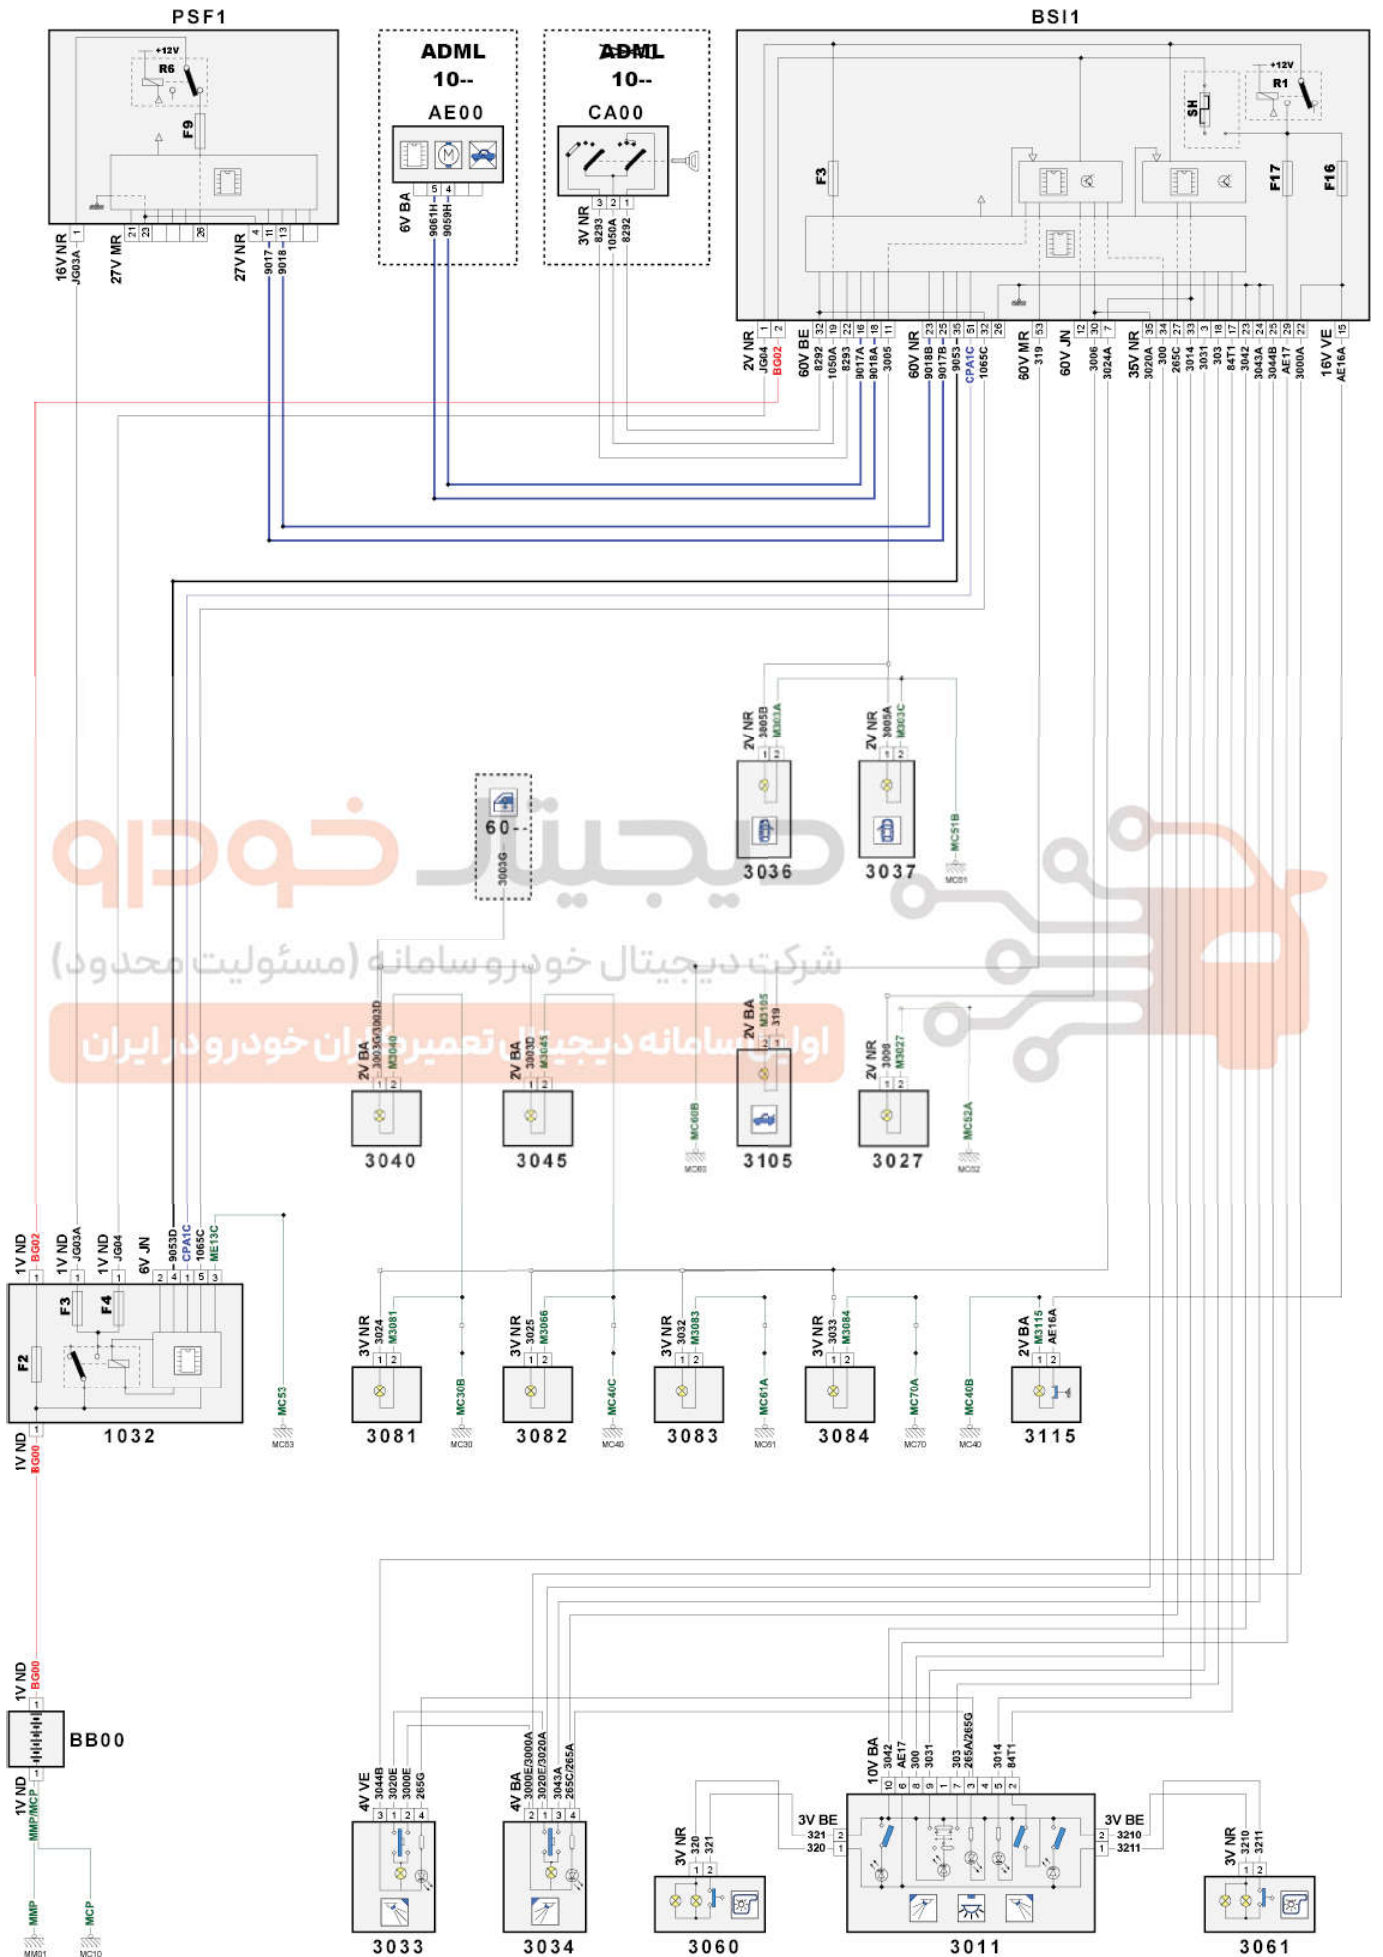

دیجیتال خودرو
 شرکت دیجیتال خودروسامانه (مسئولیت محدود)
 آوا سامانه دیجیتال تعمیرات خودرو در ایران

Passenger Compartment / Closed Compartment Lighting

item code	description	information
1032	null	electrical supplies protection and management unit
3011	null	front central interior lamp
3027	null	rear centre footwell lamp
3033	null	rear right-hand reading lamp
3034	null	rear left-hand reading lamp
3036	null	right-hand footwell lamp
3037	null	left-hand footwell lamp
3040	null	left-hand front door tread lamp
3045	null	right-hand front door tread lamp
3060	null	driver's courtesy mirror lamp
3061	null	passenger's courtesy mirror lamp
3081	null	front left door trim light
3082	null	front right door trim light
3083	null	rear left door trim light
3084	null	rear right door trim light
3105	null	boot (or tailgate) light
3115	null	glove box lamp
6036	null	driver's door electric windows and exterior mirrors control pad
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
E302	null	crimp one information (or equipotential 302) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM30A	null	crimp earth (earth point number 30A)
EM40B	null	crimp earth (earth point number 40B)
EM40C	null	crimp earth (earth point number 40C)
EM51B	null	crimp earth (earth point number 51B)
EM52A	null	crimp earth (earth point number 52A)
EM53	null	crimp earth (earth point number 53)
EM60A	null	crimp earth (earth point number 60A)
EM61B	null	crimp earth (earth point number 61B)
EM70	null	crimp earth (earth point number 70)
EM70A	null	crimp earth (earth point number 70A)
EM71	null	crimp earth (earth point number 71)
EM73	null	crimp earth (earth point number 73)
EM73A	null	crimp earth (earth point number 73A)
MC10	null	body earth point number 10
MC30B	null	body earth point number 30B
MC40B	null	body earth point number 40
MC40C	null	body earth point 40C
MC51B	null	body earth point number 51
MC52A	null	body earth point number 52A
MC53B	null	body earth point number 53B
MC60B	null	body earth point number 60
MC61B	null	body earth point number 61B
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box