


FUSE & RELAY INFORMATIONS

FUSE & RELAY INFORMATIONS (8)

PASSENGER COMPARTMENT RELAY BOX (ICM BOX)


LAYOUT

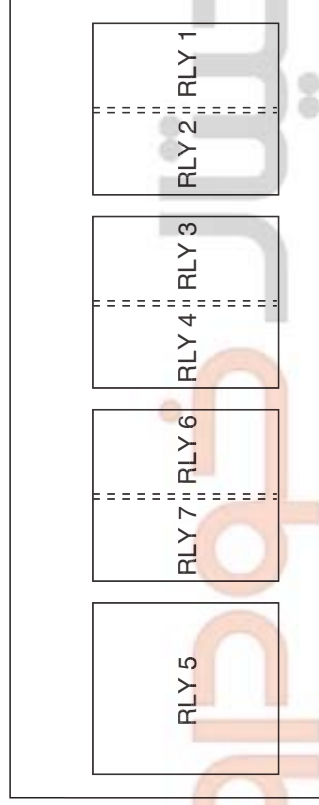

RELAY NAME

RELAY NO	RELAY NAME
1	RR FOG
2	DEAD LOCK
3	Not used
4	Not used
5	HAZARD
6	BURGLAR ALARM
7	BURGLAR HORN

FUSIBLE LINK BOX (DIESEL)

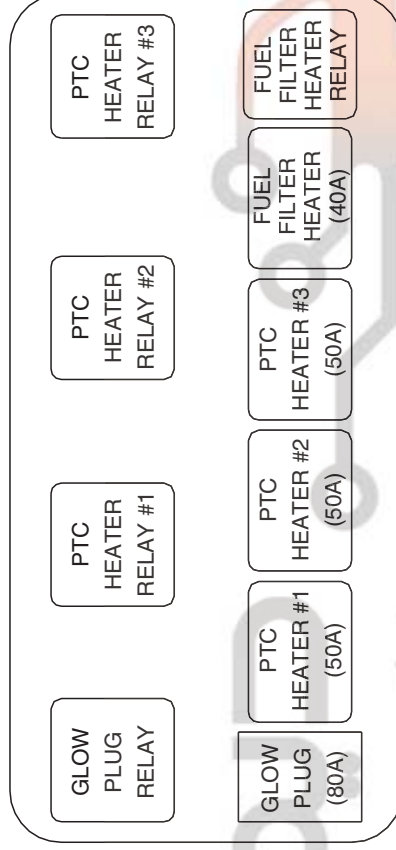

FUSIBLE LINK	(A)	Circuit Protected
GLOW PLUG	80A	Glow plug relay
PTC HEATER #1	50A	PTC heater relay #1
PTC HEATER #2	50A	PTC heater relay #2
PTC HEATER #3	50A	PTC heater relay #3
FUEL FILTER HEATER	40A	Fuel filter heater relay

※ USE THE DESIGNATED FUSE ONLY