


EMS switch signal (CVT)

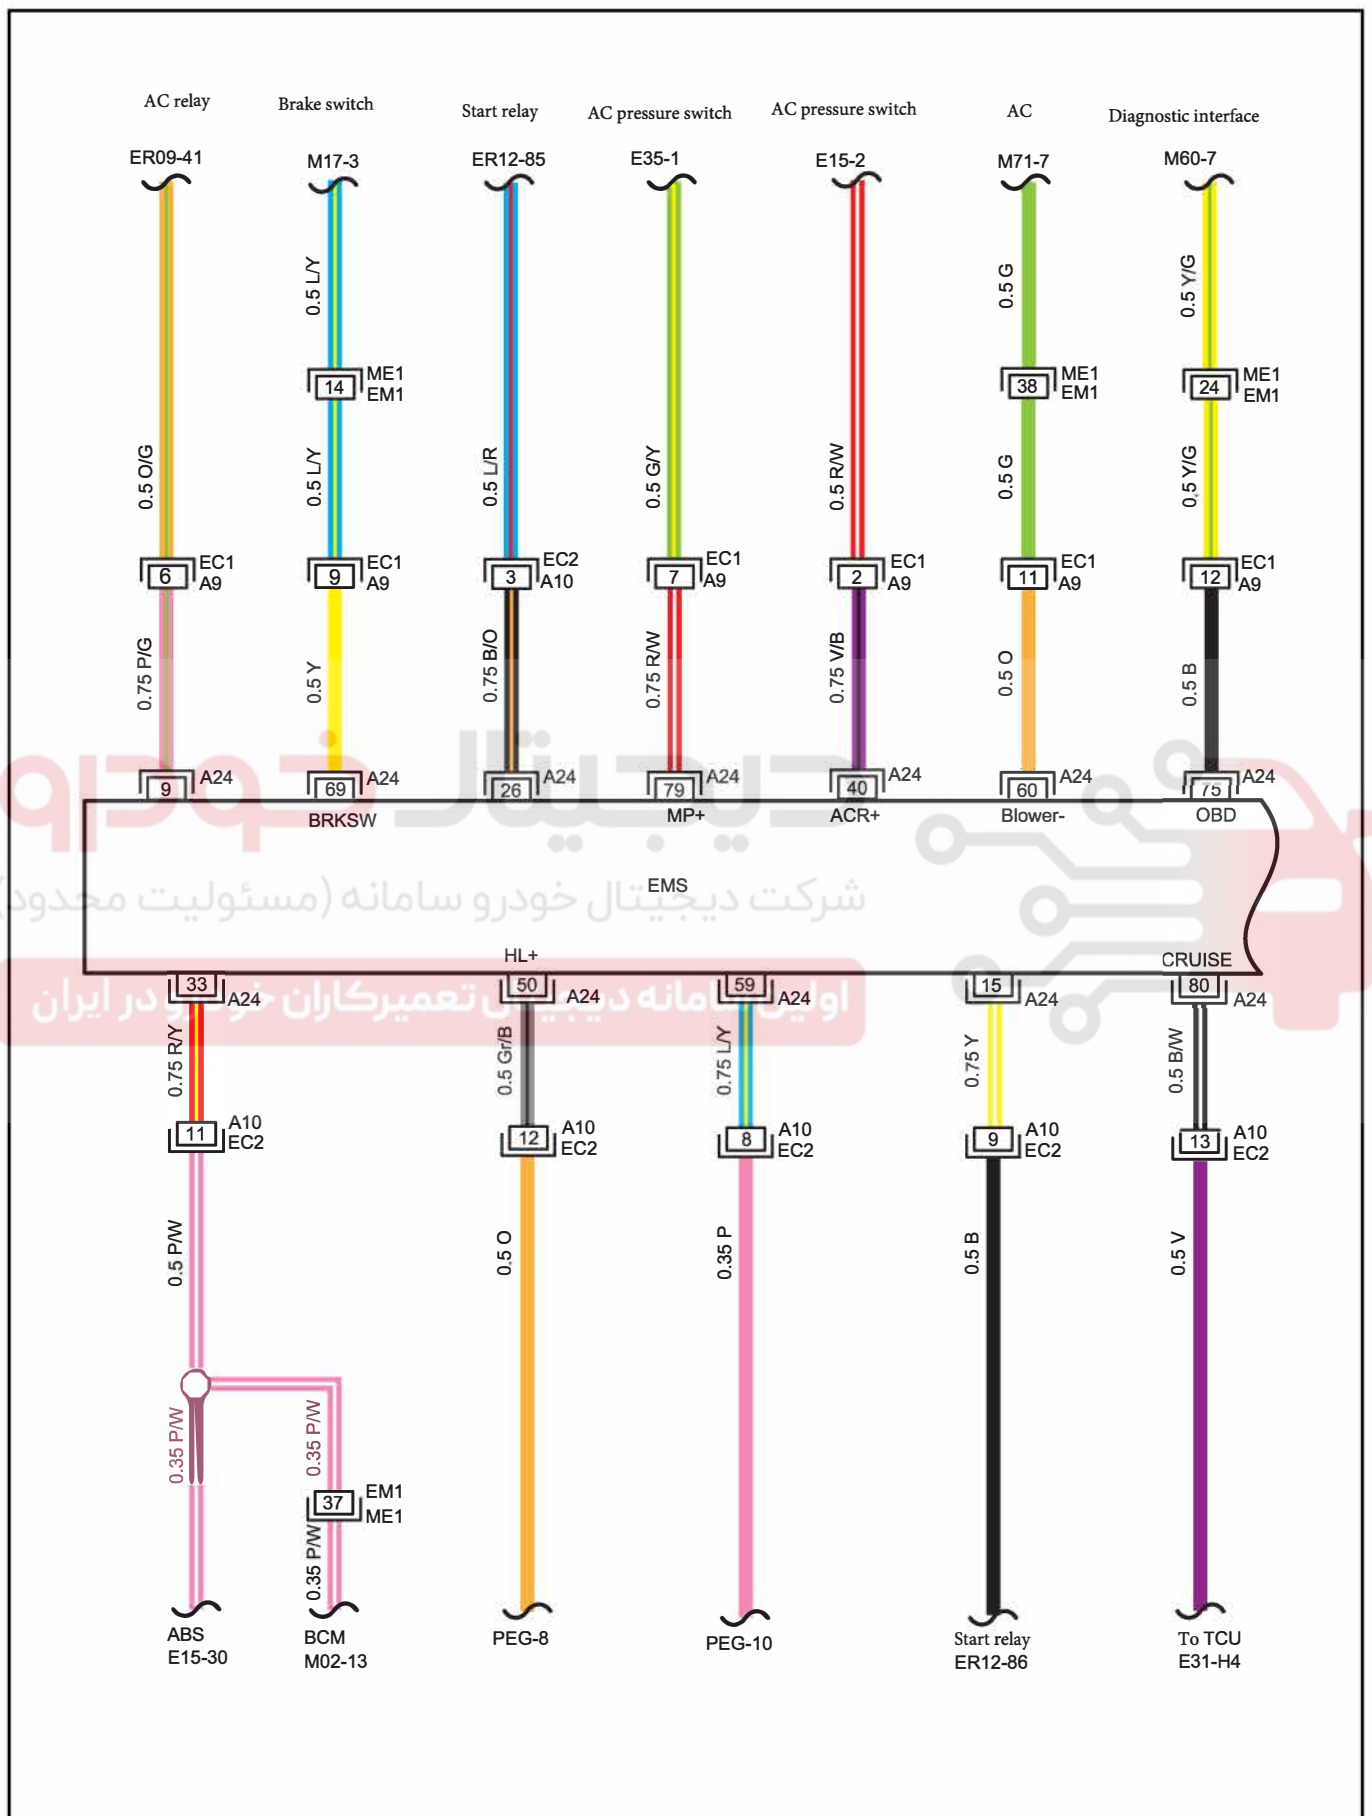

Harness connector	Name	Page
A9	Engine harness to control harness 1	22
A10	Engine harness to control harness 2	22
A24	Engine control unit to main harness connector 1	22
A26	Engine control unit to main harness connector 2	22
EC1	Engine control harness to main harness connector 1	16
EC2	Engine control harness to main harness connector 2	16
ME1	Engine to Main harness connector 1	25
EM1	Main harness to engine Harness connector 1	17
ME2	Engine to Main harness connector 2	25
EM2	Main harness to engine Harness connector 2	17
EF1	Engine harness to body harness connector 1	17
FE1	Body harness to engine harness connector 1	43

Harness connector	Name	Page
A24-74	To clutch pedal switch M51-1	99
A24-71	To diagnostic interface M60-7	99
A24-76	To AC M71-7	99
A24-60	To AC pressure switch E15-2	99
A24-75	To AC pressure switch E35-1	99
A24-56	To start relay ER12-85	80
A24-58	To brake switch M17-3	155
A24-69	To AC relay ER09-85	81
A24-13	To indoor electrical boxes PEG-7	76
A24-43	To clock spring M35-5	151
A24-77	To neutral sensor F59-2	99
A24-41	To neutral sensor F59-3	106
A24-8	To start control relay ER08-85	80
A24-72	To indoor electrical boxes PEG-8	99
A24-1	To BCM M02-13	155
	To ABS E15-30	99
A24-75	To diagnostic interface M60-7	100
A24-60	To AC M71-7	100
A24-40	To AC pressure switch E15-2	100
A24-79	To AC pressure switch E35-1	100
A24-26	To start relay ER12-85	80
A24-69	To brake switch M17-3	155
A24-9	To AC relay ER09-85	81
A24-80	To TCU E13-H4	100
A24-15	To start relay ER12-86	80

A24-59	To PEG-10	81
A24-50	To PEG-8	100
A24-33	To BCM M02-13	155
	To ABS E15-30	100

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

