


Moon Roof

Service Hints

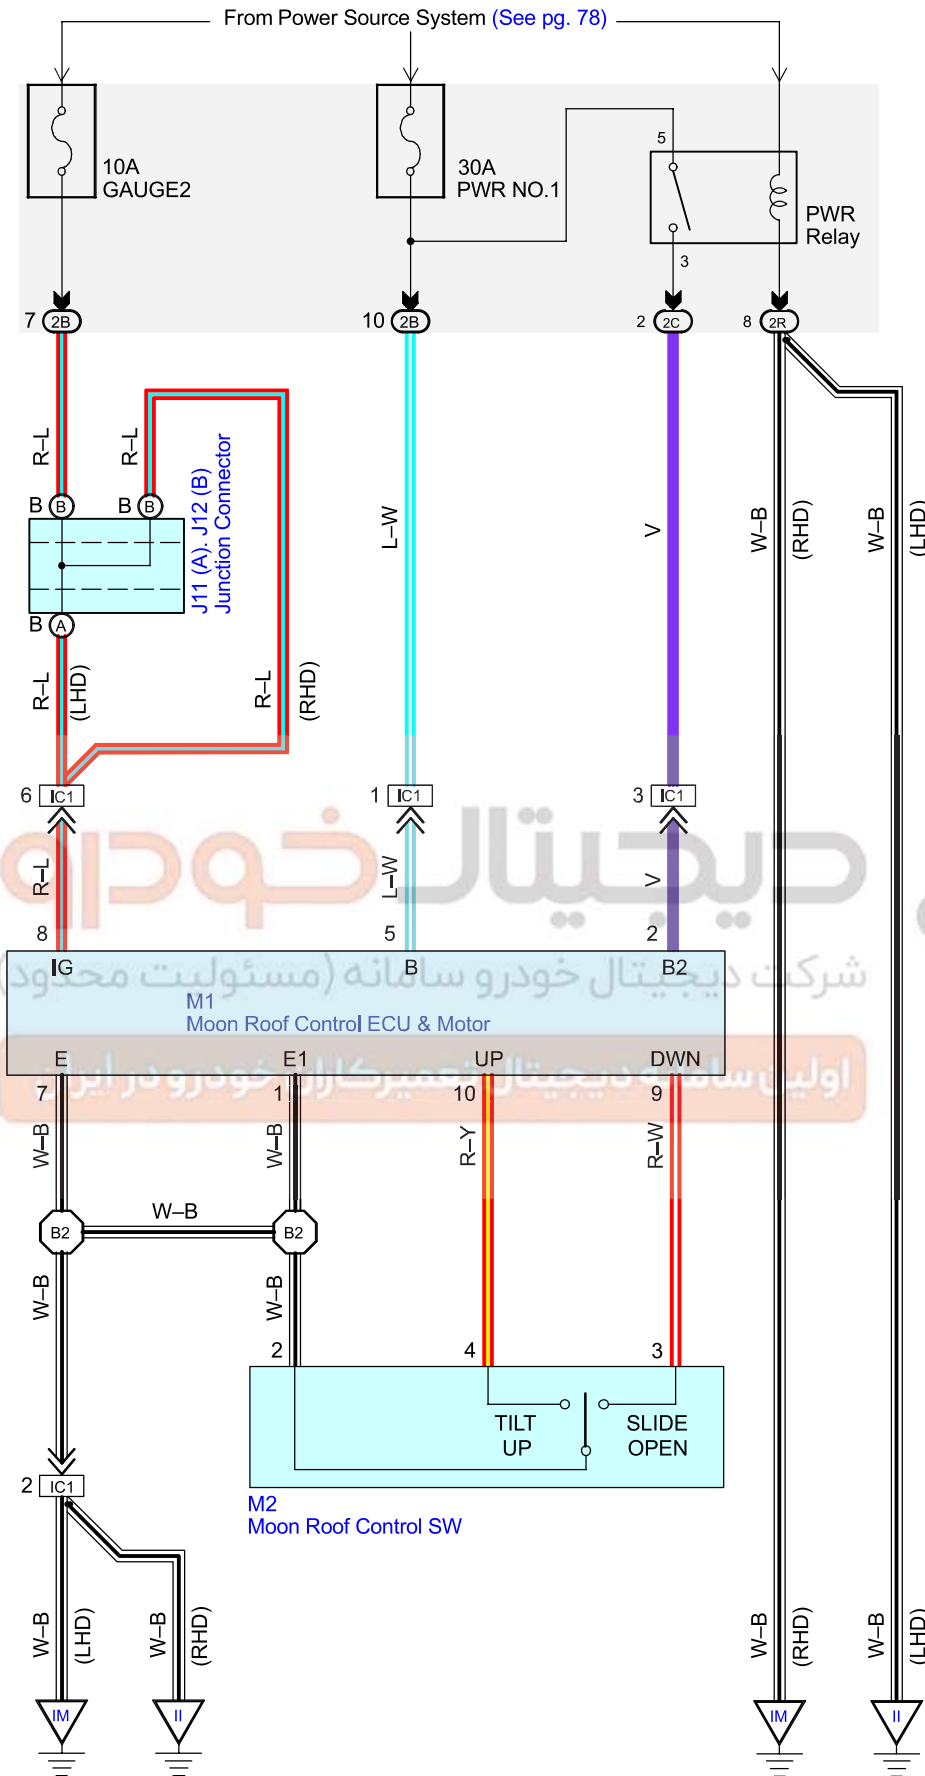

**Service Hints****M1 Moon Roof Control ECU and Motor**

- 8-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 5-Ground : Always approx. 12 volts
- 7-Ground : Always continuity

**○ : Parts Location**

Code		See Page	Code	See Page	Code	See Page
J11	A	37 (LHD)	M1	38 (LHD)	M2	38 (LHD)
		47 (RHD)		48 (RHD)		48 (RHD)
J12	B	37 (LHD)				
		47 (RHD)				

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Instrument Panel Wire and Driver Side J/B
2C		
2R		

**□ : Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	55 (LHD)	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
	67 (RHD)	Instrument Panel Wire and Roof Wire (Inside of Front Right Pillar)

**▽ : Ground Points**

Code	See Page	Ground Points Location
II	55 (LHD)	Instrument Panel Reinforcement LH
	67 (RHD)	
IM	55 (LHD)	Instrument Panel Reinforcement RH
	67 (RHD)	