


Overview

Power Fuse Box

POWER FUSE BOX (BATTERY)

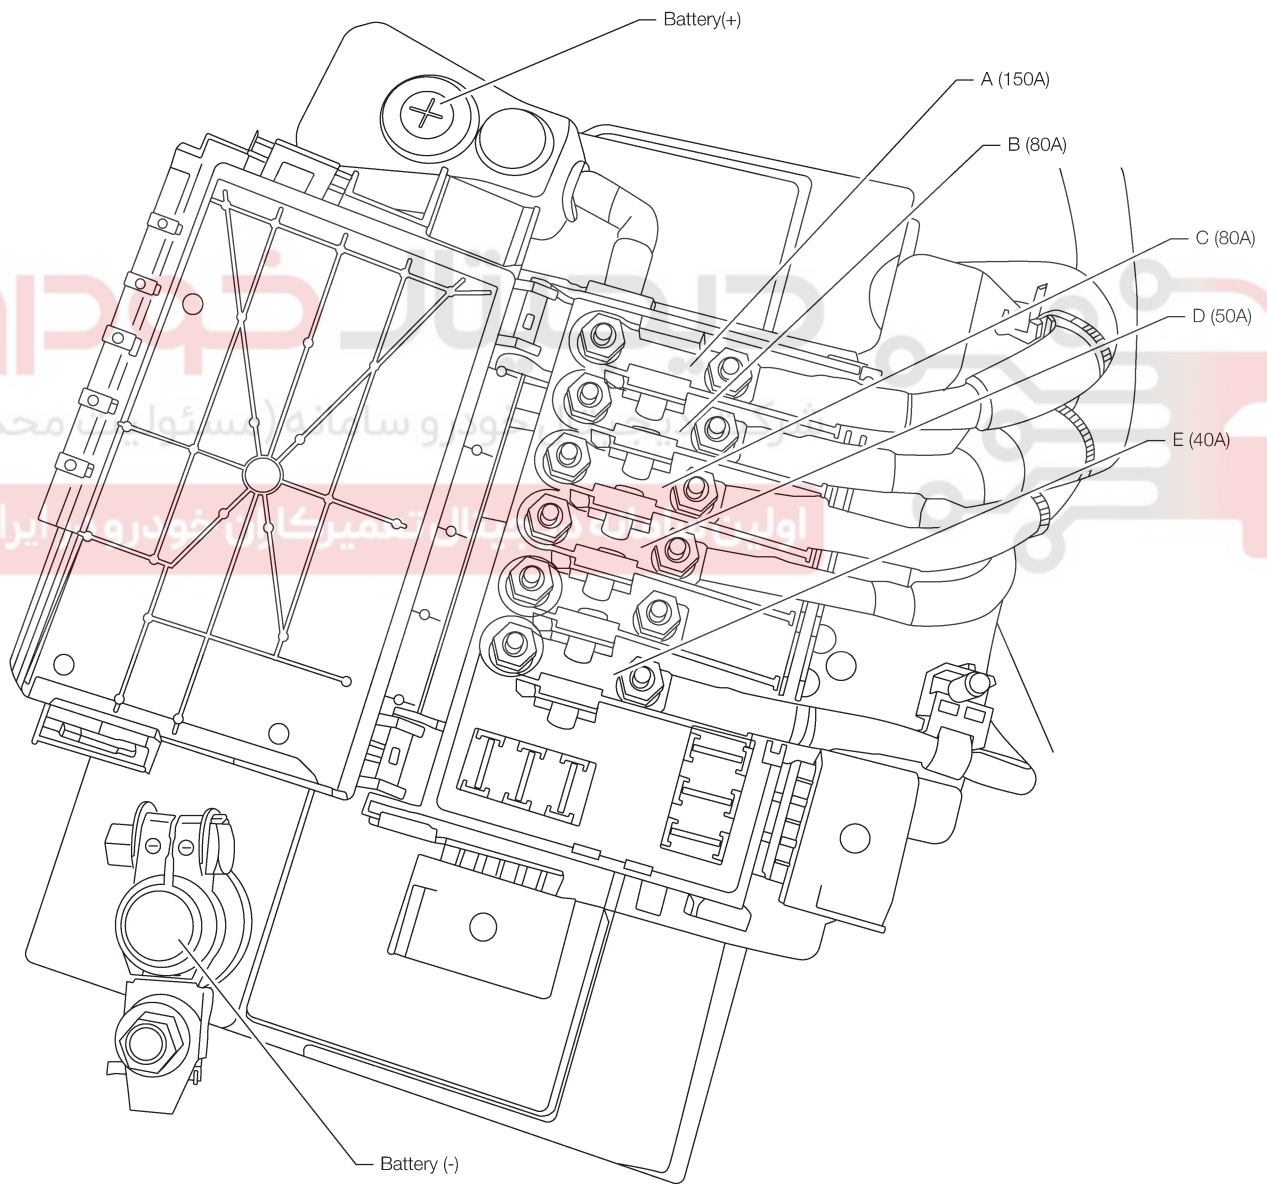

Front Fuse And Relay Box

Description

The front fuse and relay box houses many of the fuses and relays for the vehicles electrical system. The front fuse and relay box is located on the left side of the engine compartment just in front of the brake booster. The front fuse and relay box cannot be serviced it must be replaced as a unit.

Operation

All of the circuits entering and leaving the front fuse and relay box do so through separate wires. There are NO separate wiring harness connectors that connect to the front fuse and relay box. Each circuit is connected individually to the front fuse and relay box, and held in place by the use of connector retention combs.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



GENERAL INFORMATION

Overview

Front Fuse And Relay Box

