



Instrument Panel Relay Box
1. Position of Instrument Panel Fuse and Relay Box

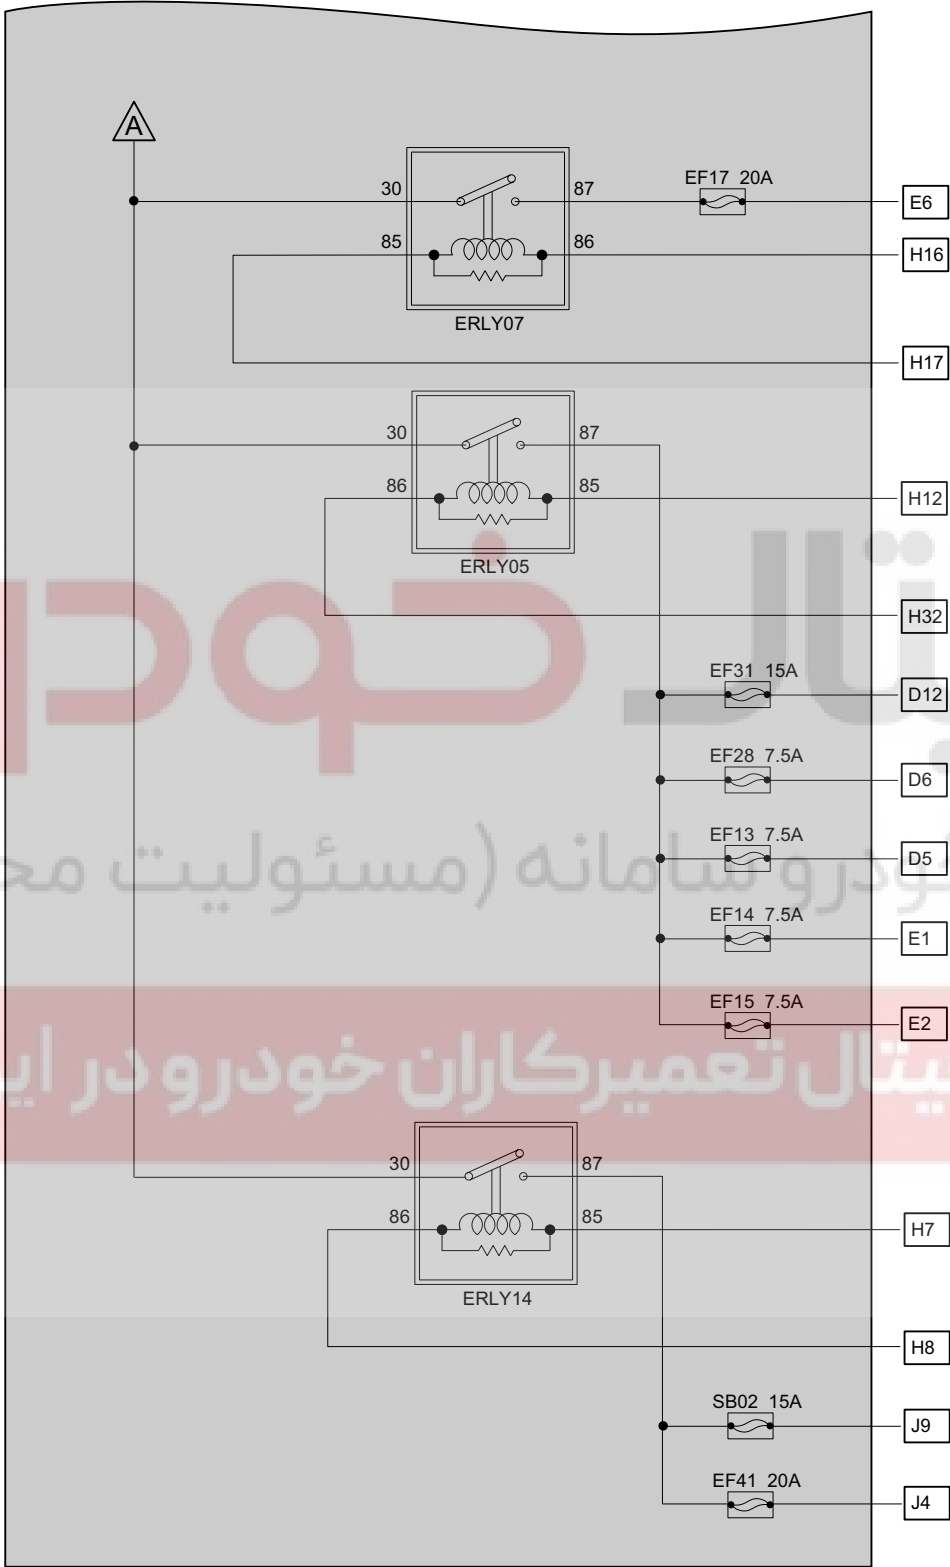


RFE0100

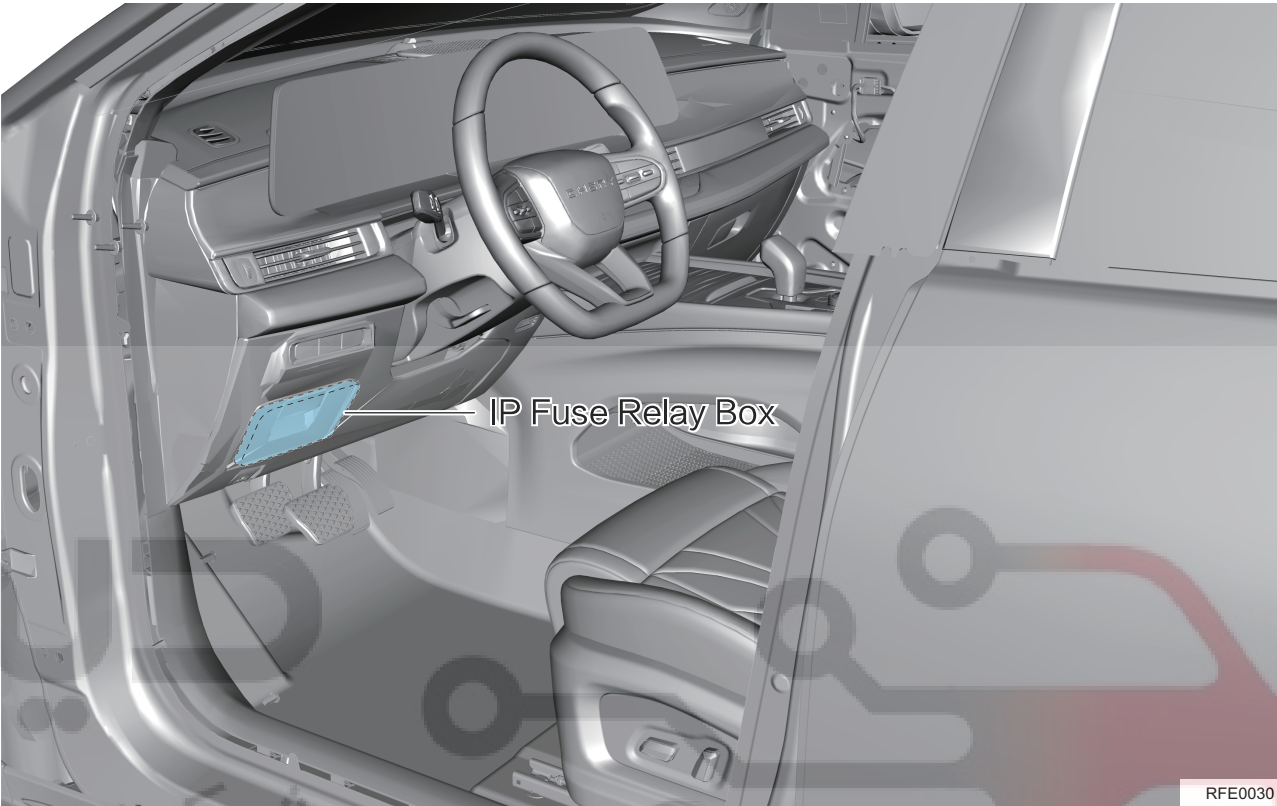

Fuse and Relay Information

2. Instrument Panel Fuse and Relay Box Layout

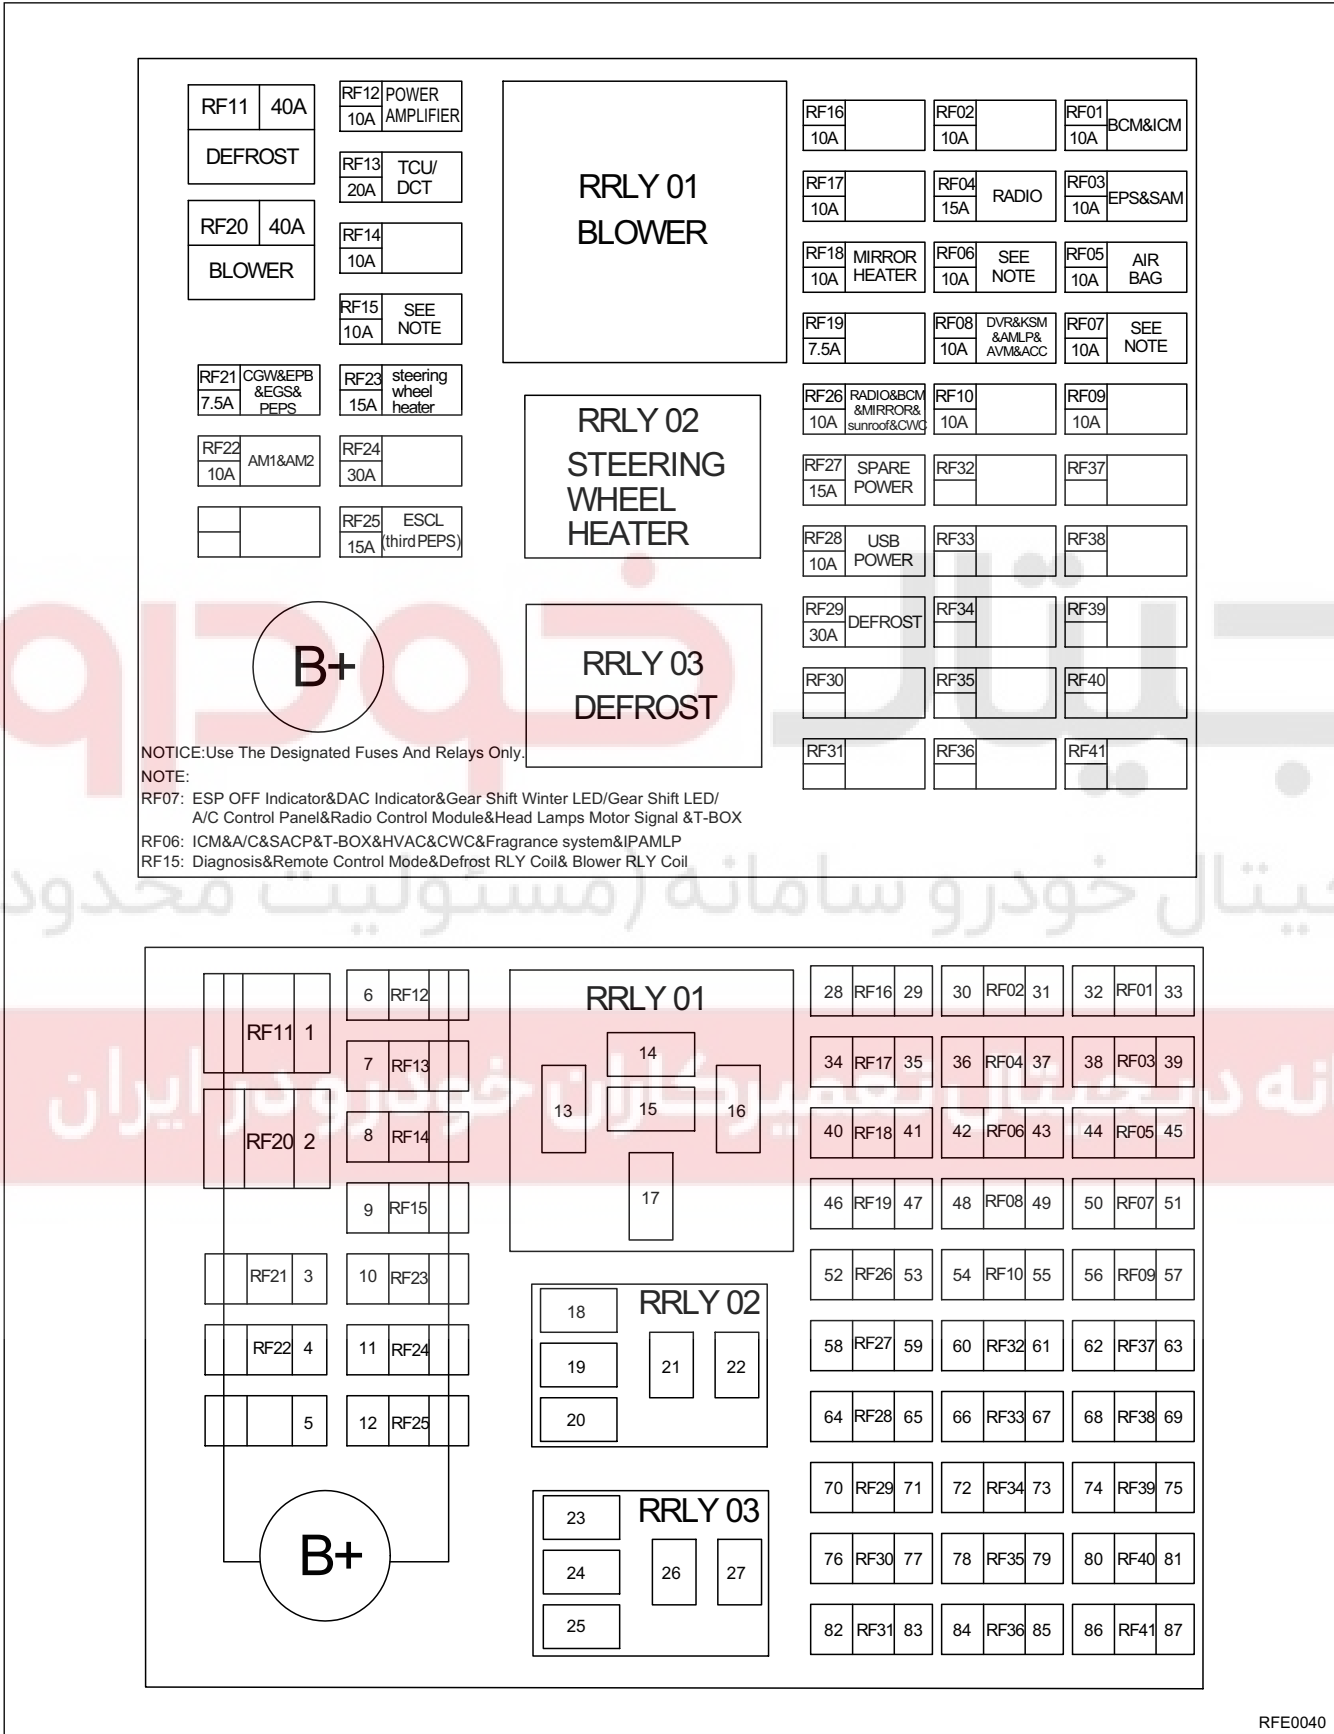

3. Description of Instrument Panel Fuse and Relay Box

Name	Load	Function	Name	Load	Function
RF01	10A	BCM/Domain Controller (Audio)/PEPS/Central Gate-way/Instrument Cluster/E call Module/GLONASS Module	RF16	10A	-
RF02	10A	Rear USB Charging Module	RF17	10A	-
RF03	10A	Electronic Power Steering EPS/Angle Sensor	RF18	10A	Rear View Mirror Heating
RF04	15A	Domain Controller (Audio)	RF19	7.5A	-
RF05	10A	Airbag Controller	RF20	40A	Blower Relay
RF06	10A	Instrument Cluster/IP Ambient Light/Auto A/C System/Auto A/ C Panel/Mobile Wireless Charging Module	RF21	7.5A	PEPS/Central Gateway/Elec-tronic Shift Actuator/EPB SW (Electronic Shift)
RF07	10A	Electronic Shift Actuator/Auto A/C Control Module-A/Auto A/ C Panel/Anti-glare Rear View Mirror	RF22	-	-
RF08	10A	Door Ambient Light/E call Module/GLONASS Module	RF23	15A	Steering Wheel Heating
RF09	10A	-	RF24	30A	-
RF10	10A	-	RF25	15A	-
RF11	40A	Rear Defroster Relay	RF26	10A	BCM/Domain Controller (Audio)/Rear View Mirror Ad-justment Switch/Mobile Wire-less Charging Module/Seat Heating Relay
RF12	10A	-	RF27	15A	Backup Power
RF13	20A	Transmission TCU (CVT25)	RF28	10A	Quick Charge/Driving Record-er Charging Port
RF14	10A	-	RF29	30A	Rear Defroster Positive
RF15	10A	Blower Relay/Diagnostic Inter-face/Rear Defroster Relay			

4. Instrument Panel F/R Box Inner Circuit

