


vehicle speed information

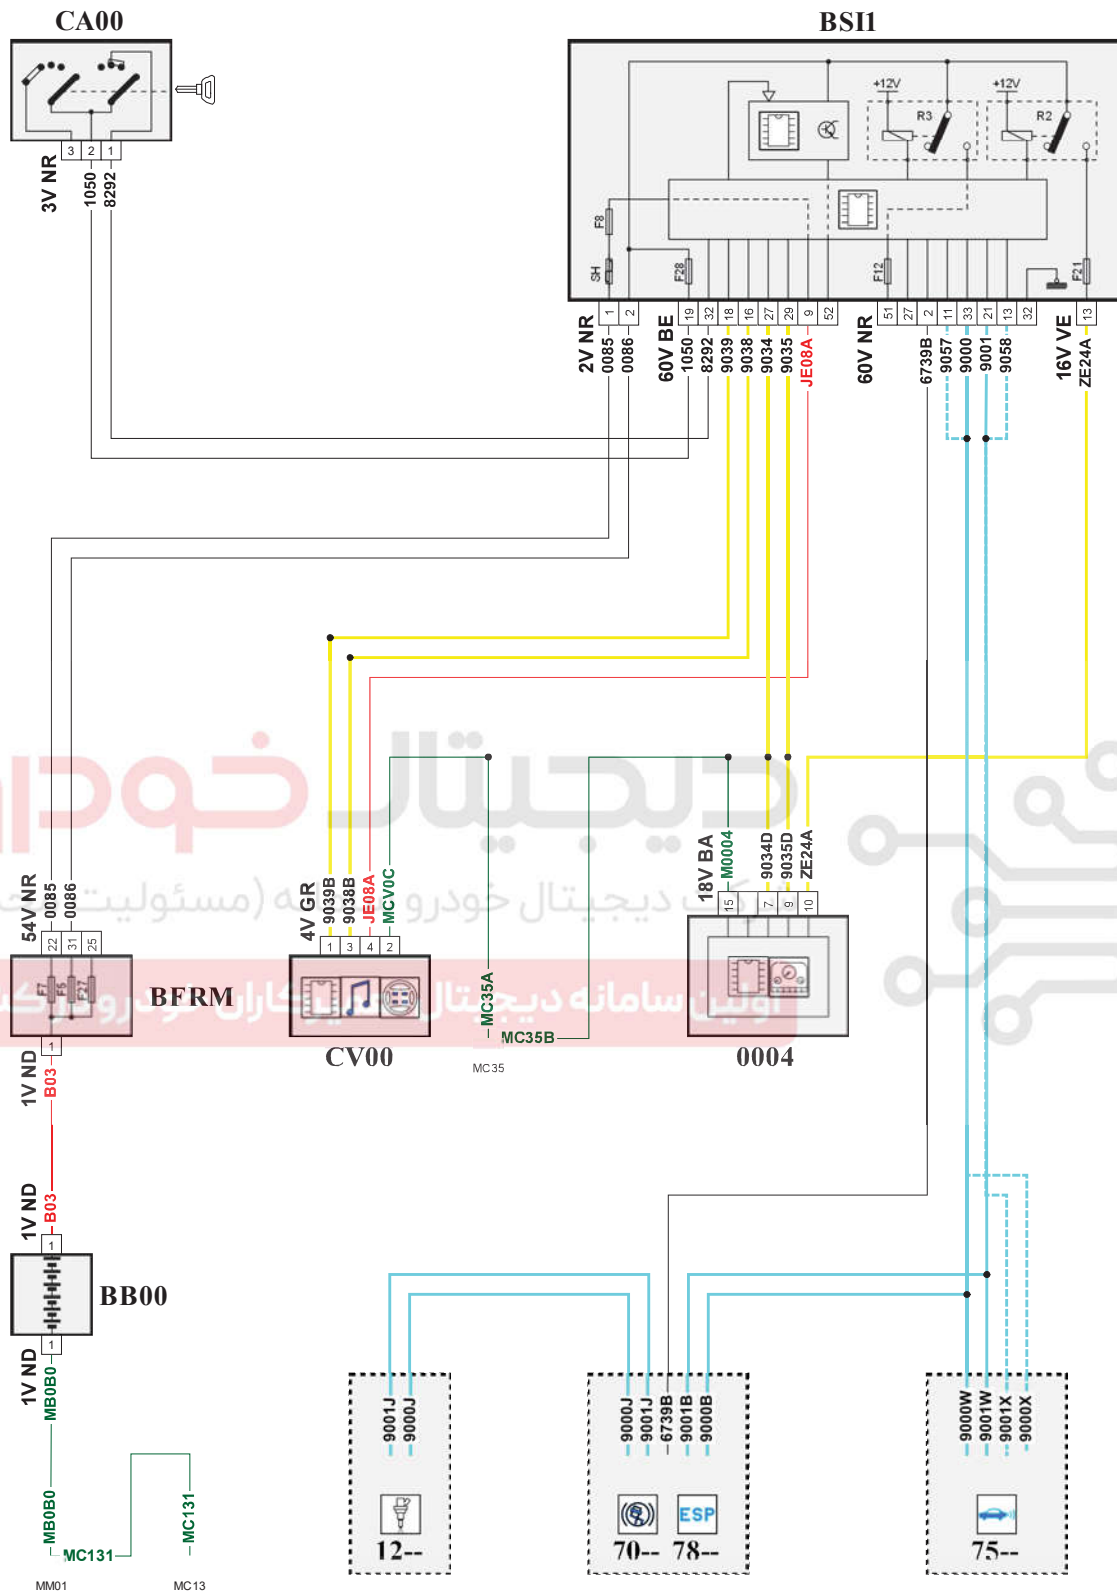

D3CZK17R

vehicle speed information

item code	description	information
0004	null	/ instrument panel
1320	null	engine management ECU /
7500	null	Parking assistance ECU
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E900C	null	crimp one information (or equipotential 900C) wire
E900G	null	crimp one information (or equipotential 900G) wire
E901C	null	crimp one information (or equipotential 901C) wire
E901G	null	crimp one information (or equipotential 901) wire
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
E907	null	crimp one information (or equipotential 907) wire
E908	null	crimp one information (or equipotential 908) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC35A	null	body earth point number 35
MM01	null	engine earth point number 01

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور