


Fuse & Relay Information

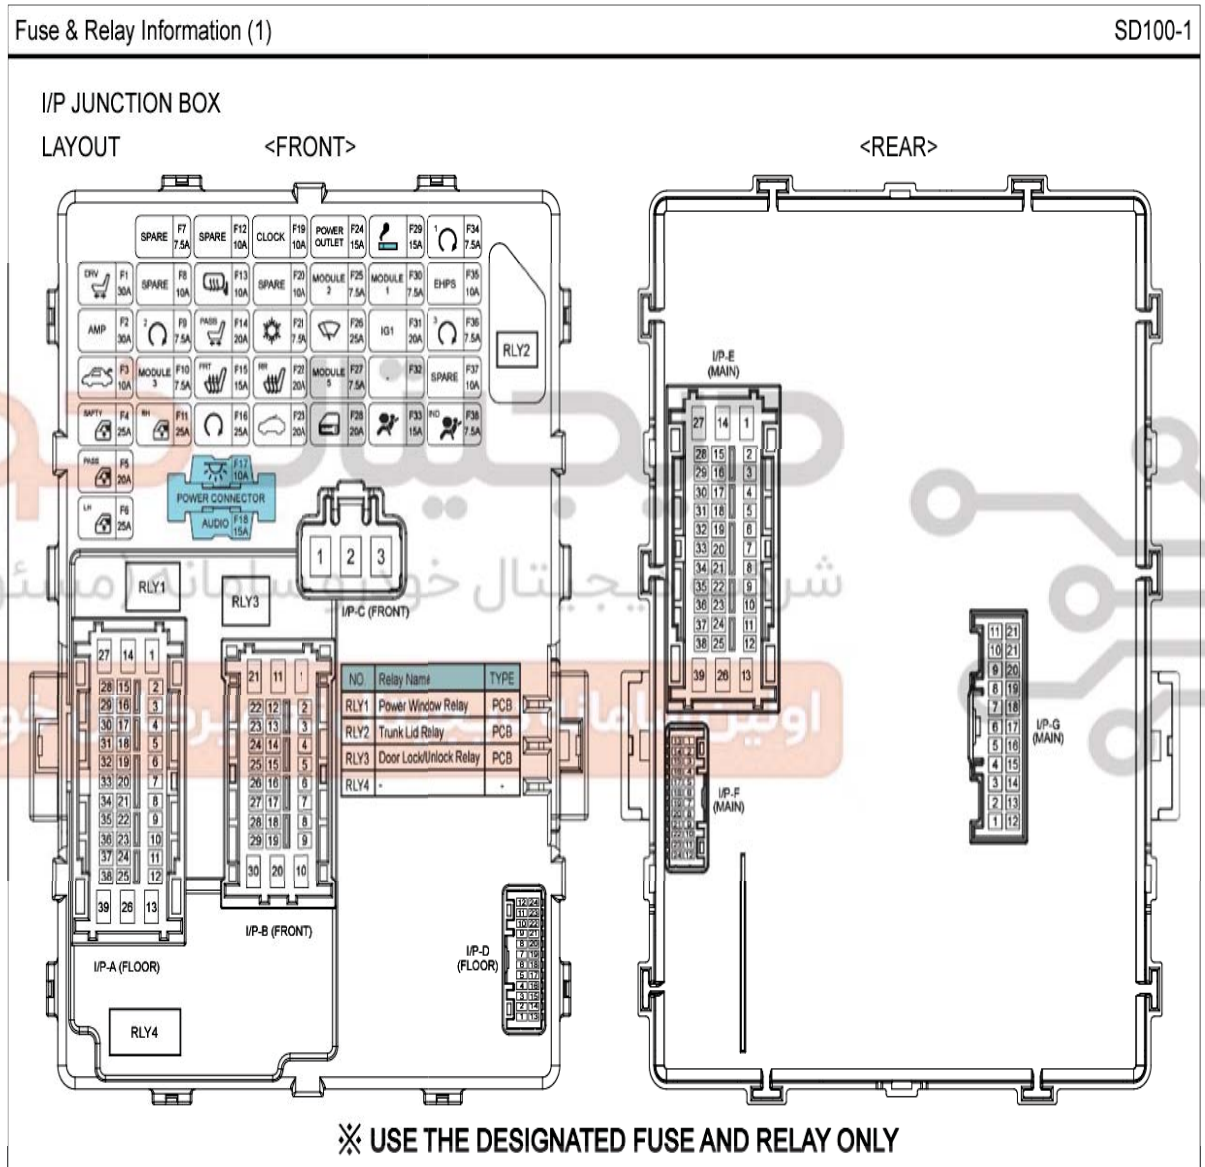

Fuse & Relay Information

Fuse & Relay Information (2)				SD100-2					
Circuit (I/P Junction Box)									
No.	(A)	Symbol	Fuse Name	Circuit Protected	No.	(A)	Symbol	Fuse Name	Circuit Protected
F1	30A		P/SEAT DRI	With IMS-Driver IMS Module, Driver Manual Switch	F20	10A		SPARE 1	-
F2	30A		AMP	AMP	F21	7.5A		A/CON	A/C Control Module, E/R Fuse & Relay Box(RLY.14)
F3	10A		TRUNK	Trunk Lid Relay, Trunk Room Lamp, Fuel Filler Door & Trunk Lid Switch	F22	20A		S/HTR RR	Rear Seat Warmer Switch LH/RH
F4	25A		SAFETY P/WDW	Safety Power Window Module	F23	20A		S/ROOF	Panorama Sunroof
F5	20A		P/WDW PASS	Passenger Power Window Switch	F24	15A		P/OUTLET	Front Power Outlet #2
F6	25A		P/WDW LH	Power Window Main Switch, Rear Power Window Switch LH	F25	7.5A		MODULE 2	BCM
F7	7.5A		SPARE 4	-	F26	25A		WIPER	E/R Fuse & Relay Box(RLY.11/RLY.12), Front Wiper Motor, Multifunction Switch(Wiper)
F8	10A		SPARE 5	-	F27	7.5A		MODULE 5	Driver IMS Module, Panorama Sunroof, PDM, Rain Sensor
F9	7.5A		PDM 2	FOB Holder, Start Stop Button Switch, PDM, Smart Key Module	F28	20A		DR LOCK	Door Lock/Unlock Relay
F10	7.5A		MODULE 3	Key Solenoid, Sport Mode Switch	F29	15A		C/LIGHTER	Front Power Outlet #1, Cigarette Lighter
F11	25A		P/WDW RH	Power Window Main Switch, Rear Power Window Switch RH	F30	7.5A		MODULE 1	Instrument Cluster(ON/START Input), Clock, Sport Mode Switch IND., Electro Chromic Mirror, Auto Head Lamp Leveling Device Module(Auto), Head Lamp Leveling Device Switch(Manual), Head Lamp Leveling Device Actuator LH/RH, Rear Parking Assist Sensor Side LH/RH, Audio, Rear Parking Assist Sensor Center LH/RH, Driver/Passenger Seat Warmer Module, BCM, Seat Belt Reminder Indicator(Australia)
F12	10A		SPARE 3	-	F31	20A		IG 1	E/R Fuse & Relay Box (Fuse - F10 /F11 /F12 /F13)
F13	10A		MIRR HTD	Driver/Passenger Power Outside Mirror	F32	-	-	-	-
F14	20A		P/SEAT PASS	Passenger Manual Switch	F33	15A		A/BAG	SRS Control Module
F15	15A		S/HTR FRT	Driver/Passenger Seat Warmer Module	F34	7.5A		START 1	W/O Smart Key-Ignition Lock Switch, Burglar Alarm Relay, E/R Fuse & Relay Box(RLY. 3) With Smart Key-PCM, PDM
F16	25A		PDM	PDM	F35	10A		MDPS	Yaw Rate Sensor, Steering Angle Sensor, ESP Off Switch
F17	10A		I.O.D POWER CONNECTOR	Power Outside Mirror Switch, Instrument Cluster, Driver/Passenger Door Lamp, Driver IMS Module, Ignition Key ILL. & Door Warning Switch, BCM, A/C Control Module, Room Lamp, Front Monitor, Glove Box Lamp, Data Link Connector, IMS Switch, Vanity Lamp LH/RH, Auto Light & Photo Sensor, RF Receiver, Overhead Console Lamp, Clock	F36	7.5A		PDM 3	PDM, Smart Key Module
F18	15A		AUDIO POWER CONNECTOR	Audio	F37	10A		SPARE 2	-
F19	10A		CLOCK	BCM, Clock, Front Monitor, Smart Key Module, PDM, Audio, Power Outside Mirror Switch, AMP, Overhead Console Lamp	F38	7.5A		A/BAG IND.	Instrument Cluster(IND.)

✘ USE THE DESIGNATED FUSE AND RELAY ONLY