


CHAPTER 3. SCHEMATIC DIAGRAM

(4). ECU (F4J20)


4.1. Electronic Accelerator Pedal, GPF Front Temperature Sensor, Canister Close Valve, Brake Switch, Knock Sensor

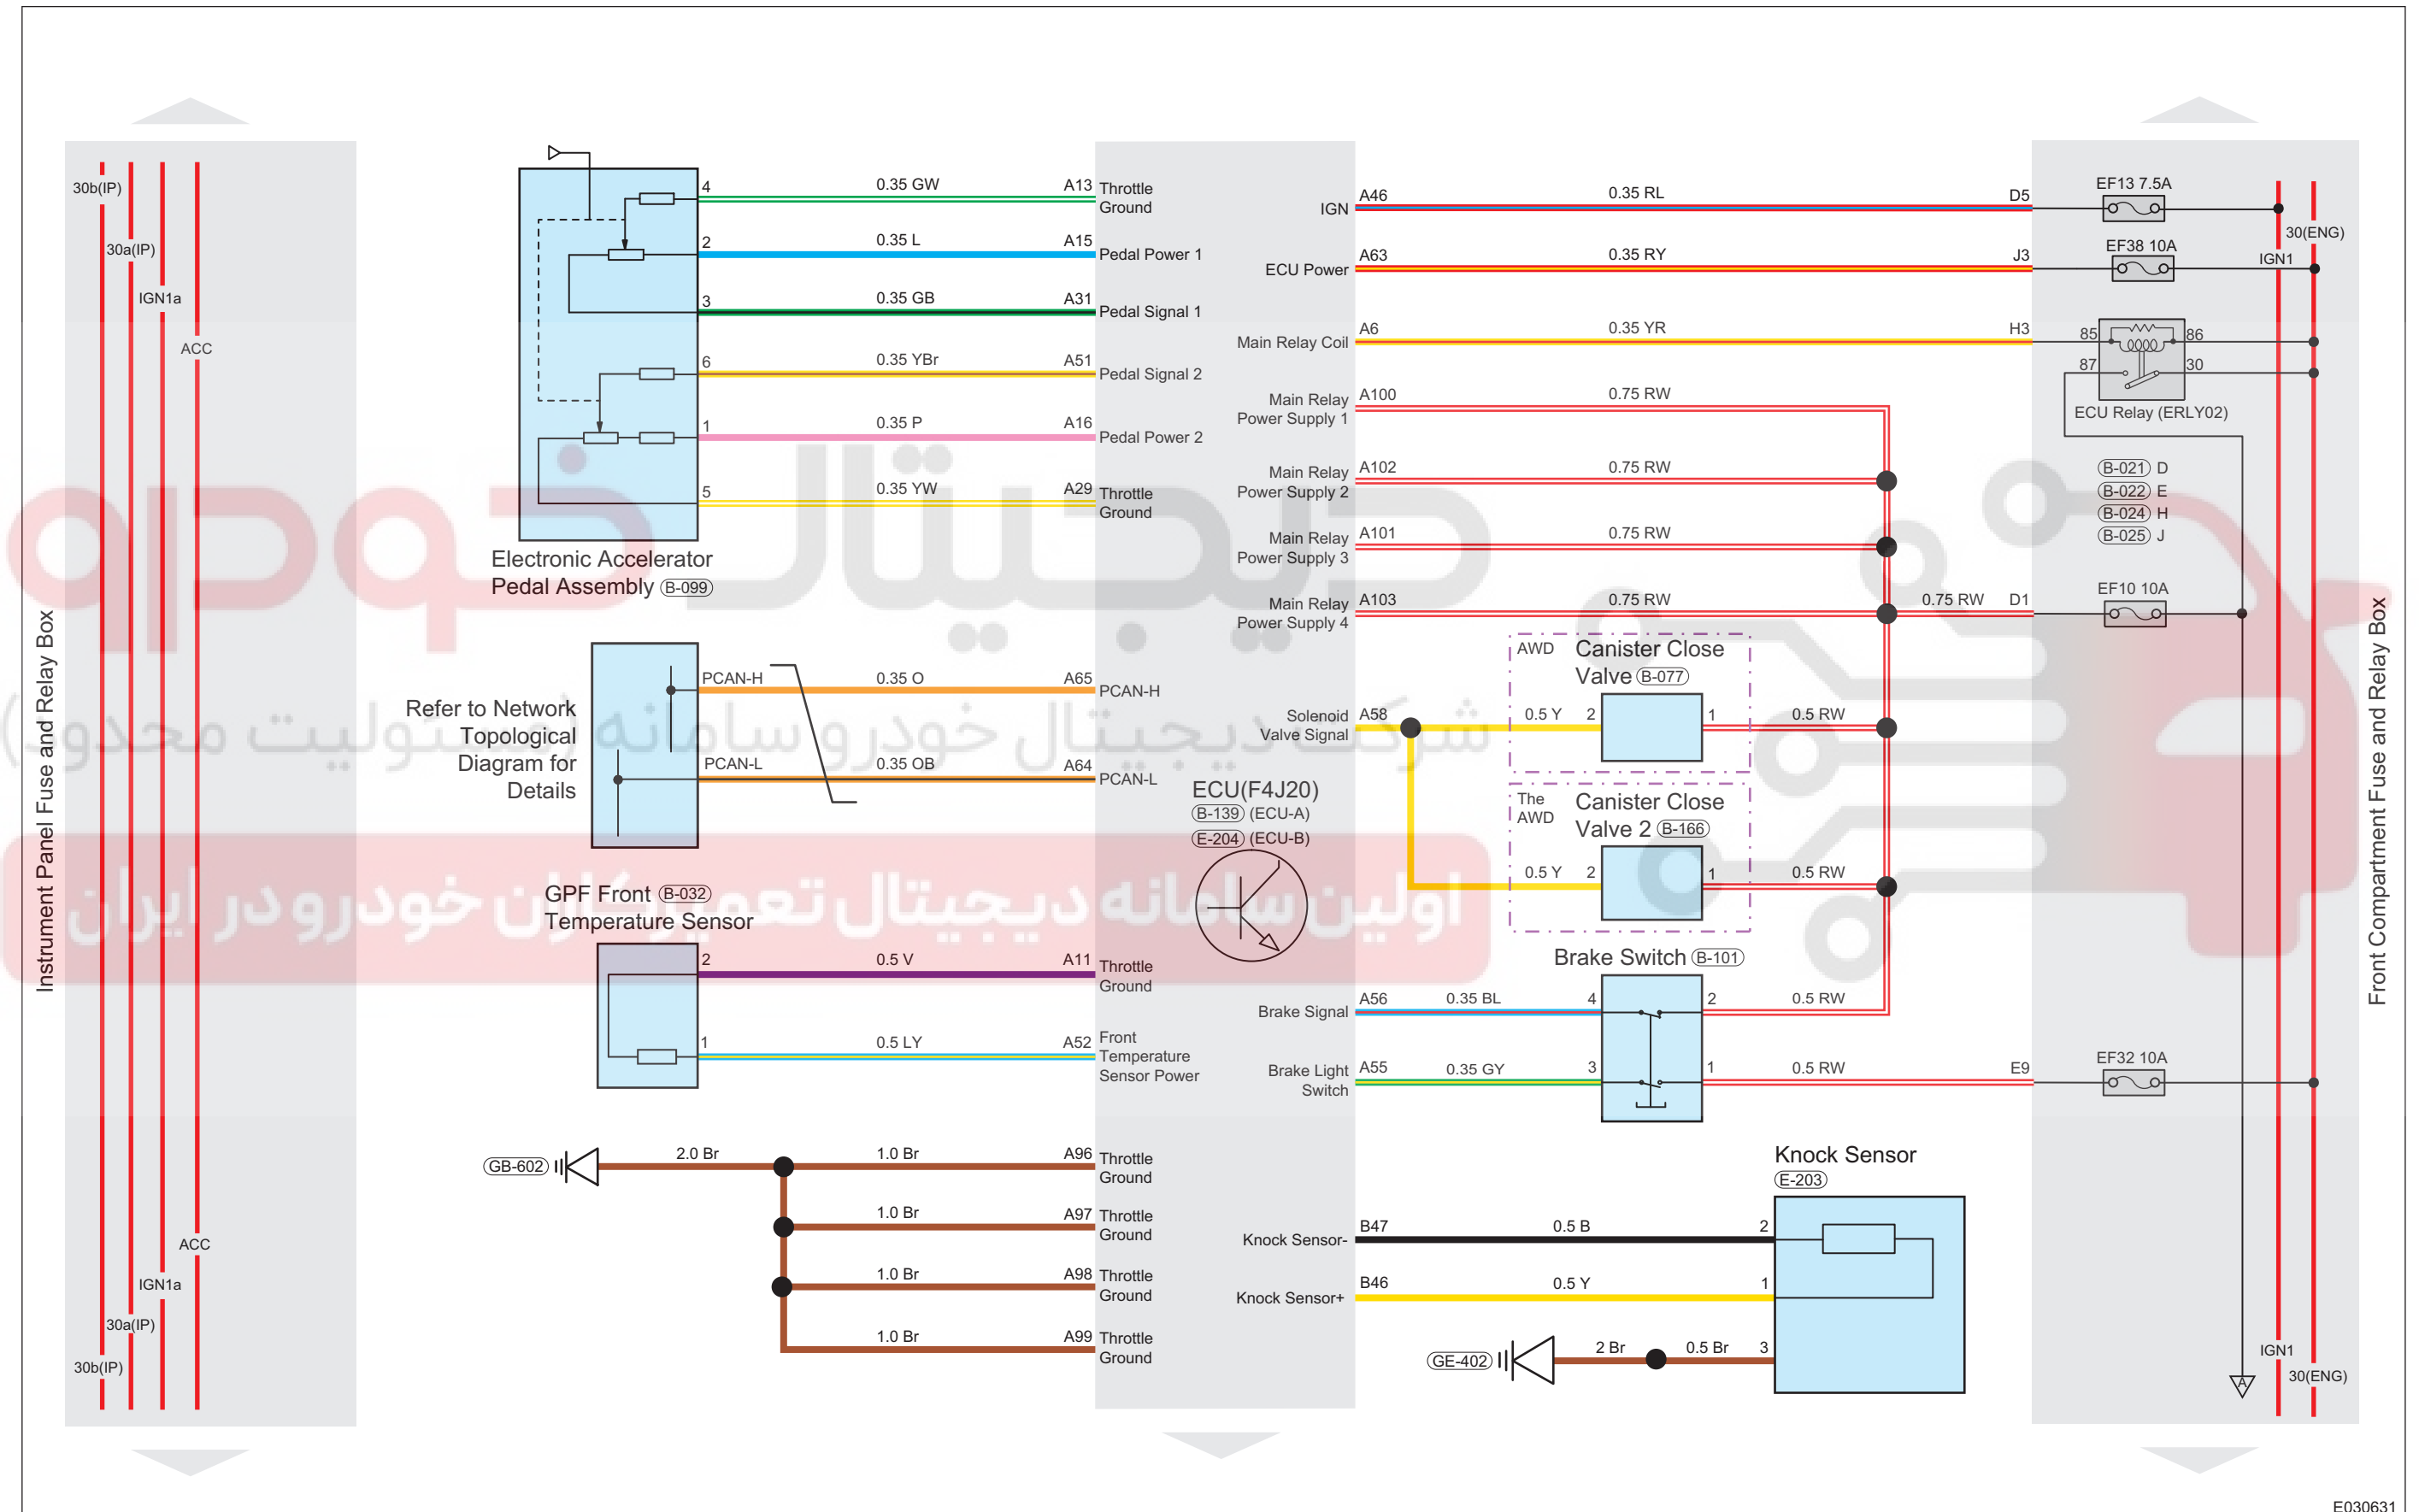

E030631

CHAPTER 3. SCHEMATIC DIAGRAM


4.2. Fuel Rail Sensor, Electronic Waste Gate, Water Temperature Sensor, Oxygen Sensor, Electronic Thermostat, A/C Compressor Clutch Switch

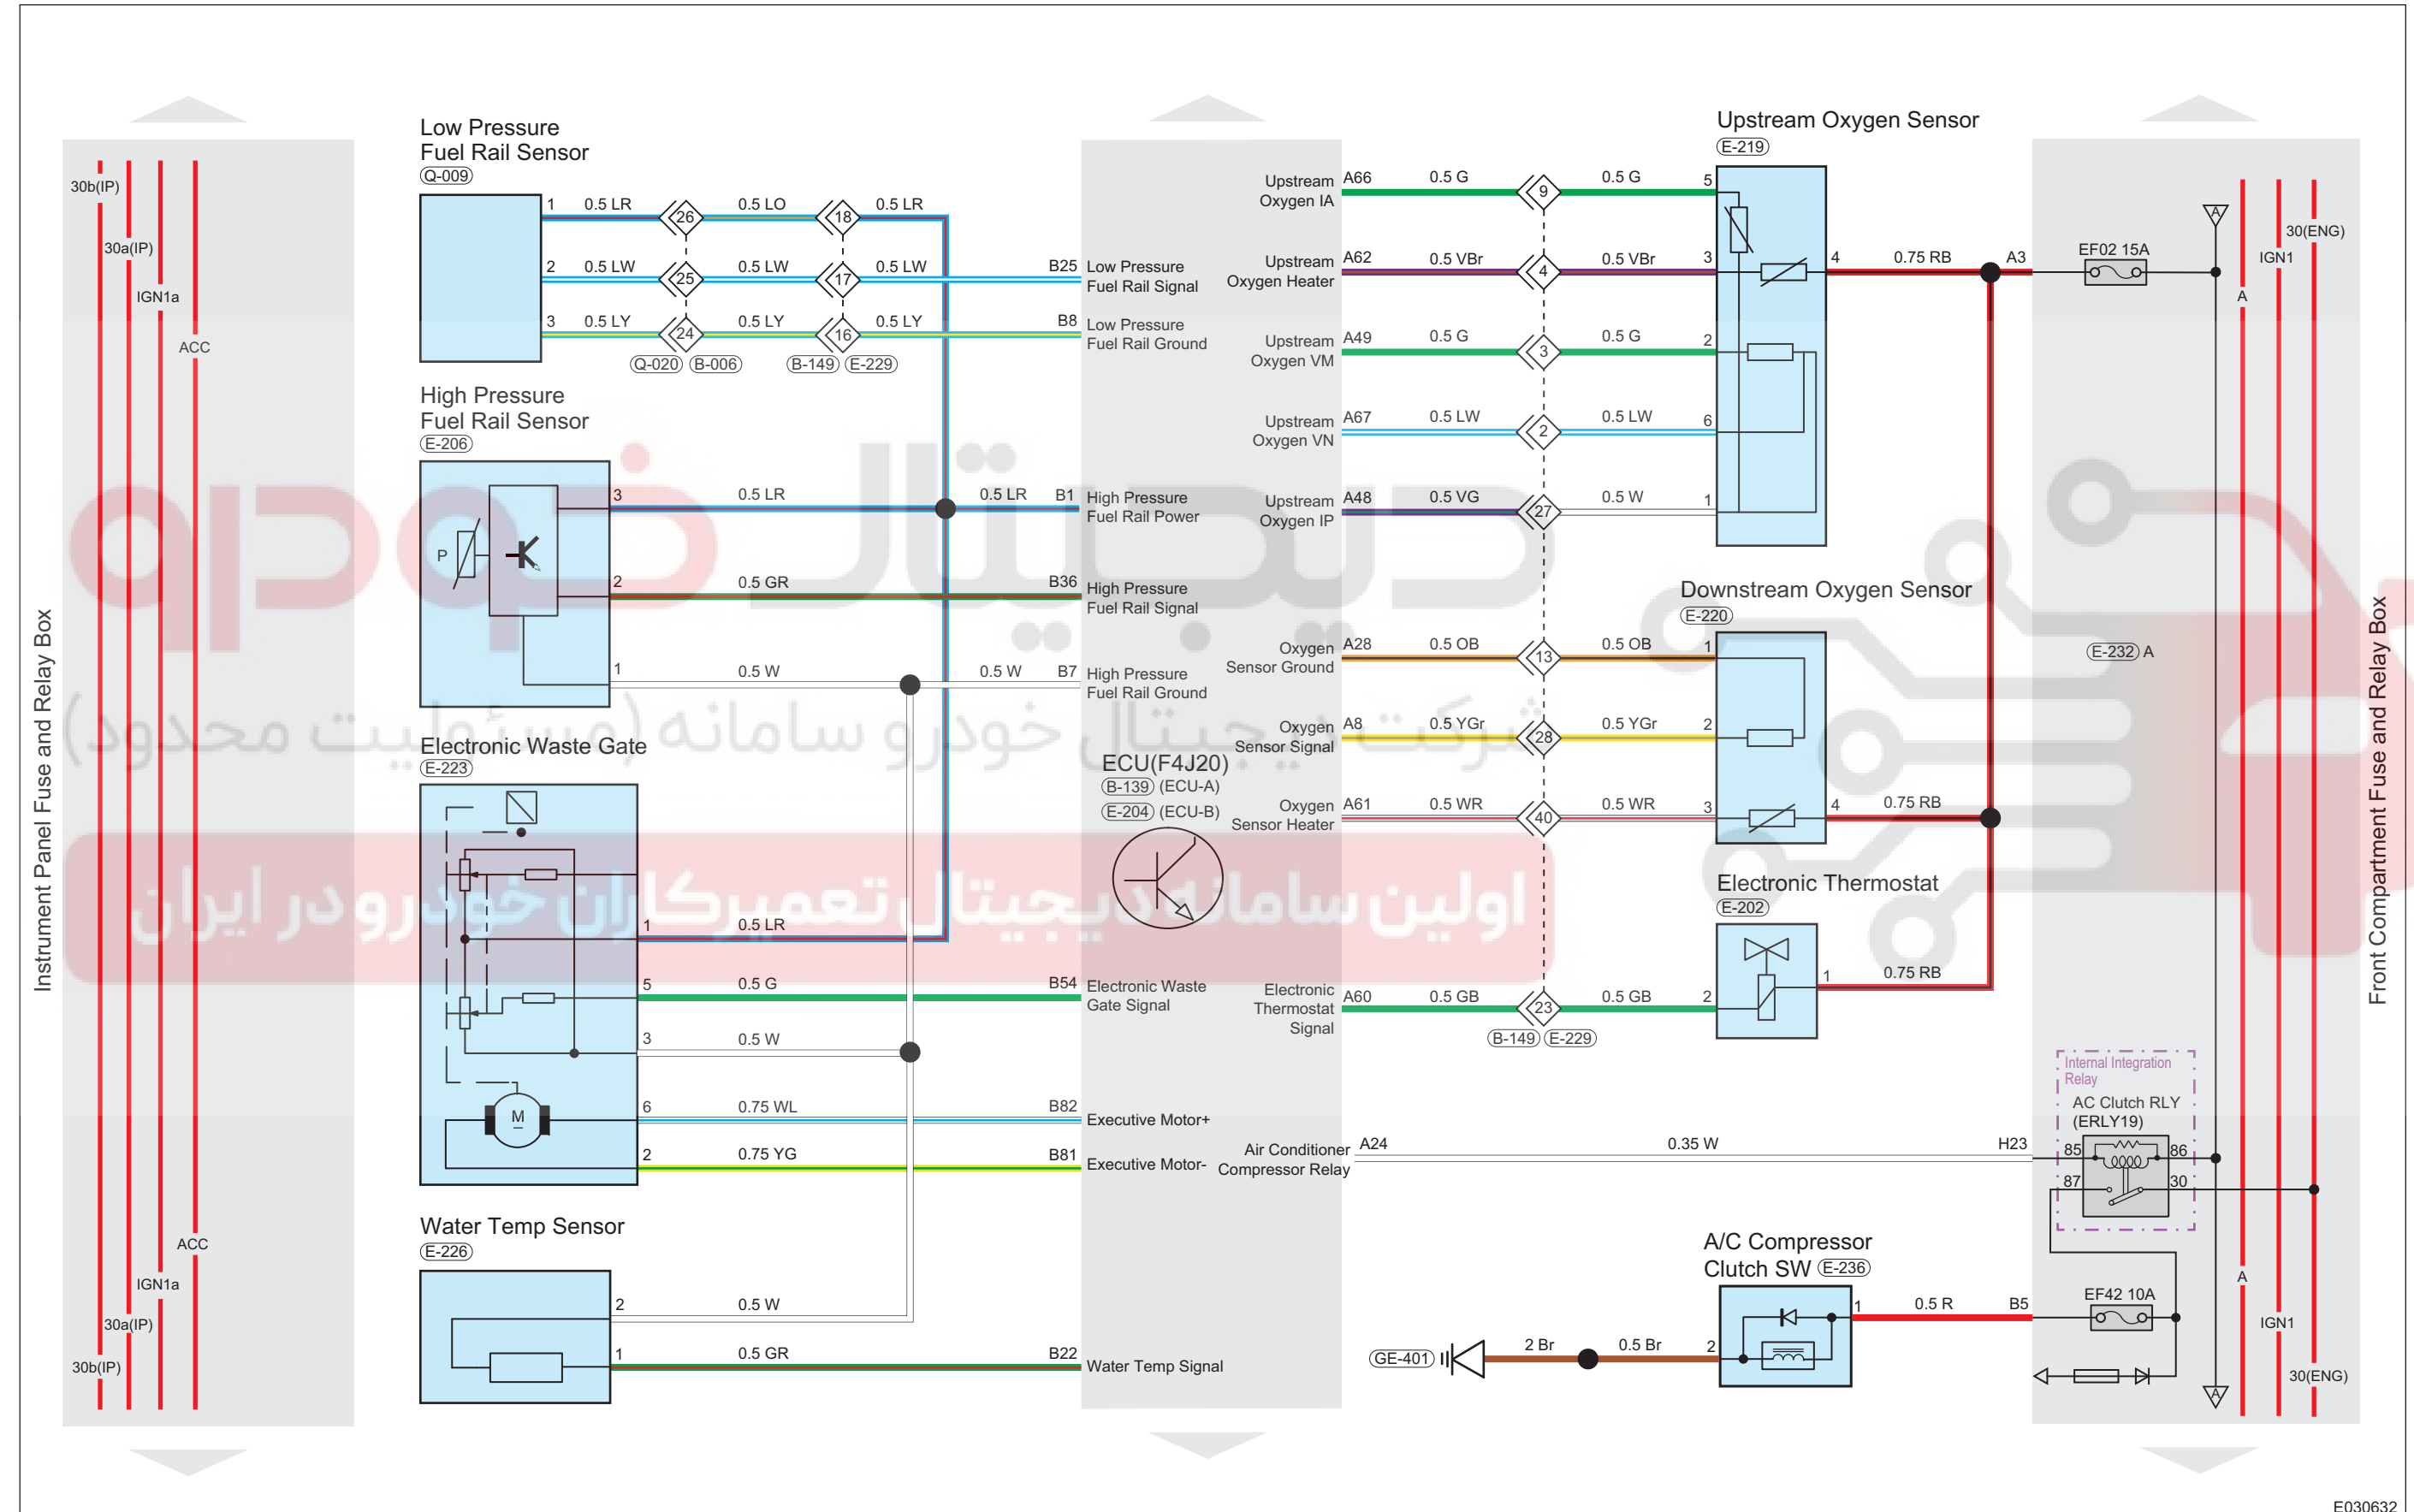

E030632

CHAPTER 3. SCHEMATIC DIAGRAM


4.3. GPF Differential Pressure Sensor, Phase Sensor, Variable Valve, ERCV Relief Control Valve, Variable Oil Pump, Crankshaft Ventilation Box Heater

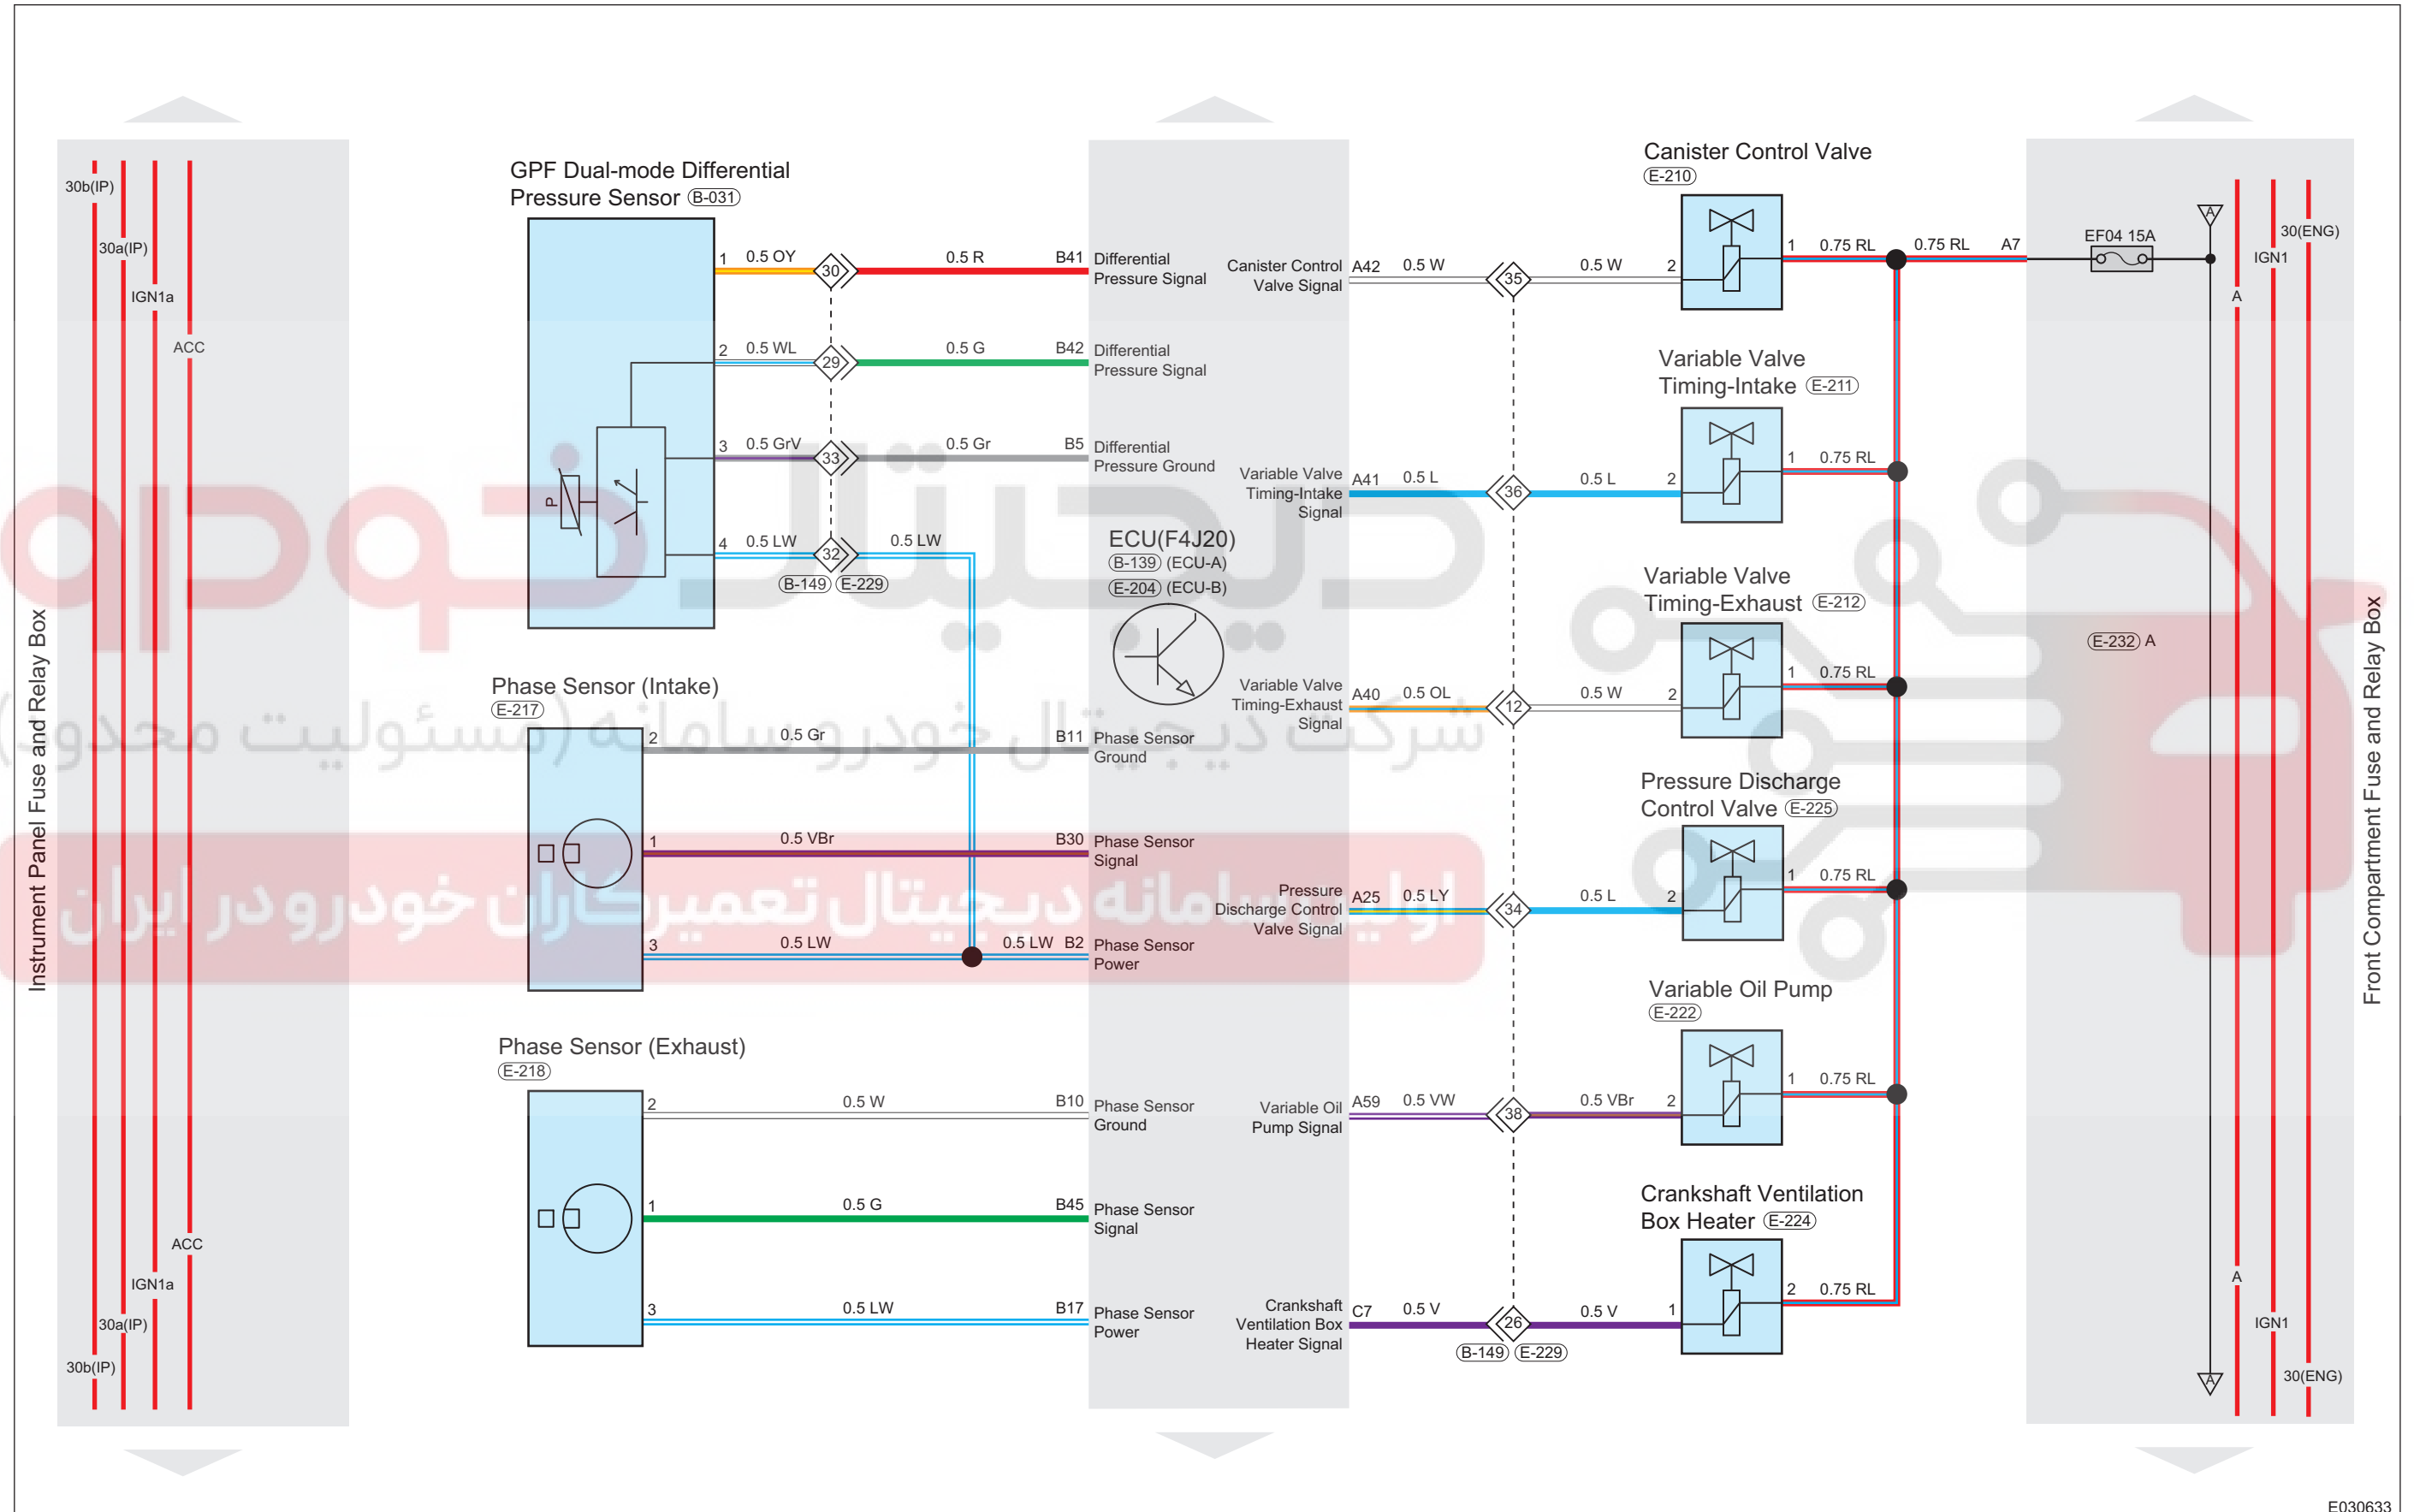

E030633

CHAPTER 3. SCHEMATIC DIAGRAM


4.4. Pressure Sensor, Brake Vacuum Sensor, Variable Oil Pump Controller, Cooling Fan Controller, Auxiliary Fascia Console Switch Assembly

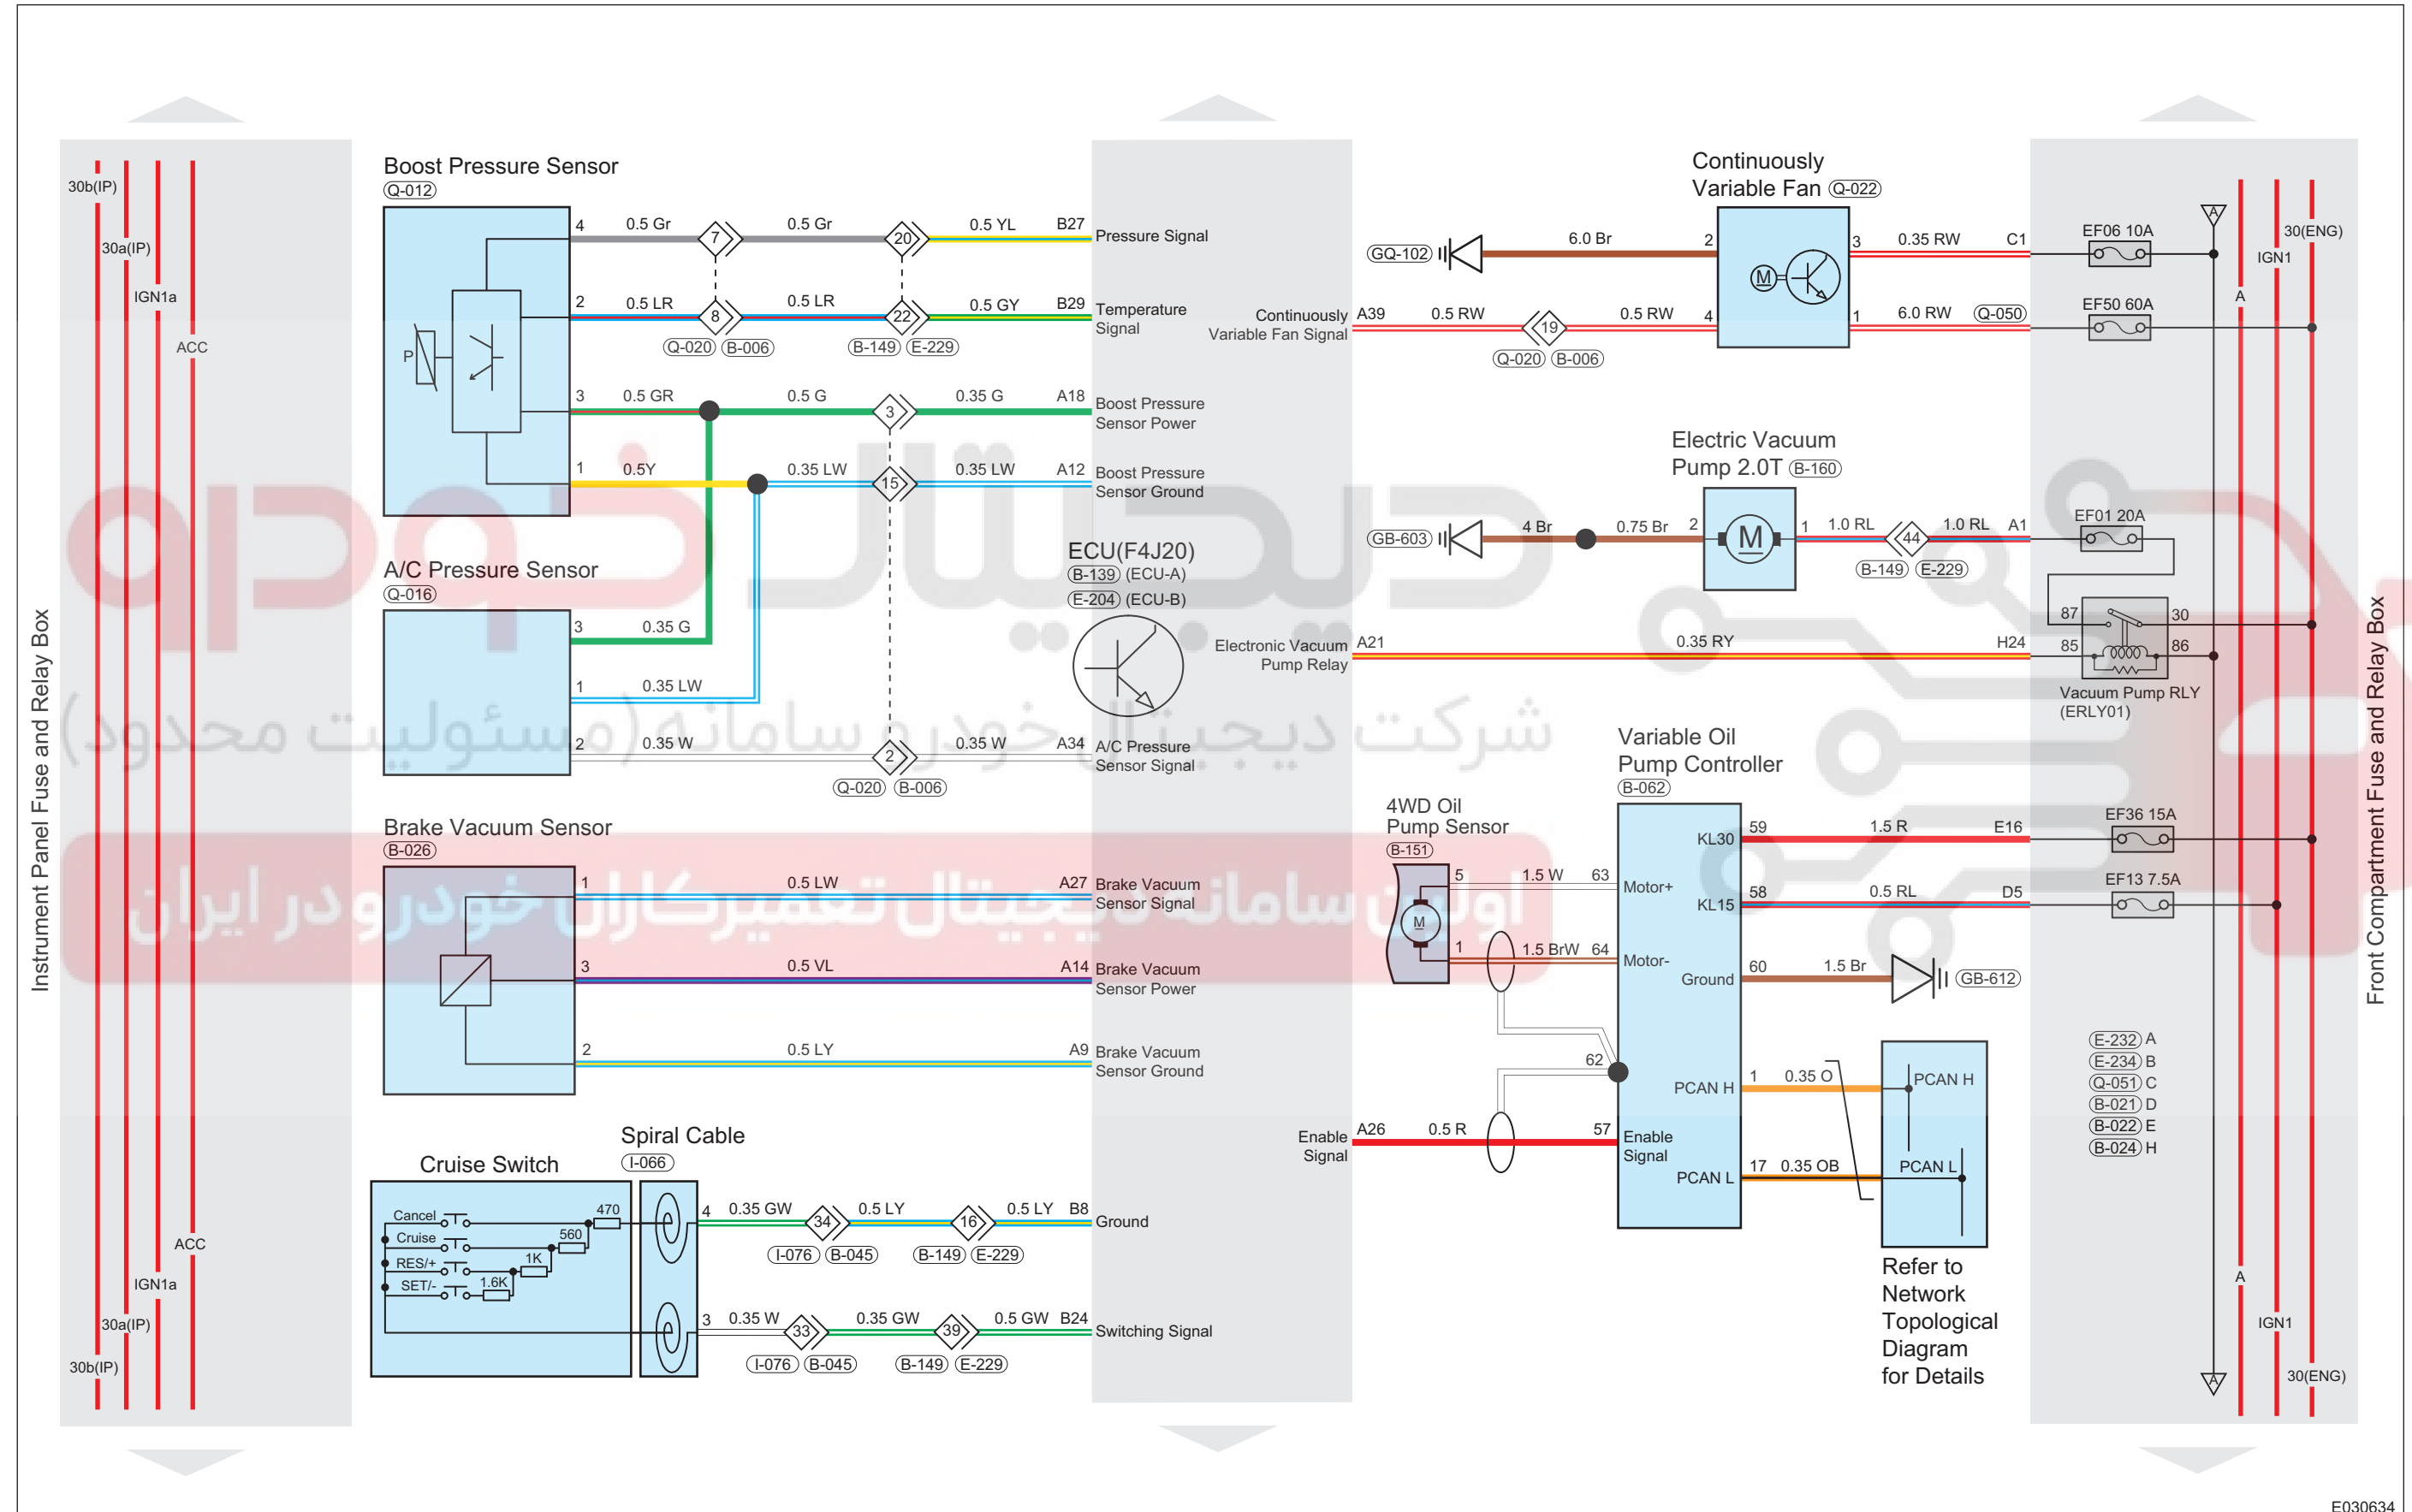

E030634

CHAPTER 3. SCHEMATIC DIAGRAM


4.5. Electronic Throttle, Fuel Tank Pressure Sensor, Water Temperature Sensor, 4WD Pump Motor

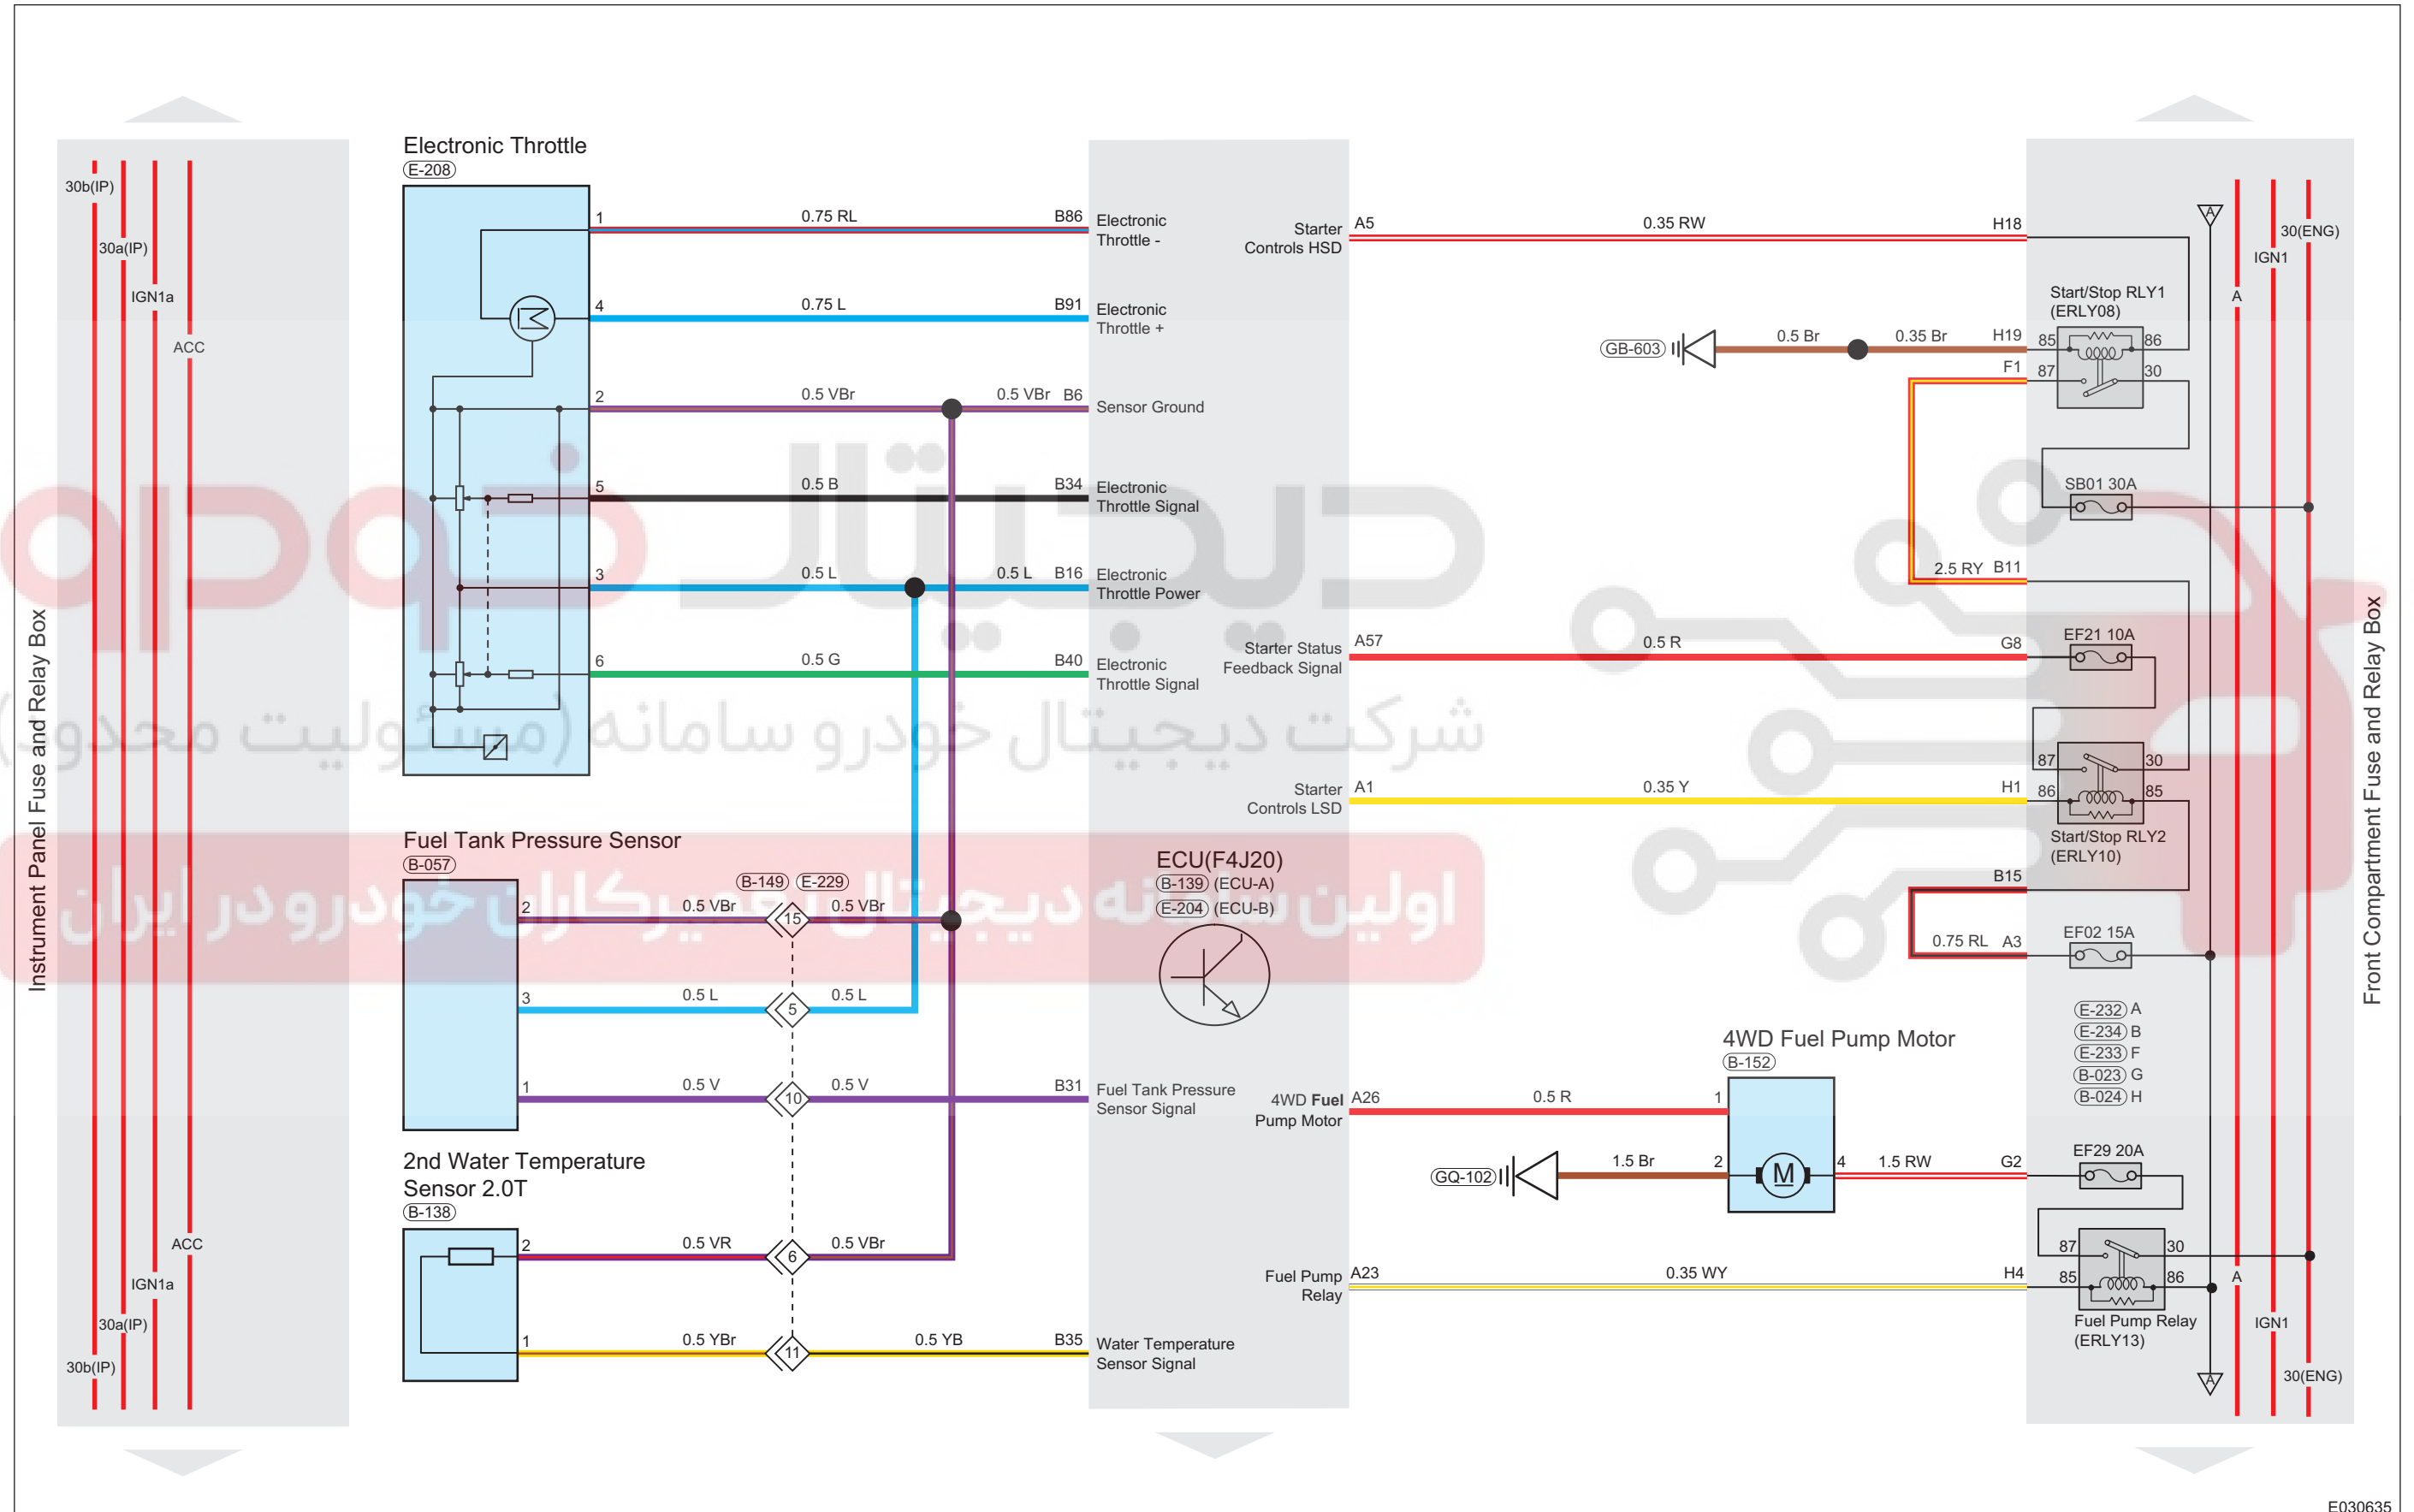


E030635

CHAPTER 3. SCHEMATIC DIAGRAM

4.6. Injection Nozzle, High Pressure Fuel Pump, Ignition Coil

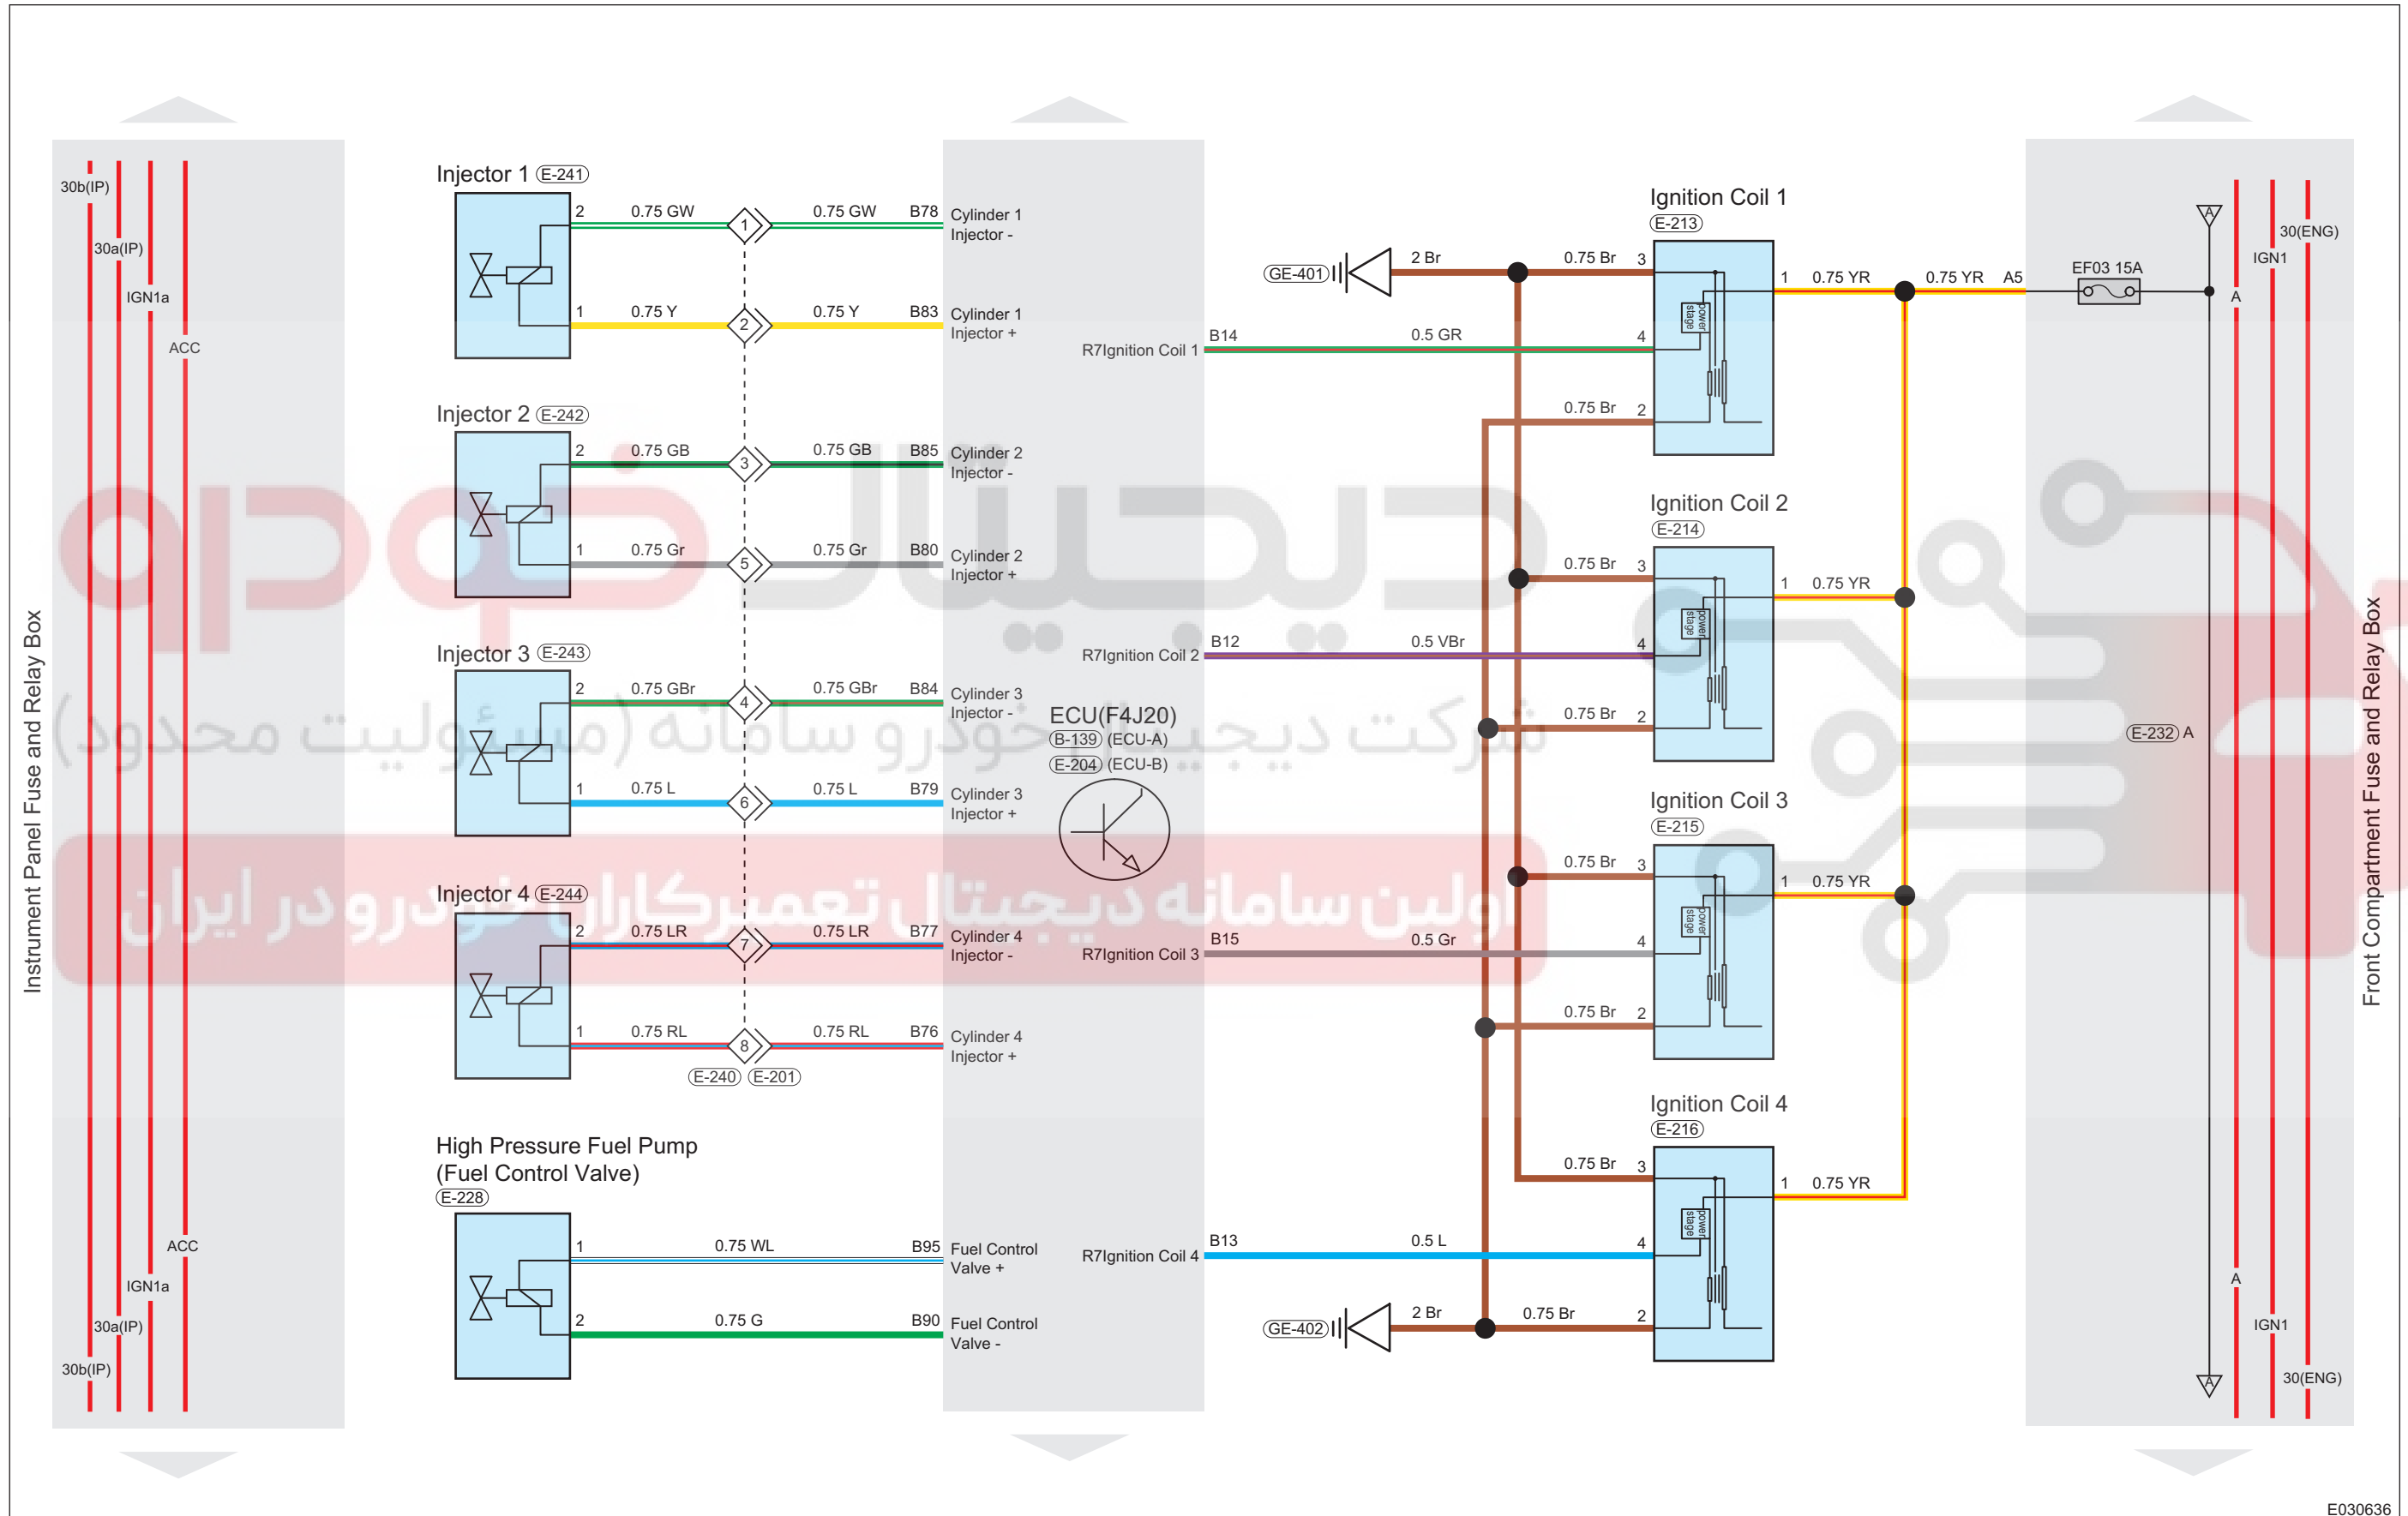

4.7. Speed Sensor, Intake Air Pressure and Temperature Sensor, Desorption Pressure Sensor

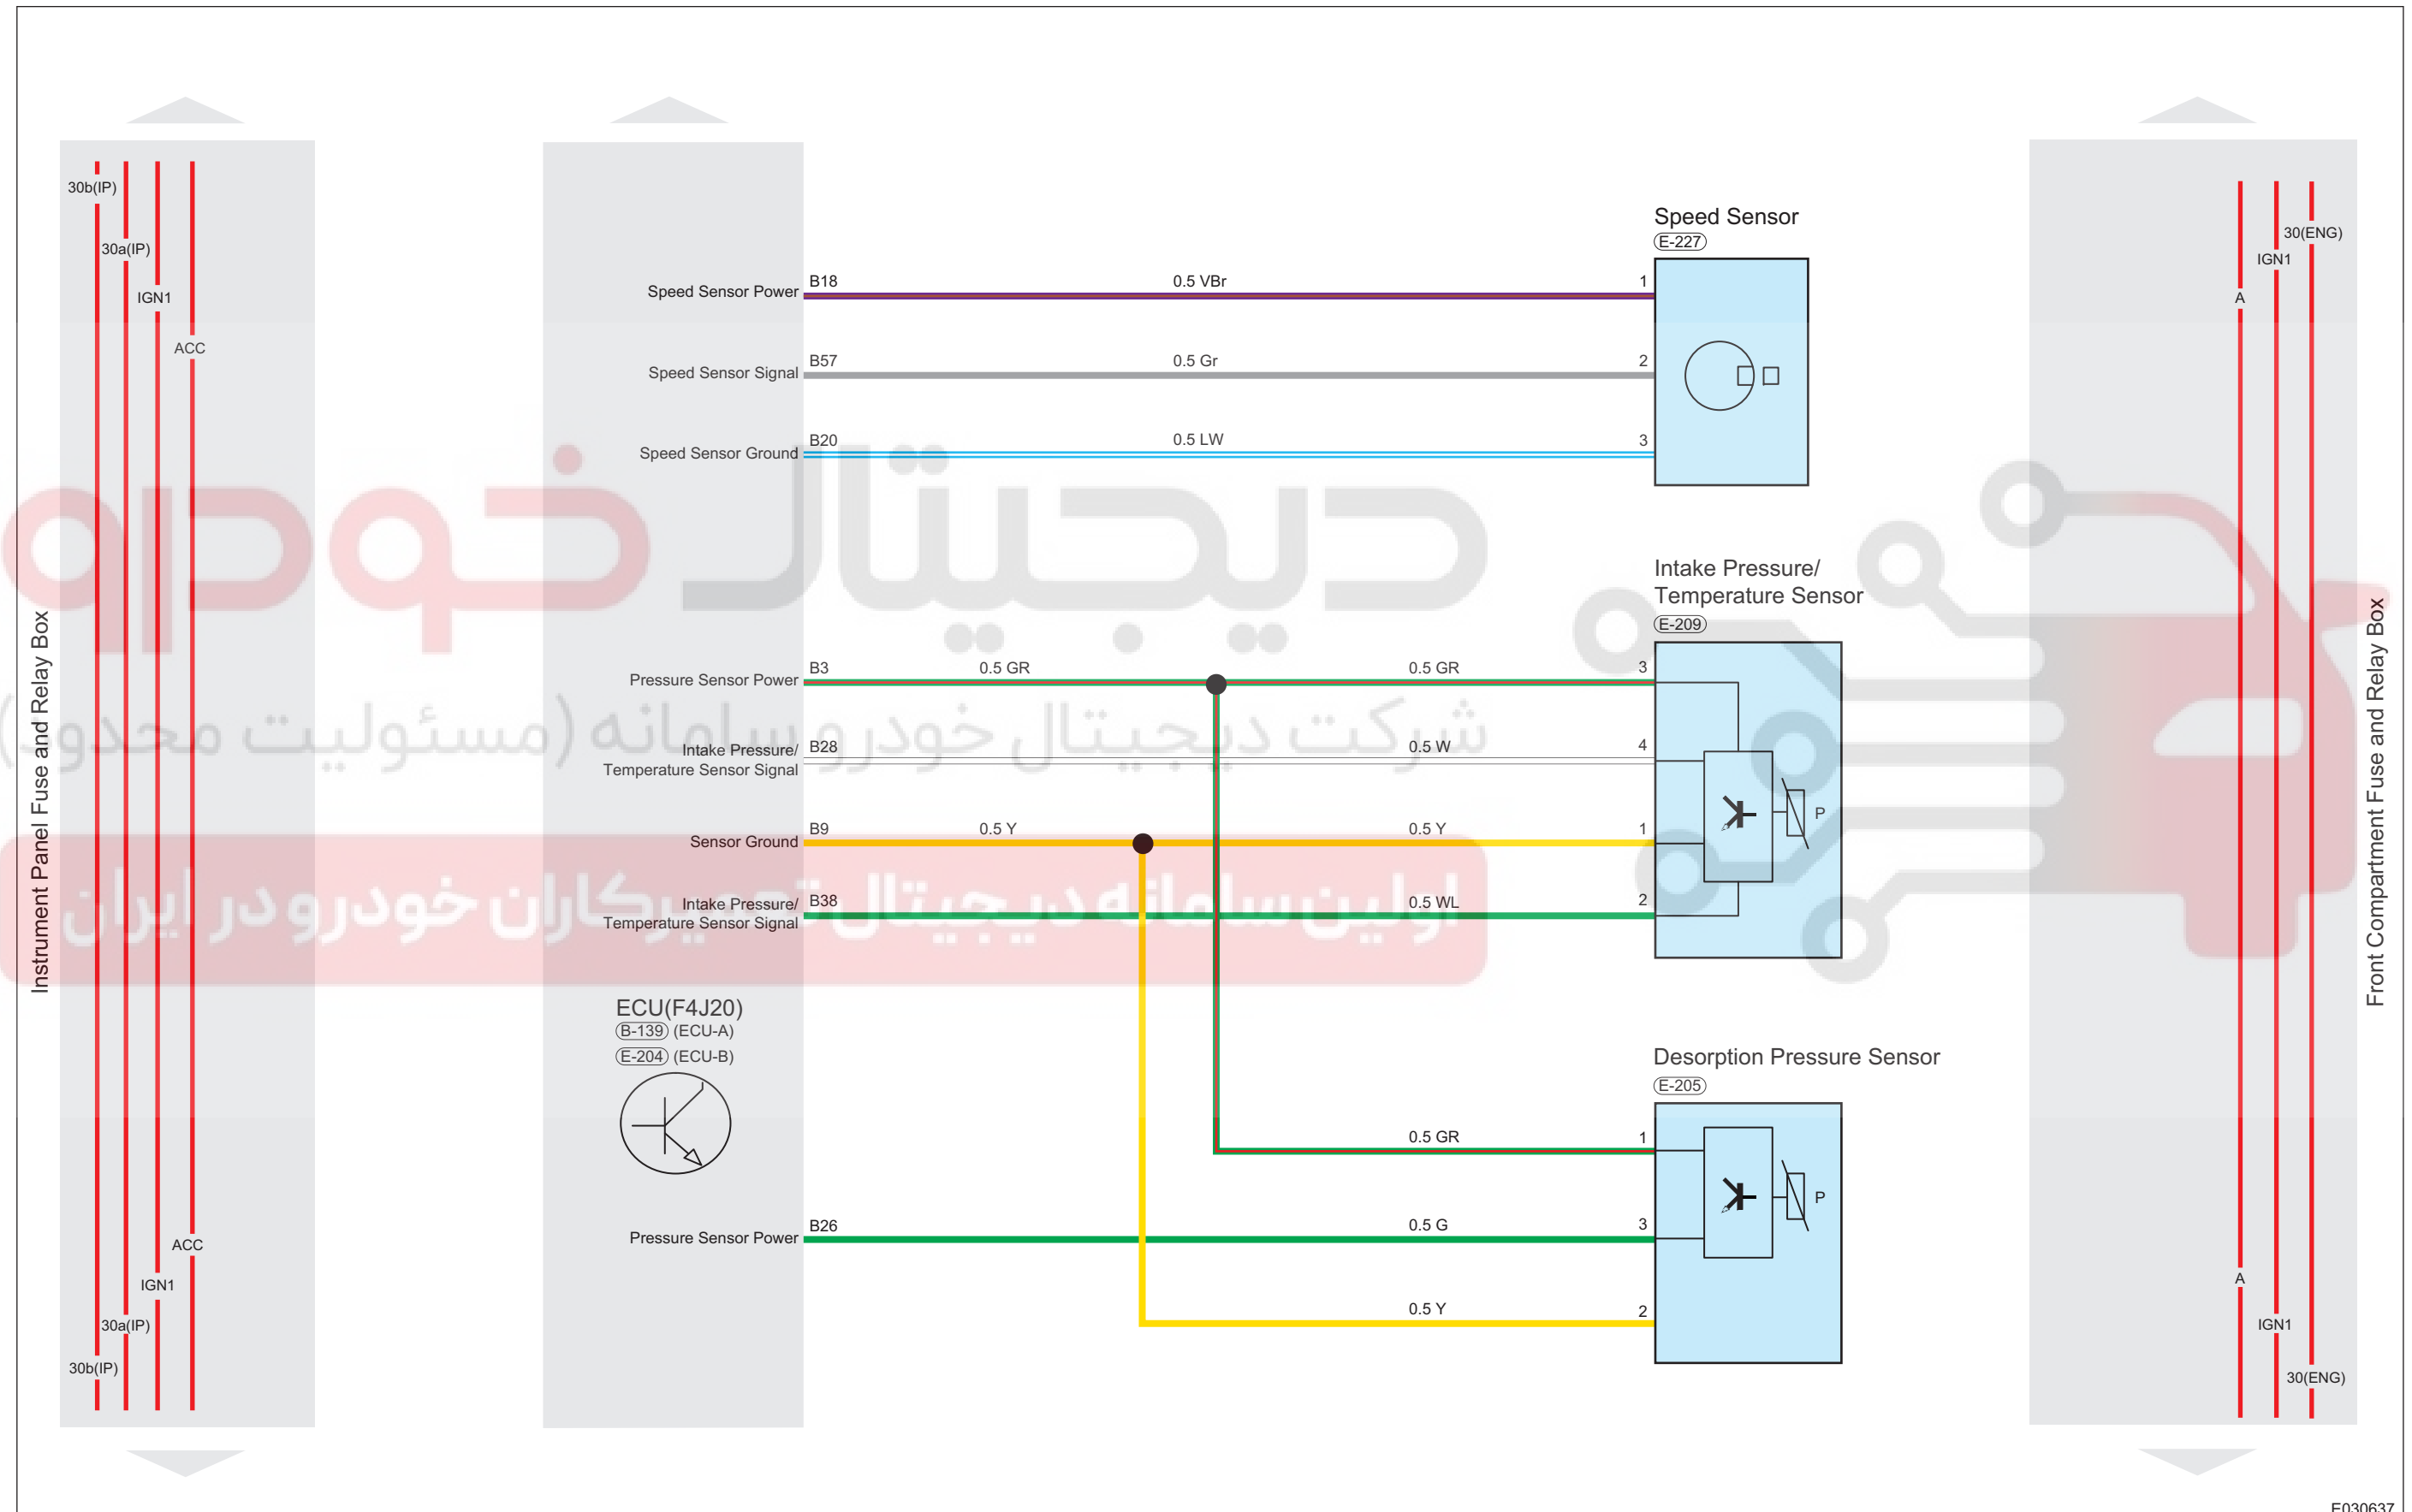

E030637