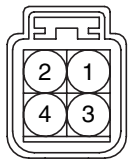
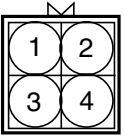
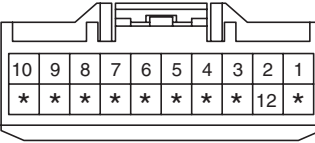
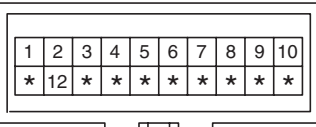
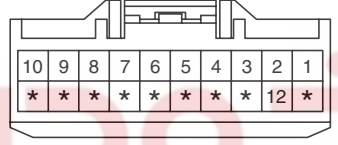

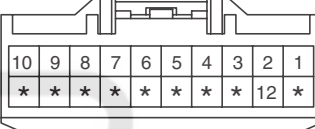

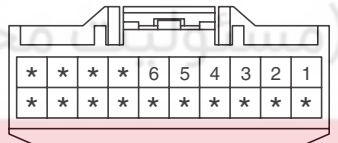

 
 
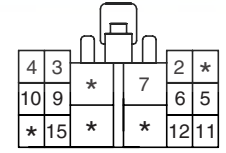
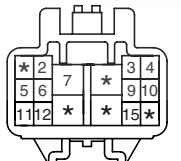
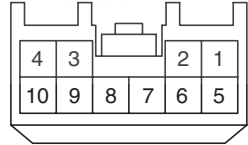
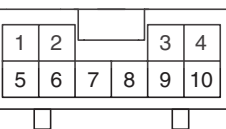
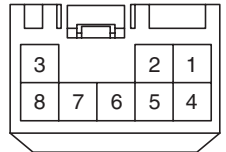
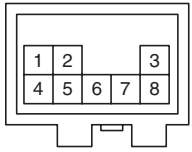
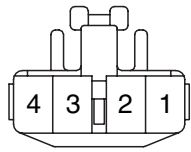
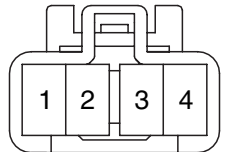


HARNESS CONNECTOR E114B455


HARNESS CONNECTOR (1)		CC-1
<p>CC01</p>  <p>KUM_NMWP_04F_B</p>  <p>CR04M001</p>	<p>CF01</p>  <p>AMP_090III_20F_W</p>  <p>AMP_090III_20M_W</p>	
<p>CF11</p>  <p>AMP_090III_20F_W</p>  <p>AMP_090III_20M_W</p>	<p>CF21</p>  <p>AMP_090III_20F_W</p>  <p>AMP_090III_20M_W</p>	
<p>CF31</p>  <p>AMP_090III_20F_W</p>  <p>AMP_090III_20M_W</p>	<p>EC01</p>  <p>KET_090II_14F_W</p>  <p>KET_090II_14M_W</p>	
<p>EC02</p>  <p>KET_1809_16F_W</p>  <p>KET_1809_16M_W</p>	<p>EC03</p>  <p>AMP_090III_10F_W</p>  <p>AMP_090III_10M_W</p>	
<p>EC06</p>  <p>AMP_090III_08F_W</p>  <p>AMP_090III_08M_W</p>	<p>EC07</p>  <p>KET_090II_04F_W</p>  <p>KET_090II_04M_W</p>	

HARNESS CONNECTOR


HARNESS CONNECTOR (2)

CC-2

 EC11




KET_090II_14F_W

 


KET_090II_14M_W

EC12

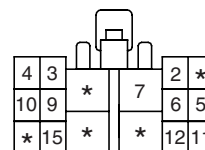


KET_1809_16F_W

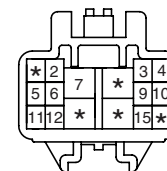


KET_1809_16M_W

EC13

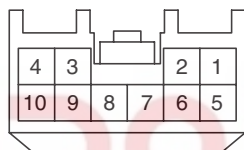


AMP_090III_10F_W

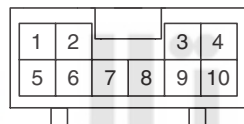


AMP_090III_10M_W

EC16

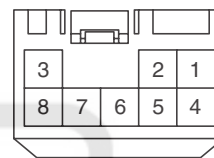


AMP_090III_08F_W

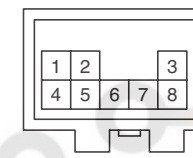


AMP_090III_08M_W

EC17

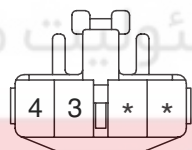


KET_090II_04F_W

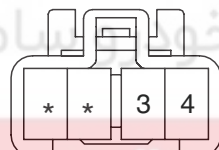


KET_090II_04M_W

 EC21




KET_090II_14F_W

 


KET_090II_14M_W

EC22

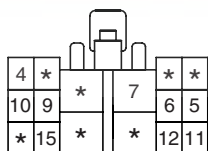


KET_1809_16F_W

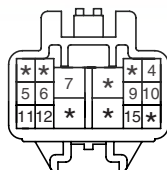


KET_1809_16M_W

EC23

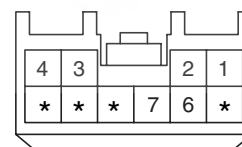


AMP_090III_10F_W

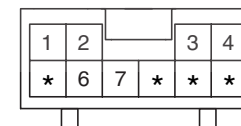


AMP_090III_10M_W

EC26

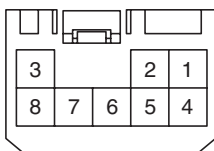


AMP_090III_08F_W

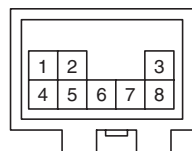


AMP_090III_08M_W

EC27

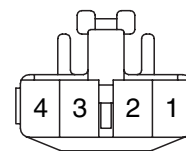

KET_090II_04F_W

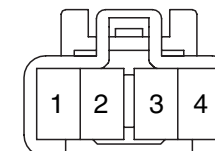


KET_090II_04M_W

HARNESS CONNECTOR


HARNESS CONNECTOR (3)

CC-3

 EC31




KET_090II_14F_W

 


KET_090II_14M_W

EC32

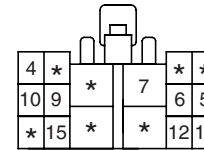


KET_1809_16F_W

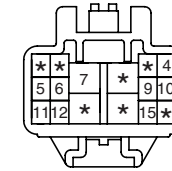


KET_1809_16M_W

EC33

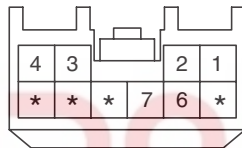


AMP_090III_10F_W

 


AMP_090III_10M_W

EC36

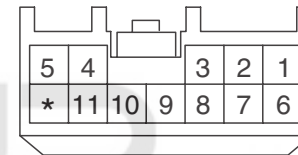


AMP_090III_12F_W

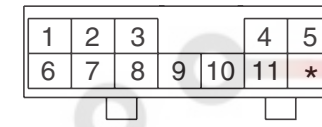


AMP_090III_12M_W

EC37

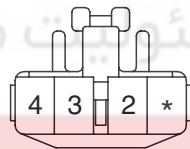


KET_090II_04F_W

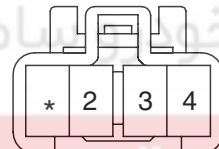

KET_090II_04M_W

EE01

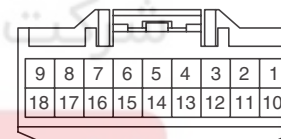


AMP_090III_18F_W




AMP_090III_18M_W

EE02

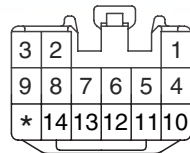


KET_090II_15F_W

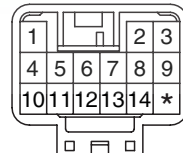


KET_090II_15M_W

EE03

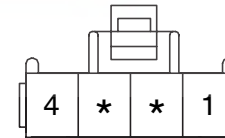


KET_312II_04F_W

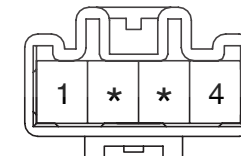


KET_312II_04M_W

EE04

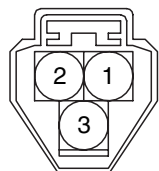


KUM_NMWP_03F_B

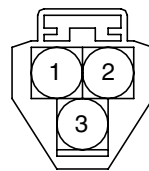


KUM_NMWP_03M_B

EE05

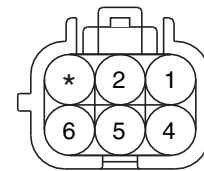

KET_SWP_06F_B

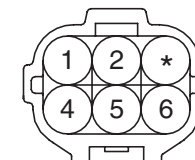


KET_SWP_06M_B

HARNESS CONNECTOR


HARNESS CONNECTOR (4)

CC-4

EE06

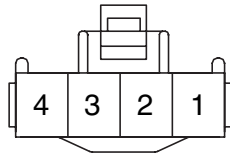


KET_312II_04F_W

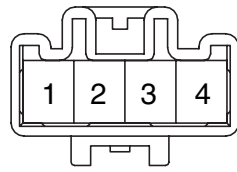


KET_312II_04M_W

EF07

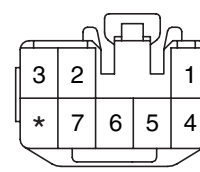


KET_090II_08F_L

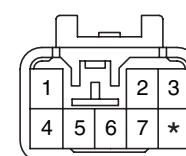


KET_090II_08M_L

EI01

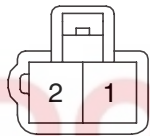


YAZ_91TK_02F_BR

 


YAZ_91TK_02M_BR

EI02

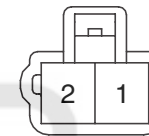


YAZ_91TK_02F_BR

 


YAZ_91TK_02M_BR

EM01

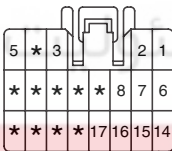


KET_050_21F_B

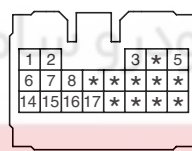


KET_050_21M

EM02

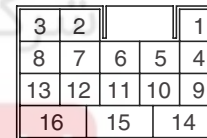


KET_1809_16F

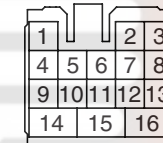


KET_1809_16M

EM06

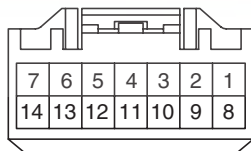


AMP_090III_14F_W

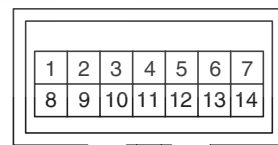


AMP_090III_14M_W

FD01

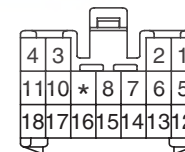


KET_050_18F_L

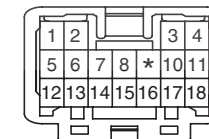


KET_050_18M_L

FD02

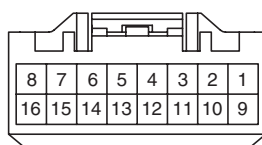


AMP_090III_16F_W

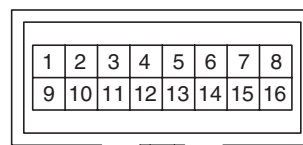


AMP_090III_16M_W

FD03

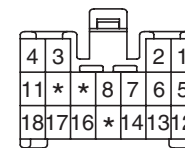

KET_050_18F_L

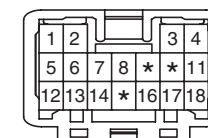


KET_050_18M_L

HARNESS CONNECTOR


HARNESS CONNECTOR (5)

CC-5

FD04

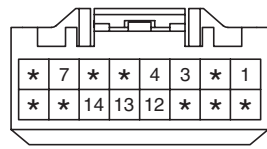


AMP_090III_16F_W

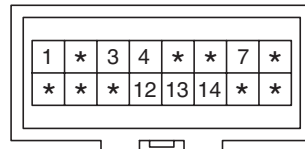


AMP_090III_16M_W

FD05

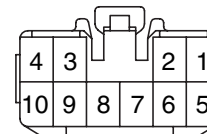


KET_090II_10F_W

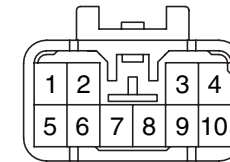


KET_090II_10M_W

FD06

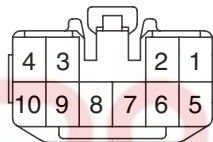

KET_090II_10F_W

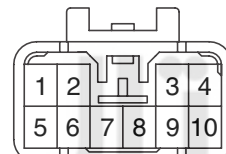


KET_090II_10M_W

FR01




 KET_250DL_02F_W




KET_250DL_02M_W

FR02

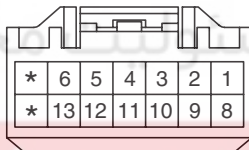


AMP_090III_14F_W

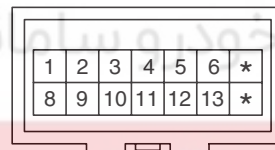

AMP_090III_14M_W

MC01

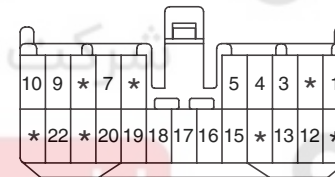


KET_050_23F_W




KET_050_23M

MC02

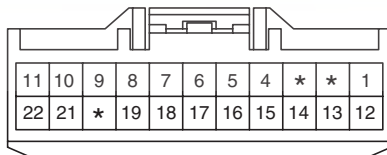


AMP_090III_22F_W

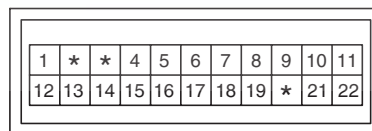


AMP_090III_22M

MC03

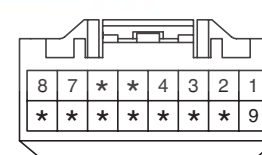


AMP_090III_16F_W

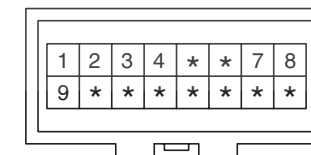


AMP_090III_16M

MC04

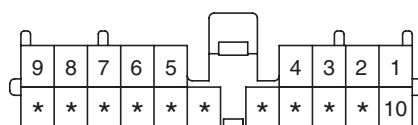


KET_070_20F_W

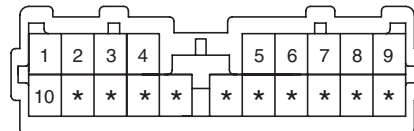


KET_070_20M

MC11

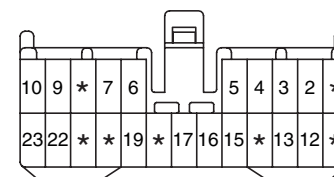

KET_050_23F_W

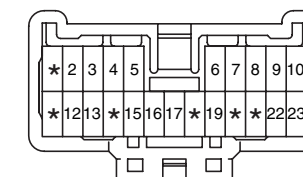


KET_050_23M

HARNESS CONNECTOR


HARNESS CONNECTOR (6)

CC-6

MC12

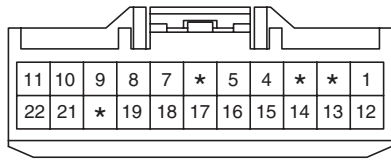


AMP_090III_22F_W

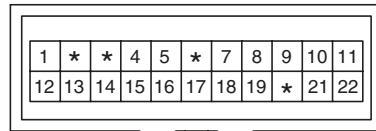


AMP_090III_22M

MC13

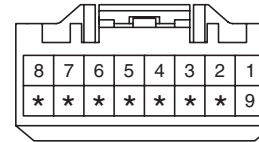


AMP_090III_16F_W

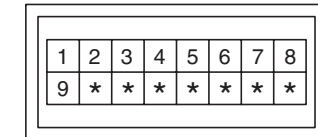


AMP_090III_16M

MC14

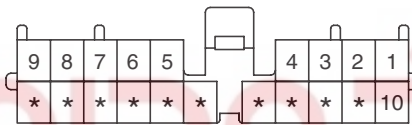


KET_070_20F_W

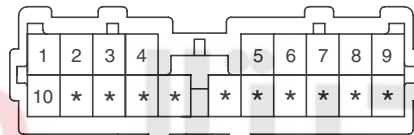


KET_070_20M

MC21

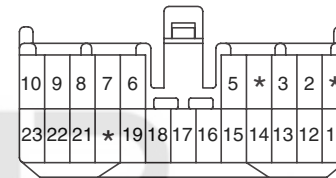


KET_050_23F_W

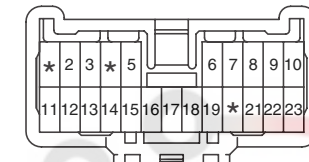


KET_050_23M

MC22

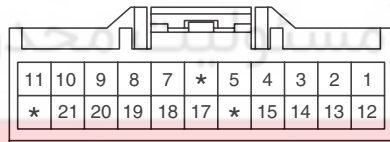


AMP_090III_22F_W

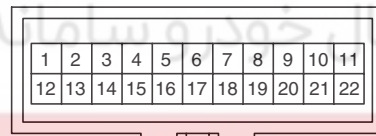

AMP_090III_22M

MC23

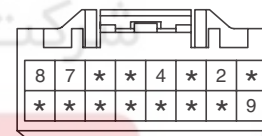


AMP_090III_16F_W




AMP_090III_16M

MC24

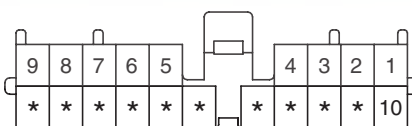


KET_070_20F_W

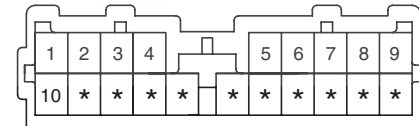


KET_070_20M

MC31

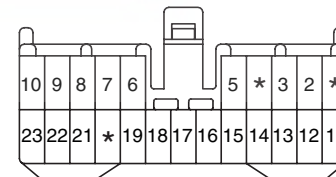


KET_050_23F_W

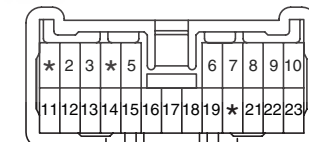


KET_050_23M

MC32

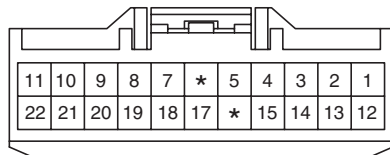


AMP_090III_22F_W

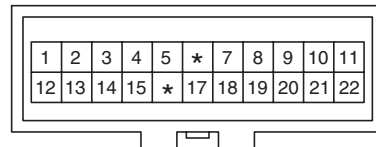


AMP_090III_22M

MC33

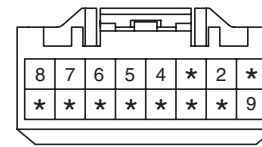

AMP_090III_16F_W

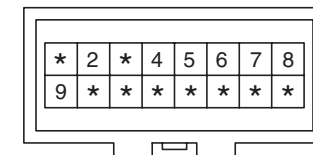


AMP_090III_16M

HARNESS CONNECTOR


HARNESS CONNECTOR (7)

CC-7

MC34

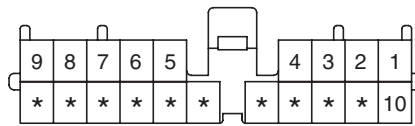


KET_070_20F_W

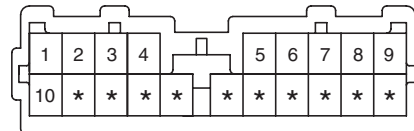


KET_070_20M

MF01

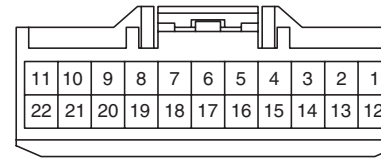


AMP_090III_22F_W

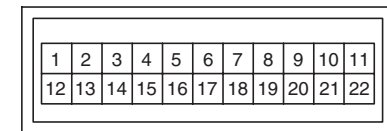


AMP_090III_22M

MF02

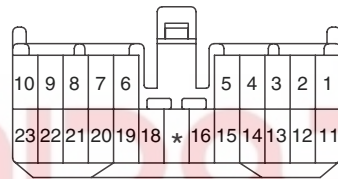


KET_050_23F_W

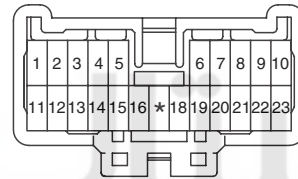


KET_050_23M

MF03

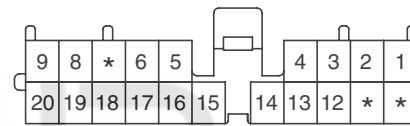


KET_070_20F_W

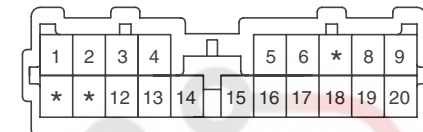


KET_070_20M

MF04

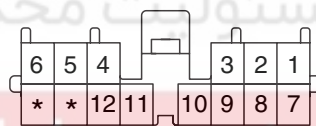


KET_070_14F_W

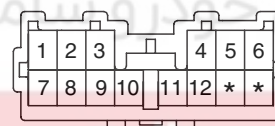


KET_070_14M

MI01

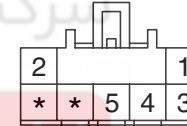


KUM_CDR_07F_W

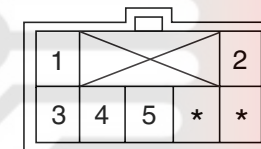


KUM PH841-07020

 MI02




CR18F014

 


KUM HY031-18027

MI03

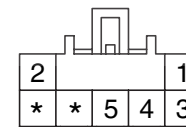


KUM_CDR_07F_W

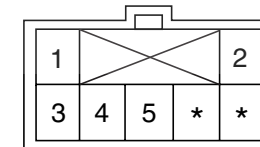


KUM PH841-07020

 MI04




CR18F014

 


KUM HY031-18027

MI05

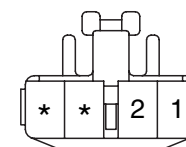
 









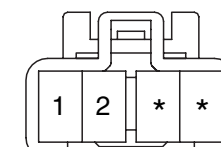


KET_090II_04F_W



KET_090II_04M_W

HARNESS CONNECTOR

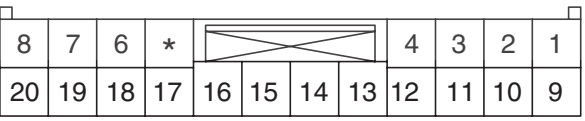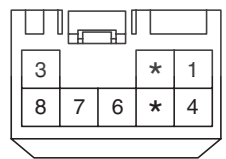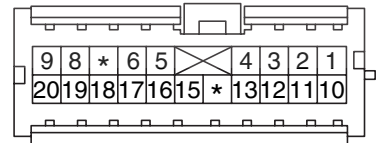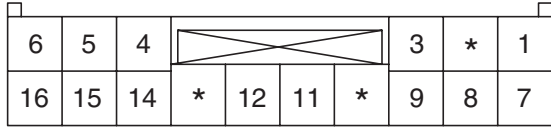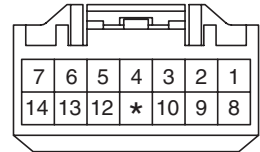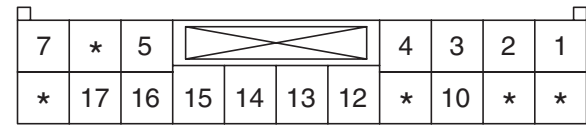
HARNESS CONNECTOR (8)		CC-8
<p>MI08</p>  <p>KET_090II_02F_W_L MG641029</p>	<p>MM01</p>  <p>KET_070_14F_W KET_070_14M</p>	
<p>MM02</p>  <p>KET_090II_06F_Y KET_090II_06M_Y</p>	<p>MM03</p>  <p>AMP_090III_08F_B AMP_090III_08M_B</p>	
<p>RR01</p>  <p>KET_250DL_02F_W KET_250DL_02M_W</p>	<p>RR02</p>  <p>AMP_090III_14F_W AMP_090III_14M_W</p>	
<p>I/P-A</p>  <p>AMP_0925_20F_W</p>	<p>I/P-B</p>  <p>AMP_090III_08F_W</p>	<p>I/P-C</p>  <p>AMP_040III_20F</p>
<p>I/P-D</p>  <p>AMP_0925_16F_W</p>	<p>I/P-E</p>  <p>AMP_090III_14F_W</p>	<p>I/P-F</p>  <p>AMP_0925_18F_W</p>

HARNESS CONNECTOR

HARNESS CONNECTOR (9)


CC-9

I/P-G

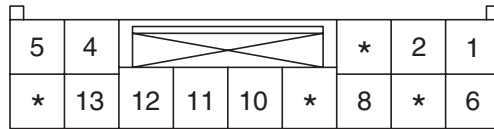


AMP_0925_14F_W

I/P-H

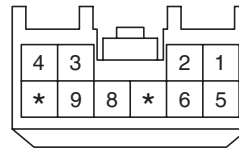


AMP_090III_10F_W

 I/P-J




KET_58L_02F_W

 I/P-Aa




AMP_0925_20F_W

I/P-Ba

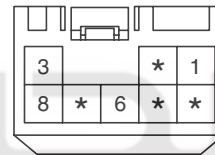


AMP_090III_08F_W

I/P-Ca

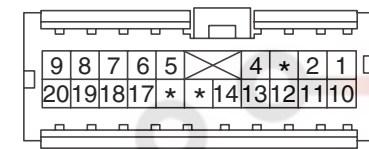


AMP_040III_20F

I/P-Da

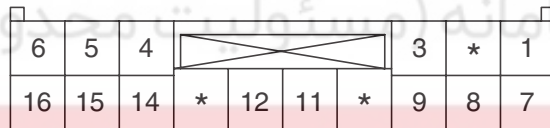


AMP_0925_16F_W

I/P-Ea

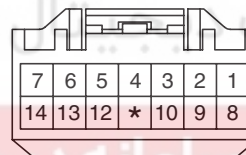


AMP_090III_14F_W

 I/P-Fa




AMP_0925_18F_W

I/P-Ga

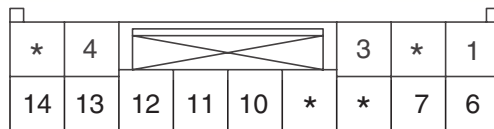


AMP_0925_14F_W

I/P-Ha

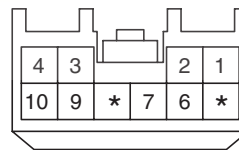


AMP_090III_10F_W

 I/P-Ja



KET_58L_02F_W


JOINT CONNECTOR E21BBC60

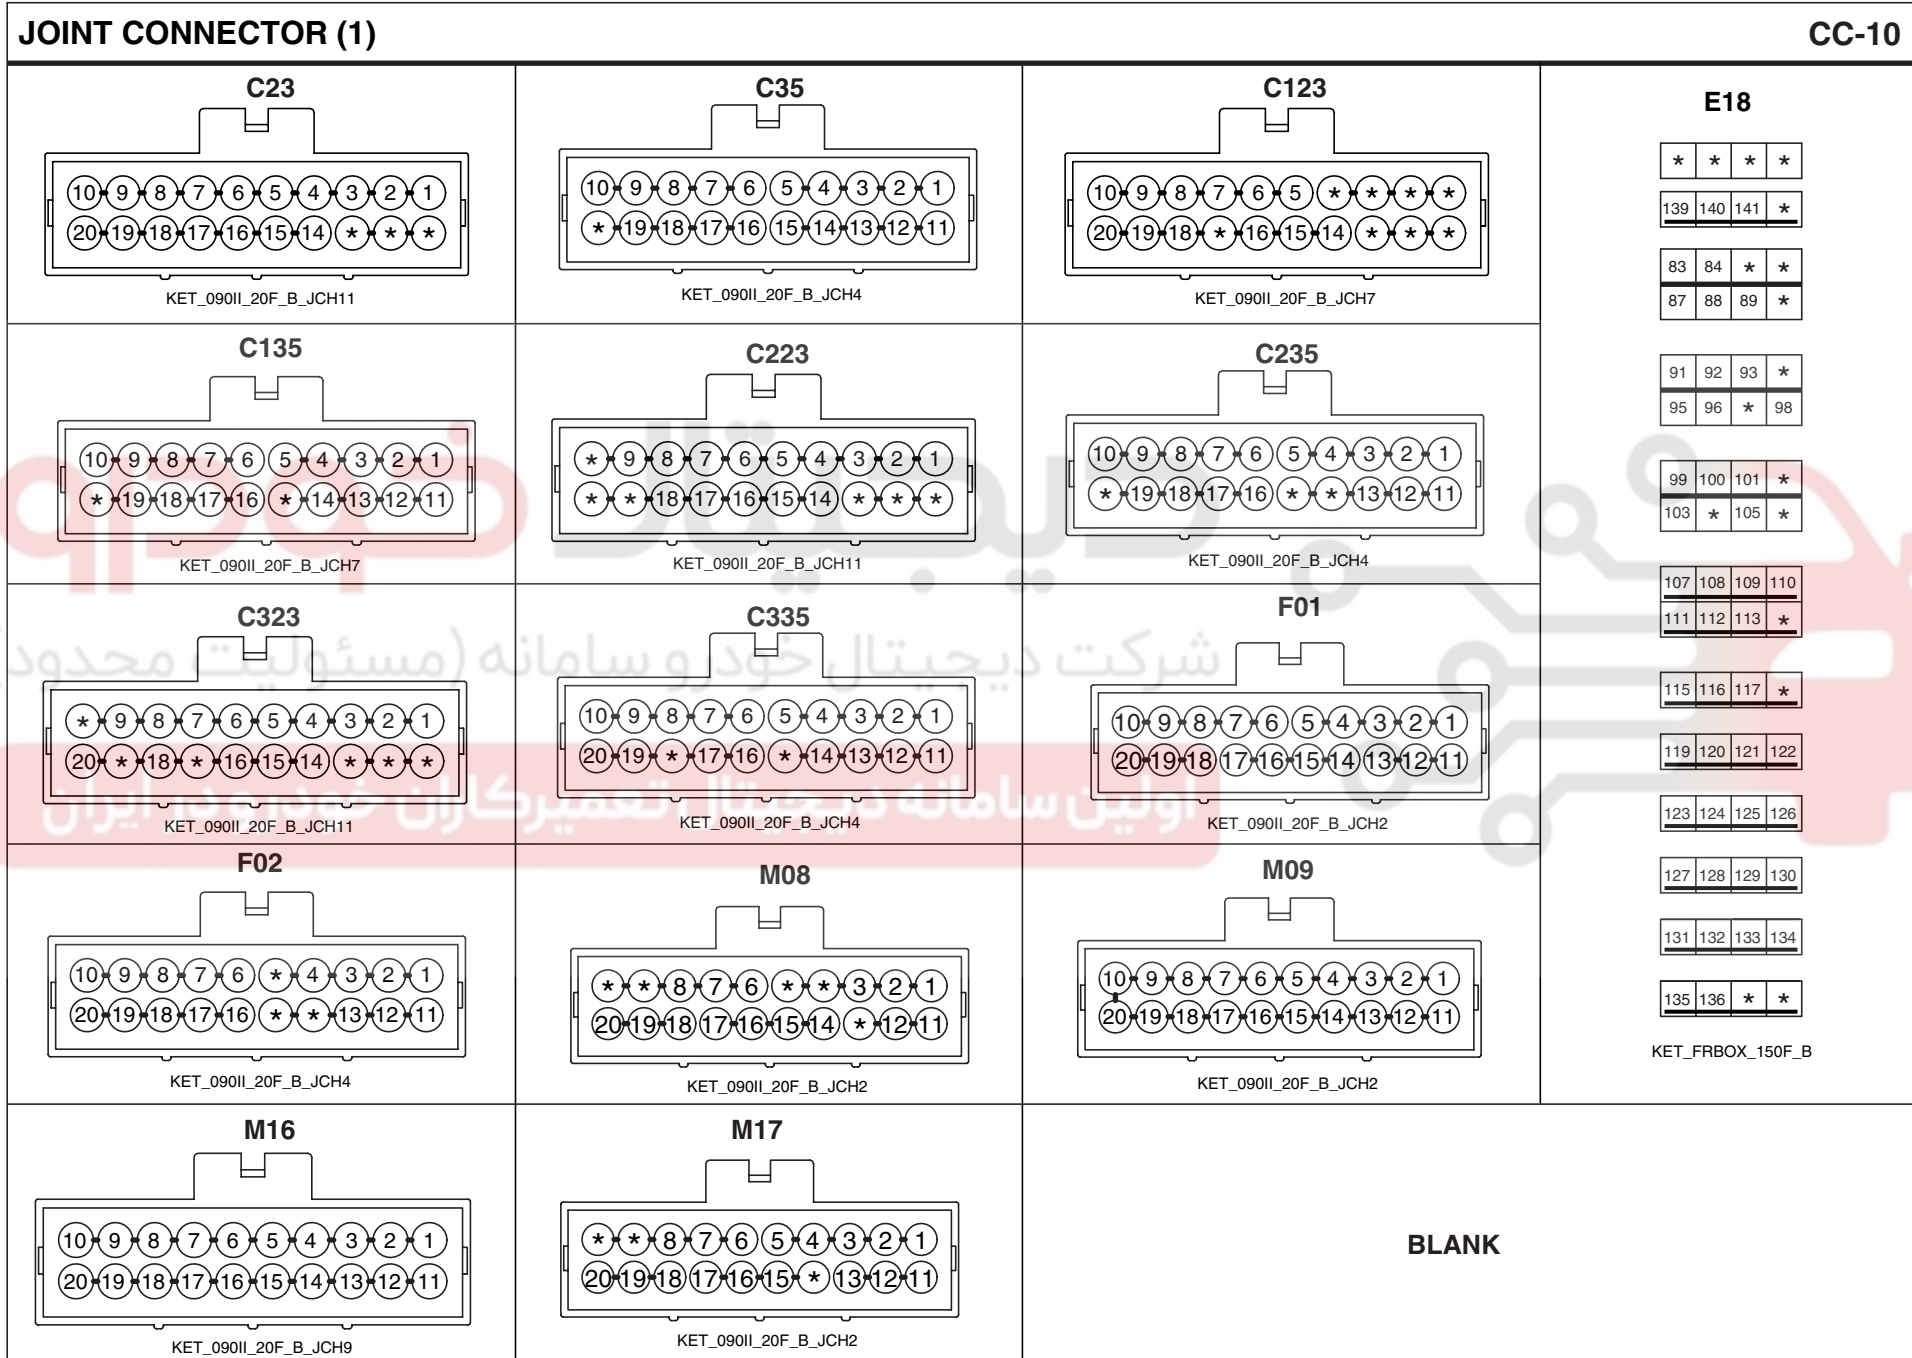

MAIN HARNESS E4764194

MAIN HARNESS (1)

HL-1

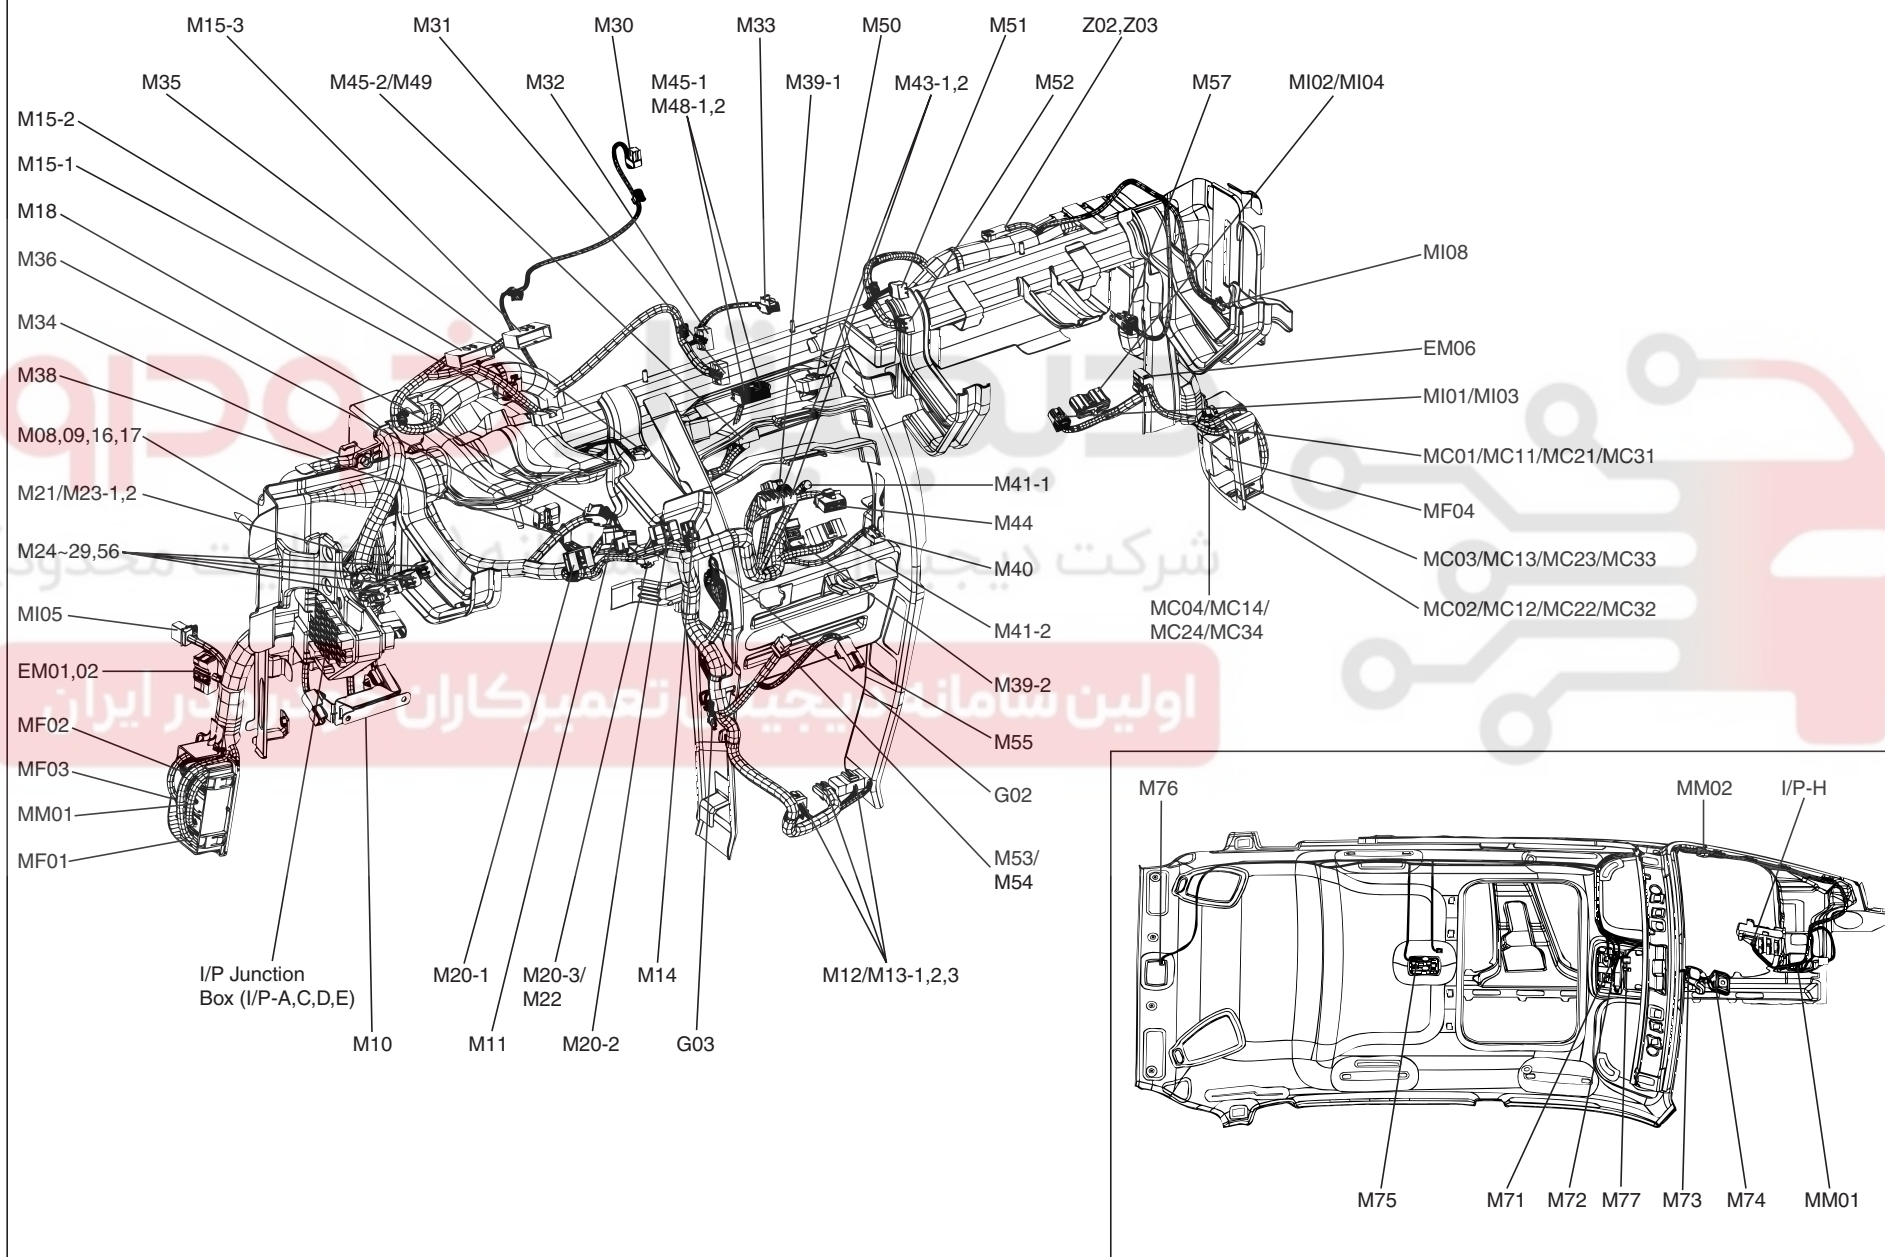

FRONT HARNESS

FRONT HARNESS (2)

HL-4

LEFT FRONT HARNESS

E01 Left side repeater lamp
 E02 Left front wheel sensor
 E03 Hood switch
 E06 Start relay
 E07 Engine control relay
 E08 Cooling fan relay #2(LOW)
 E09 Bulglar horn relay
 E10 Horn relay
 E11 Front wiper relay
 E12 Front fog lamp relay
 E13 Head lamp relay(LOW)
 E14 Fuel pump relay
 E15 A/C relay
 E16 Head lamp relay(HIGH)
 E17 Cooling fan relay #1(HIGH)
 E18 Joint connector
 E21 Left horn
 E22 Left front fog lamp
 E23 Left front impact sensor
 E25 Left head lamp leveling actuator
 E26 Left head lamp
 E27 Cooling fan motor
 EC01 Connection with CONTROL harness(2.7 GSL)
 EC02 Connection with CONTROL harness(2.7 GSL)
 EC03 Connection with CONTROL harness(2.7 GSL)
 EC11 Connection with CONTROL harness(2.0 GSL)
 EC12 Connection with CONTROL harness(2.0 GSL)
 EC13 Connection with CONTROL harness(2.0 GSL)
 EC21 Connection with CONTROL harness(DSL EURO-III)
 EC22 Connection with CONTROL harness(DSL EURO-III)
 EC23 Connection with CONTROL harness(DSL EURO-III)
 EC31 Connection with CONTROL harness(DSL EURO-IV)
 EC32 Connection with CONTROL harness(DSL EURO-IV)
 EC33 Connection with CONTROL harness(DSL EURO-IV)
 EE01 Connection with RIGHT FRONT harness
 EE02 Connection with RIGHT FRONT harness
 EE03 Connection with RIGHT FRONT harness
 EE04 Connection with BATTERY harness
 EE05 Connection with FRONT EXT. harness
 EE06 Connection with RIGHT FRONT harness(RHD)
 EI01 Connection with A/BAG harness
 EM01 Connection with MAIN harness
 EM02 Connection with MAIN harness

I/P-G Connection with I/P JUNCTION BOX harness(LHD)
 I/P-J Connection with I/P JUNCTION BOX harness(LHD)
 G06 Ground(Left front)
 G07 Ground(Cooling)

BATTERY HARNESS

E51 Generator(L,S)
 E52 Generator(B+)
 E53 Start solenoid(Diesel)
 E54 Start solenoid(Gasoline)
 EE04 Connection with LEFT FRONT harness

FRONT EXT. HARNESS

E56 Ambient sensor
 E57 AQS sensor
 EE05 Connection with LEFT FRONT harness


RIGHT FRONT HARNESS

E31 Right side repeater lamp
 E32 Right front wheel sensor
 E33 Vertical resistor(W/O ESP/TCS)
 E34 Multipurpose check connector
 E35 Right head lamp leveling actuator
 E36 Right front wheel sensor(4WD)
 E37 ABS control module
 E38 Washer motor
 E39 ESP control module
 E41 Right horn
 E42 Right front fog lamp
 E43 Triple switch(Gasoline/DSL EURO-III)
 E44 Right front impact sensor
 E45 Right head lamp
 E46 A/C compressor(Diesel)
 E47 A/C pressure transducer(DSL EURO-IV)
 EC06 Connection with CONTROL harness(2.7 GSL)
 EC07 Connection with CONTROL harness(2.7 GSL)
 EC16 Connection with CONTROL harness(2.0 GSL)
 EC17 Connection with CONTROL harness(2.0 GSL)
 EC26 Connection with CONTROL harness(DSL EURO-III)
 EC27 Connection with CONTROL harness(DSL EURO-III)
 EC36 Connection with CONTROL harness(DSL EURO-IV)
 EC37 Connection with CONTROL harness(DSL EURO-IV)
 EE01 Connection with LEFT FRONT harness
 EE02 Connection with LEFT FRONT harness
 EE03 Connection with LEFT FRONT harness
 EE06 Connection with LEFT FRONT harness(RHD)
 EF07 Connection with FLOOR harness
 EI02 Connection with A/BAG harness
 EM06 Connection with MAIN harness
 I/P-Ga Connection with I/P JUNCTION BOX harness(RHD)
 I/P-Ja Connection with I/P JUNCTION BOX harness(RHD)
 G08 Ground(ABS)
 G09 Ground(Right front)

FLOOR HARNESS E923B068

FLOOR HARNESS (1)

HL-5

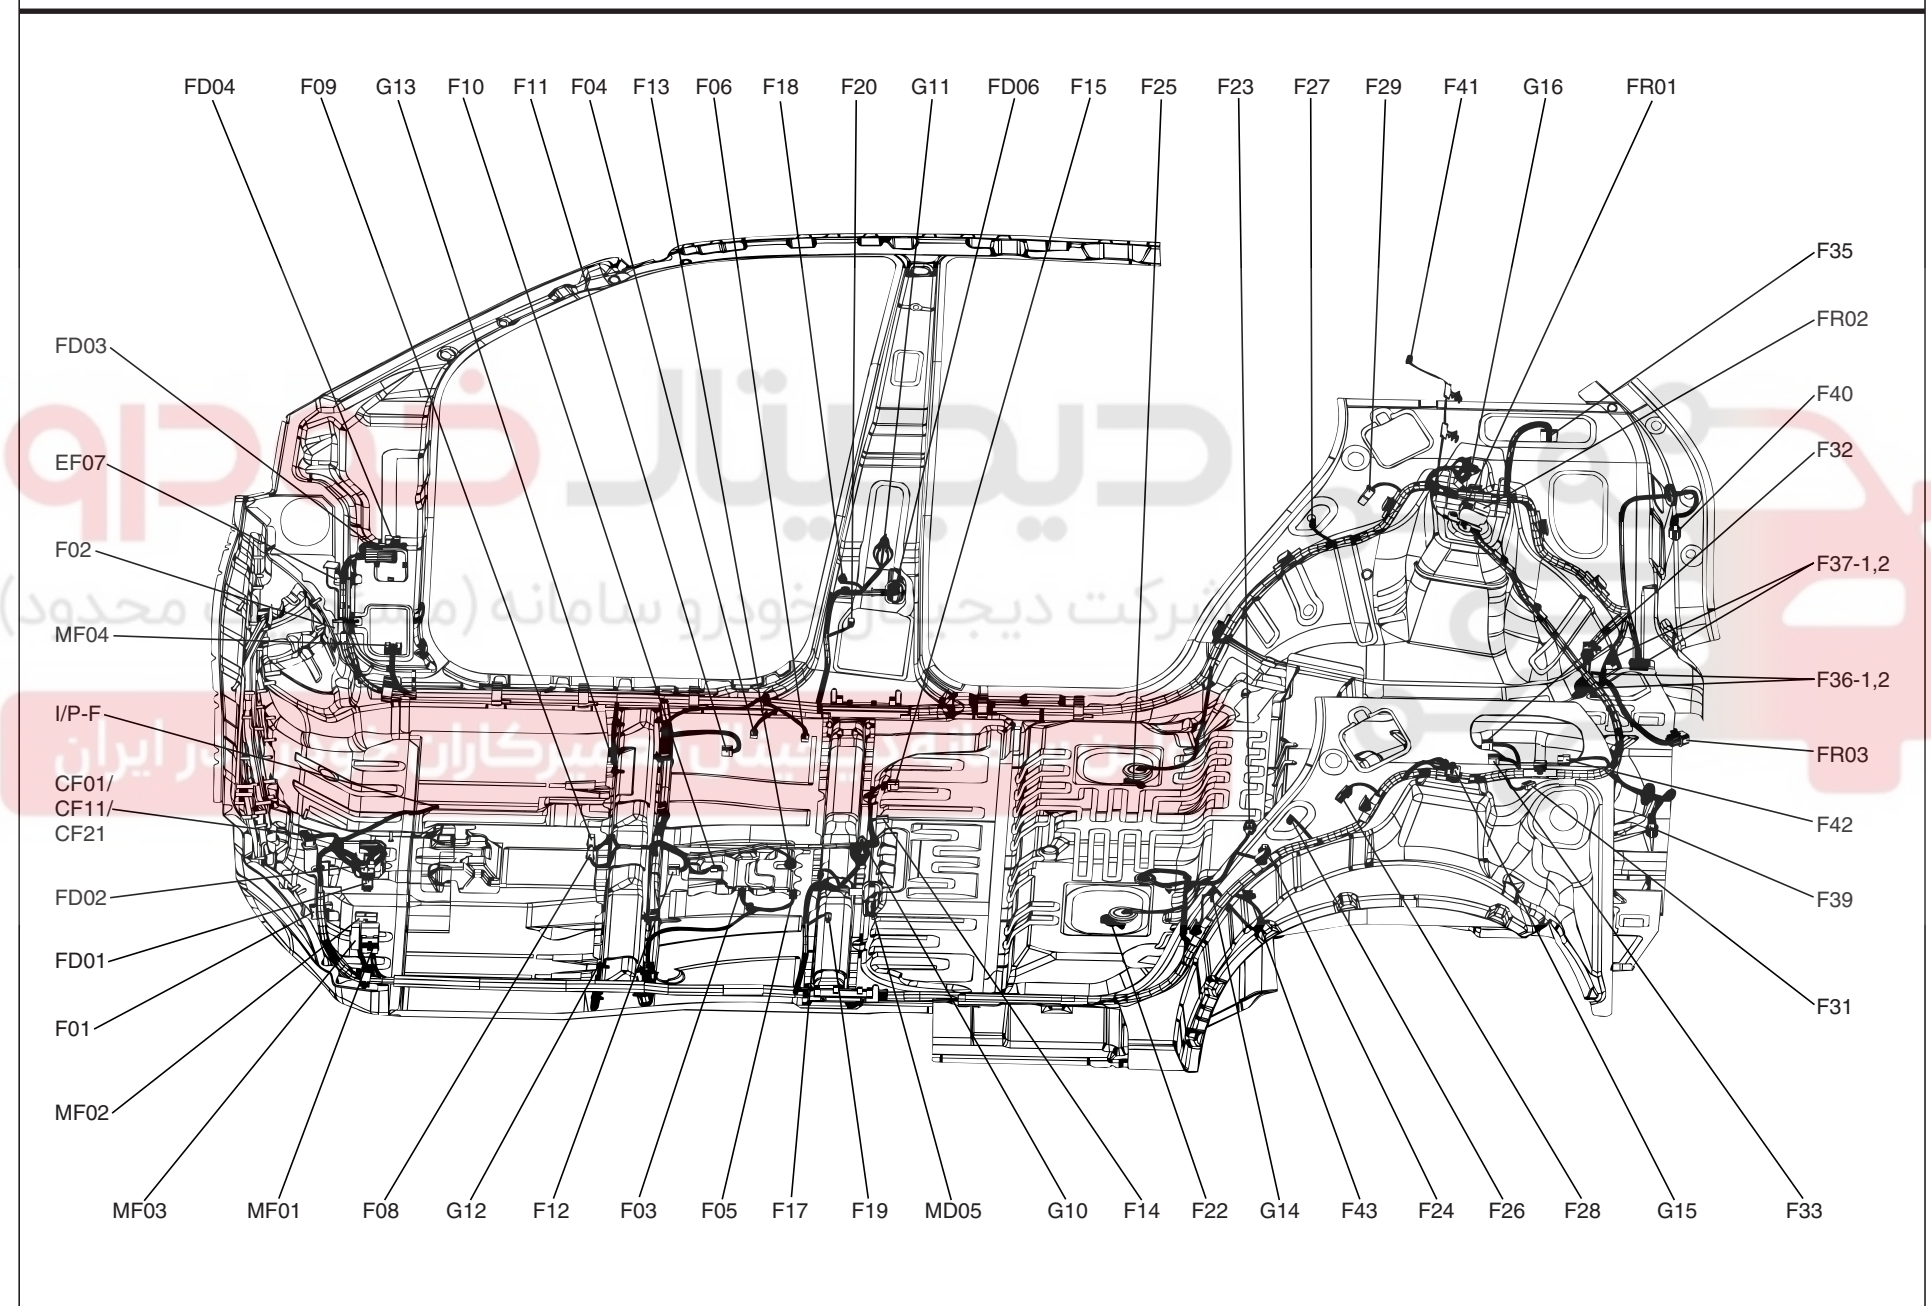

FLOOR HARNESS

FLOOR HARNESS (2)

HL-6

FLOOR HARNESS


F01	Joint connector	F42	Luggage lamp
F02	Joint connector	F43	Electronic magnetic valve clutch(4WD)
F03	Left front seat belt tension reducer(RHD, W/O A/Bag)	CF01	Connection with CONTROL harness(2.7 GSL)
F04	Right front seat belt tension reducer(RHD, W/O A/Bag)	CF11	Connection with CONTROL harness(2.0 GSL)
F05	Left front seat warmer	CF21	Connection with CONTROL harness(DSL EURO-III)
F06	Right front seat warmer	CF31	Connection with CONTROL harness(DSL EURO-IV)
F08	Left front seat warmer switch	EF07	Connection with RIGHT FRONT harness
F09	Right front seat warmer switch	FD01	Connection with DRIVER DOOR harness
F10	Parking brake switch	FD02	Connection with DRIVER DOOR harness
F11	Sub woofer	FD03	Connection with ASSISTOR DOOR harness
F13	G-sensor(4WD/ABS/ESP)	FD04	Connection with ASSISTOR DOOR harness
F14	Rear power outlet #1	FD05	Connection with LEFT REAR DOOR harness
F17	Left front door switch	FD06	Connection with RIGHT REAR DOOR harness
F18	Right front door switch	FR01	Connection with TAIL GATE EXT.harness
F22	Fuel sender & Fuel pump motor	FR02	Connection with TAIL GATE EXT.harness
F25	Sub sender	I/P-F	Connection with I/P JUNCTION BOX harness(LHD)
F26	Left rear door switch	I/P-Fa	Connection with I/P JUNCTION BOX harness(RHD)
F27	Right rear door switch	MF01	Connection with MAIN harness
F28	Left rear wheel sensor	MF02	Connection with MAIN harness
F29	Right rear wheel sensor	MF03	Connection with MAIN harness
F31	Rear power outlet #2	MF04	Connection with MAIN harness
F32	Rear intermittent wiper relay	G10	Ground(Floor)
F33	Safety relay	G11	Ground(Floor)
F37-1	Audio amp #1	G12	Ground(Floor)
F37-2	Audio amp #2	G13	Ground(Floor)
F39	Left rear combination lamp	G14	Ground(Fuel pump)
F40	Right rear combination lamp	G15	Ground(Floor)
F41	Roof antenna	G16	Ground(Floor)
		Z05	Diode(4WD)

CONTROL HARNESS

CONTROL HARNESS (3)

HL-9

2.0 GASOLINE

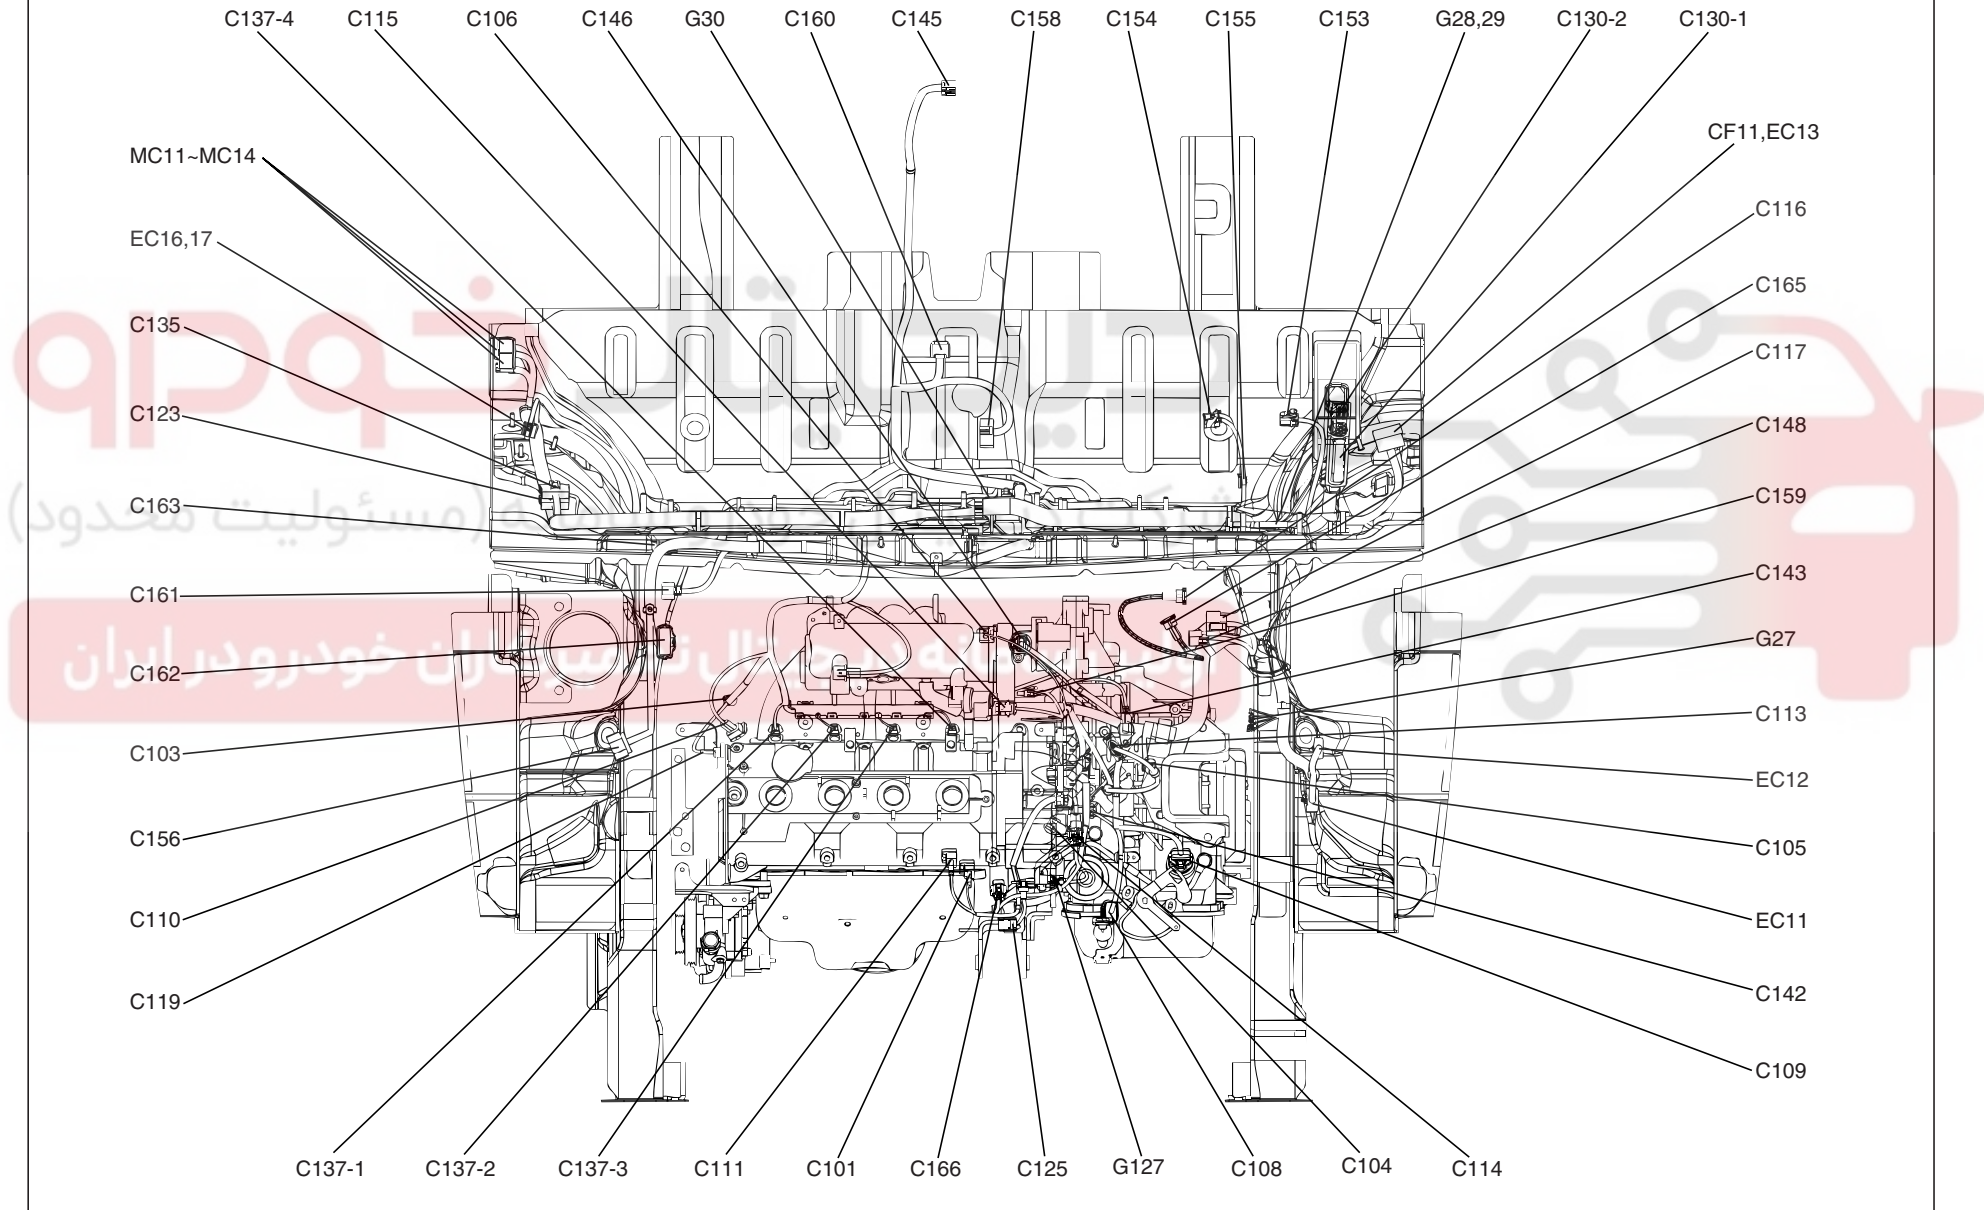

CONTROL HARNESS

CONTROL HARNESS (4)

HL-10

CONTROL HARNESS(2.0 GASOLINE)


C101	Crankshaft position sensor	C145	ATM lever switch
C103	A/C compressor	C146	Vehicle speed sensor
C104	Engine coolant temperature sensor & sender	C148	Windshield defogger
C105	Back-up lamp switch(M/T)	C153	Cruise clutch pedal position switch(M/T)
C106	Canister purge control valve	C154	Stop lamp switch
C108	Transaxle range switch	C155	Ignition lock switch(M/T)
C109	ATM solenoid valve	C156	Cruise control module
C110	Camshaft position sensor	C158	4WD ECM
C111	Oil pressure switch	C159	Throttle position sensor
C112	Oil temperature sensor	C160	G-YAW sensor(With ESP)
C113	MAF sensor	C162	DRL control module
C114	Ignition coil	C163	Burglar horn
C115	Idle speed control actuator	C165	Pressure sensor(With ESP)
C116	Brake fluid level sensor	C166	Oil control valve
C117	Front wiper motor	CF11	Connection with FLOOR harness
C119	Knock sensor	EC11	Connection with LEFT FRONT harness
C123	Joint connector	EC12	Connection with LEFT FRONT harness
C125	Oxygen sensor(DOWN)(EURO)	EC13	Connection with LEFT FRONT harness
C127	Oxygen sensor(UP)	EC16	Connection with RIGHT FRONT harness
C130-1	PCM	EC17	Connection with RIGHT FRONT harness
C130-2	PCM	MC11	Connection with MAIN harness
C135	Joint connector	MC12	Connection with MAIN harness
C136	ATM control relay	MC13	Connection with MAIN harness
C137-1	Injector #1	MC14	Connection with MAIN harness
C137-2	Injector #2	G27	Ground(Control)
C137-3	Injector #3	G28	Ground(PCM)
C137-4	Injector #4	G29	Ground(ECM)
C142	Pulse generator "A"	G30	Ground(4WD)
C143	Pulse generator "B"		

CONTROL HARNESS

CONTROL HARNESS (5)

HL-11

DIESEL EURO-III

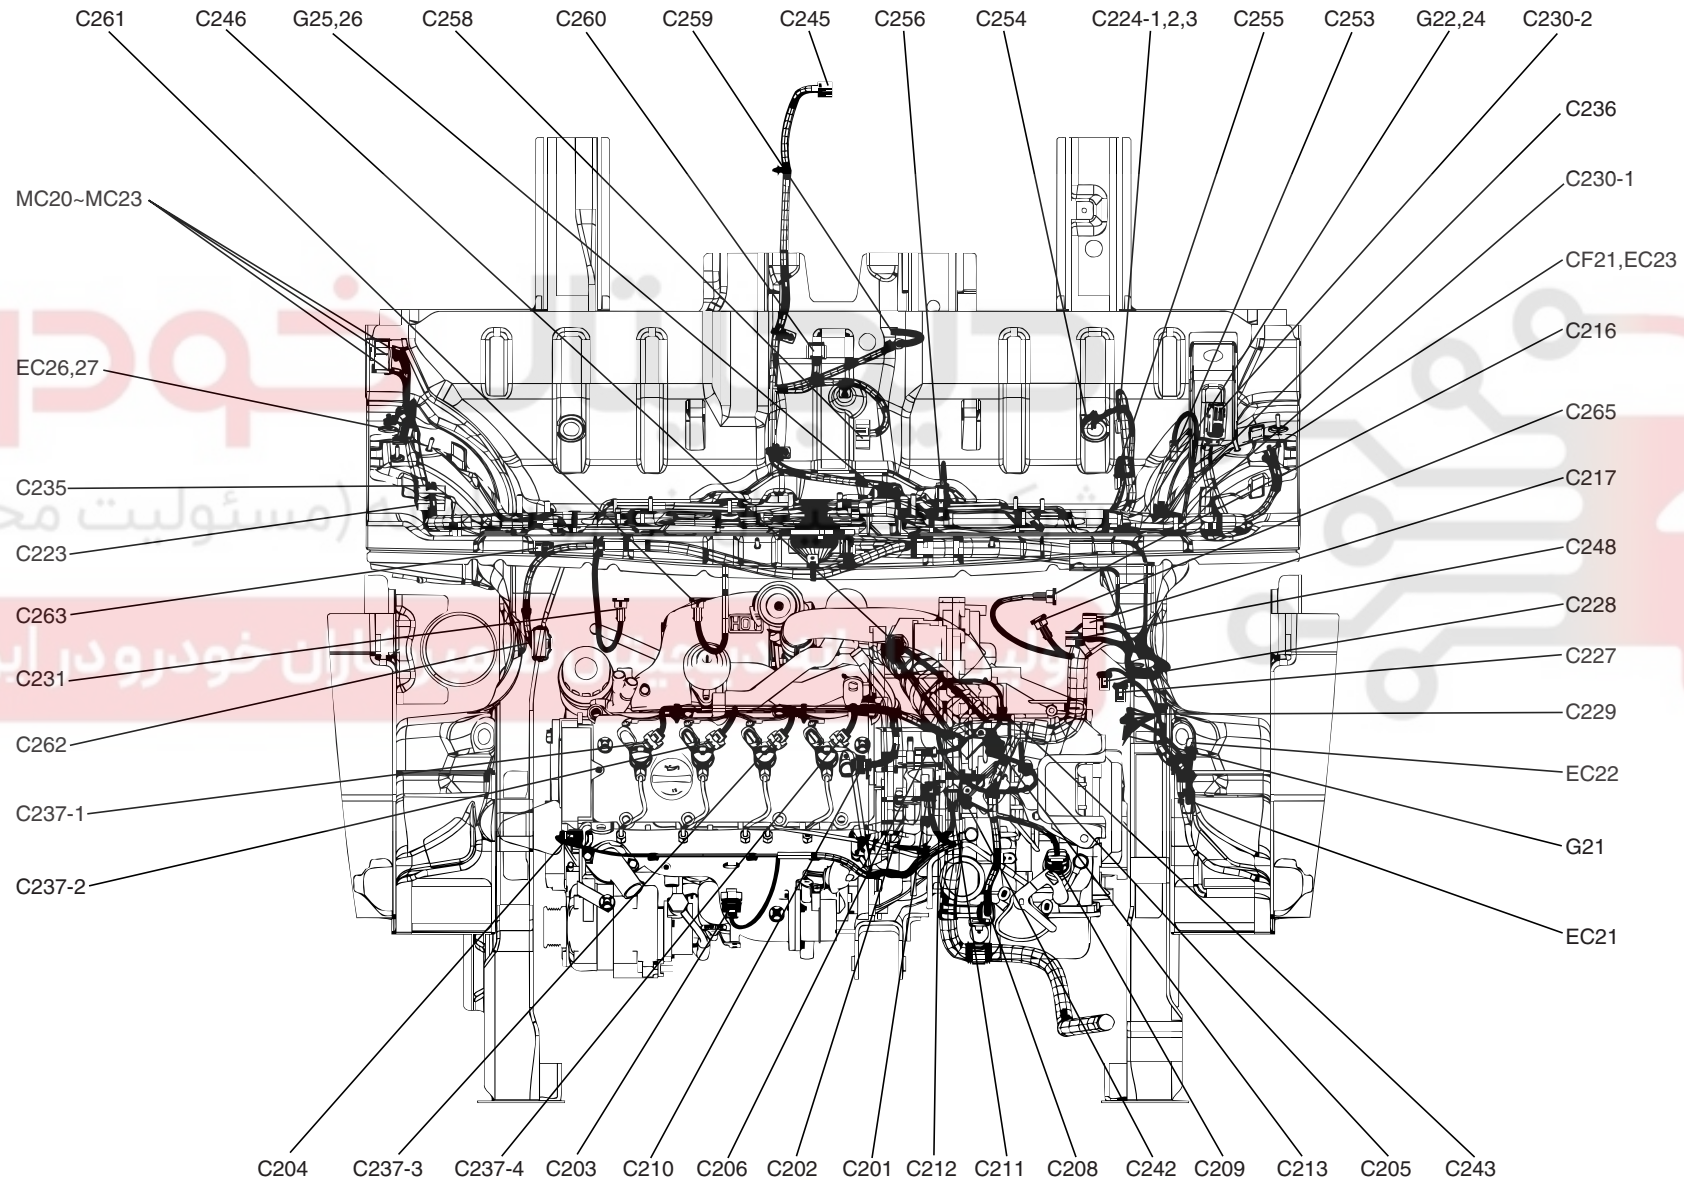

CONTROL HARNESS

CONTROL HARNESS (6)

HL-12

CONTROL HARNESS(DIESEL EURO-III)

C201	Crankshaft position sensor	C237-4	Injector #4
C202	Rail pressure regulator	C242	Pulse generator "A"
C203	Rail pressure sensor	C243	Pulse generator "B"
C204	Engine coolant temperature sensor & sender	C245	ATM lever switch
C205	Back-up lamp switch(M/T)	C246	Vehicle speed sensor
C206	Glow plug	C248	Windshield defogger
C208	Transaxle range switch	C250	First gear switch(M/T)
C209	ATM solenoid valve	C253	Clutch switch(M/T)
C210	Camshaft position sensor	C254	Stop lamp switch
C211	Oil pressure switch	C255	Ignition lock switch(M/T)
C212	Fuel temperature sensor	C256	Accelerator pedal sensor
C213	Air flow sensor	C258	4WD ECM
C214	PTC heater relay #1	C259	PTC heater
C215	PTC heater relay #2	C260	G-YAW sensor(With ESP)
C216	Brake fluid level sensor	C261	Throttle flap actuator
C217	Front wiper motor	C262	DRL control module
C218	Glow plug relay	C263	Burglar horn
C220	PTC heater relay #3	C264	Vacuum switch
C223	Joint connector	C265	Pressure sensor(With ESP)
C224-1	TCM	CF21	Connection with FLOOR harness
C224-2	TCM	EC21	Connection with LEFT FRONT harness
C224-3	TCM	EC22	Connection with LEFT FRONT harness
C225	Fuel filter heater relay	EC23	Connection with LEFT FRONT harness
C227	Fuel filter heater	EC26	Connection with RIGHT FRONT harness
C228	Fuel filter heater sensor	EC27	Connection with RIGHT FRONT harness
C229	Fuel filter warning switch	MC21	Connection with MAIN harness
C230-1	ECM	MC22	Connection with MAIN harness
C230-2	ECM	MC23	Connection with MAIN harness
C231	EGR actuator	MC24	Connection with MAIN harness
C235	Joint connector	G31	Ground(Control)
C236	ATM control relay	G32	Ground(TCM)
C237-1	Injector #1	G34	Ground(ECM)
C237-2	Injector #2	G35	Ground(4WD)
C237-3	Injector #3	G36	Ground(PTC)

CONTROL HARNESS

CONTROL HARNESS (8)

HL-14


CONTROL HARNESS(DIESEL EURO-IV)

C301	Crankshaft position sensor	C348	Windshield defogger
C303	Rail pressure sensor	C353	Clutch switch(M/T)
C304	Engine coolant temperature sensor & sender	C354	Stop lamp switch
C305	Back-up lamp switch(M/T)	C355	Ignition lock switch(M/T)
C306	Glow plug	C356	Accelerator pedal sensor
C308	Transaxle range switch	C358	4WD ECM
C309	ATM solenoid valve	C359	PTC heater
C310	Camshaft position sensor	C360	G-YAW sensor(With ESP)
C311	Oil pressure switch	C362	DRL control module
C312	Fuel temperature sensor	C363	Burglar horn
C313	Air flow sensor	C364	Vacuum switch
C314	PTC heater relay #1	C365	Pressure sensor(With ESP)
C315	PTC heater relay #2	C368	Boost pressure sensor
C316	Brake fluid level sensor	C369	Differential pressure sensor
C317	Front wiper motor	C371	Exhaust gas temperature sensor #1
C318	Glow plug relay	C372	Exhaust gas temperature sensor #2
C320	PTC heater relay #3	C373	Electrical throttle control actuator
C323	Joint connector	C374	VGT actuator
C324-1	TCM	C375	Fuel metering unit
C324-2	TCM	C376	Lambda sensor
C324-3	TCM	C377	Variable swirl control actuator
C325	Fuel filter heater relay	C378	Neutral switch
C327	Fuel filter heater	C379	Fuel pressure regulating valve
C328	Fuel filter heater sensor	CF31	Connection with FLOOR harness
C329	Fuel filter warning switch	EC31	Connection with LEFT FRONT harness
C330-1	ECM	EC32	Connection with LEFT FRONT harness
C330-2	ECM	EC33	Connection with LEFT FRONT harness
C331	EGR actuator	EC36	Connection with RIGHT FRONT harness
C335	Joint connector	EC37	Connection with RIGHT FRONT harness
C336	ATM control relay	MC31	Connection with MAIN harness
C337-1	Injector #1	MC32	Connection with MAIN harness
C337-2	Injector #2	MC33	Connection with MAIN harness
C337-3	Injector #3	MC34	Connection with MAIN harness
C337-4	Injector #4	G37	Ground(Control)
C342	Pulse generator "A"	G38	Ground(TCM)
C343	Pulse generator "B"	G39	Ground(ECM)
C345	ATM lever switch	G40	Ground(4WD)
C346	Vehicle speed sensor	G41	Ground(PTC)

AIR BAG HARNESS EC0D461C


AIR BAG HARNESS (1)

HL-15

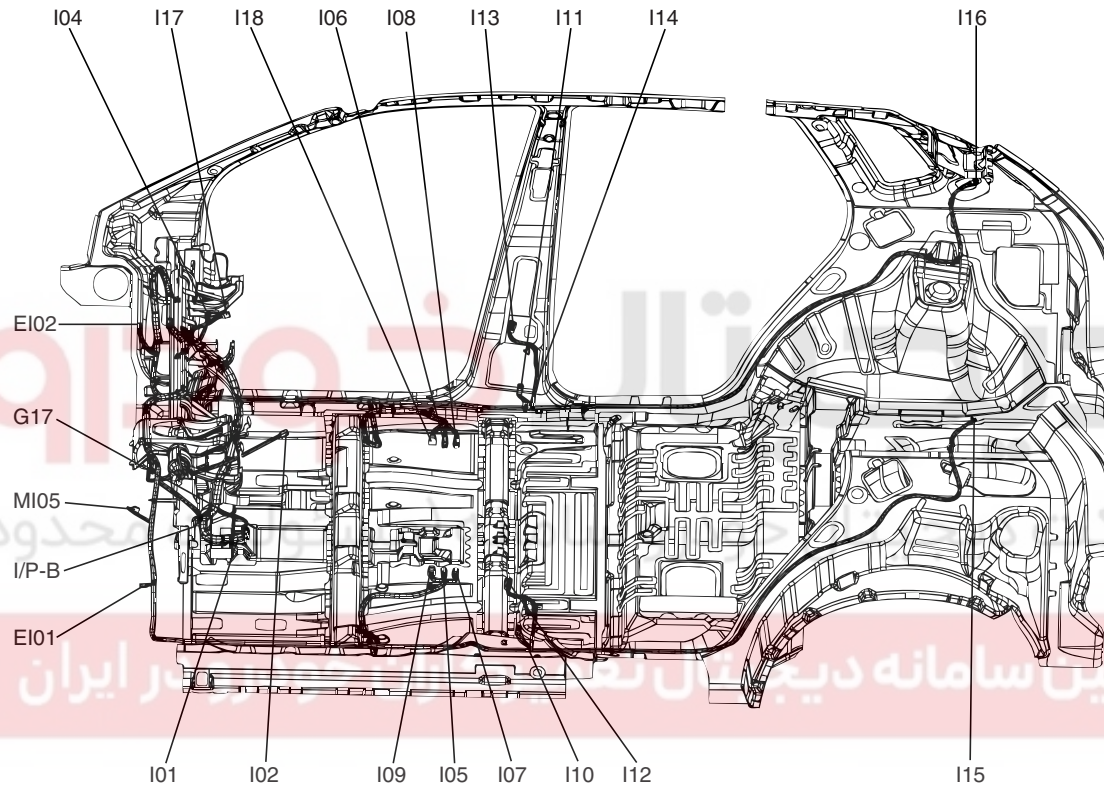

A/BAG HARNESS

- I01 SRS control module
- I02 Driver air bag
- I04 Passenger air bag
- I05 Driver seat buckle switch
- I06 Passenger seat buckle switch
- I07 Driver side air bag
- I08 Passenger side air bag
- I10 Driver side impact sensor
- I11 Passenger side impact sensor
- I12 Driver seat belt pretensioner
- I13 Passenger seat belt pretensioner
- I15 Driver curtain air bag
- I16 Passenger curtain air bag
- EI01 Connection with LEFT FRONT harness
- EI02 Connection with RIGHT FRONT harness
- I/P-B Connection with I/P JUNCTION BOX harness(LHD)
- I/P-Ba Connection with I/P JUNCTION BOX harness(RHD)
- MI05 Connection with MAIN harness
- G17 Ground(A/bag)

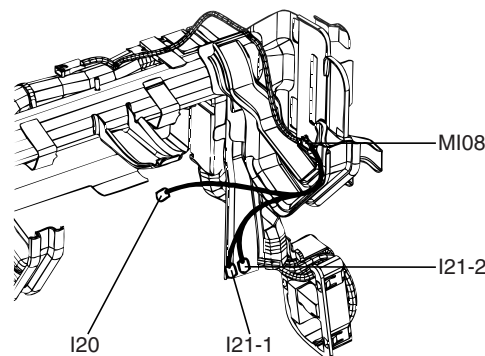


GLOVE BOX EXT. HARNESS

- I20 Glove box ILL.
- I21-1 Glove box switch(+)
- I21-2 Glove box switch(-)
- MI08 Connection with MAIN harness

A/C HARNESS E93F471E

A/C HARNESS (1)

HL-16

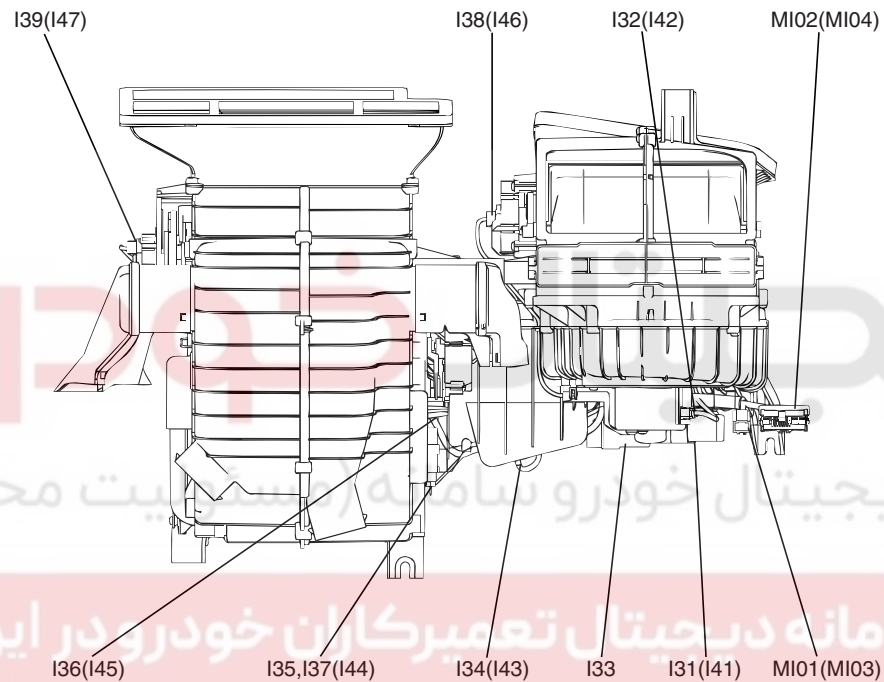


A/C HARNESS(AUTO)

- I31 Blower relay
- I32 Blower motor
- I33 High blower relay
- I34 Power transistor
- I35 Water temperature sensor
- I36 Temperature actuator
- I37 Evaporator temperature sensor
- I38 Intake actuator
- I39 Mode actuator
- MI01 Connection with MAIN harness
- MI02 Connection with MAIN harness

A/C HARNESS(MANUAL)

- I41 Blower relay
- I42 Blower motor
- I43 Blower resistor
- I44 Thermostatic switch
- I45 Temperature actuator
- I46 Intake actuator
- I47 Mode actuator
- MI03 Connection with MAIN harness
- MI04 Connection with MAIN harness

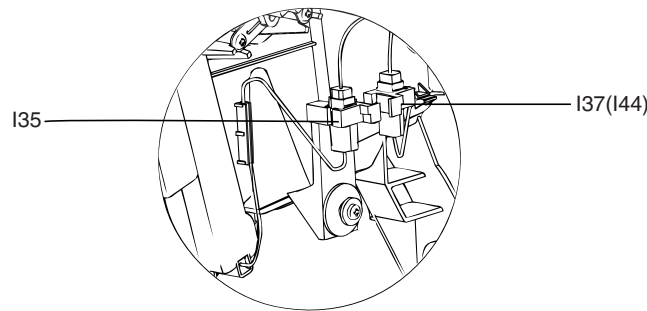


() : MANUAL A/C

DOOR HARNESS EF39DEE4

DOOR HARNESS (1)

HL-17

FRONT DOOR

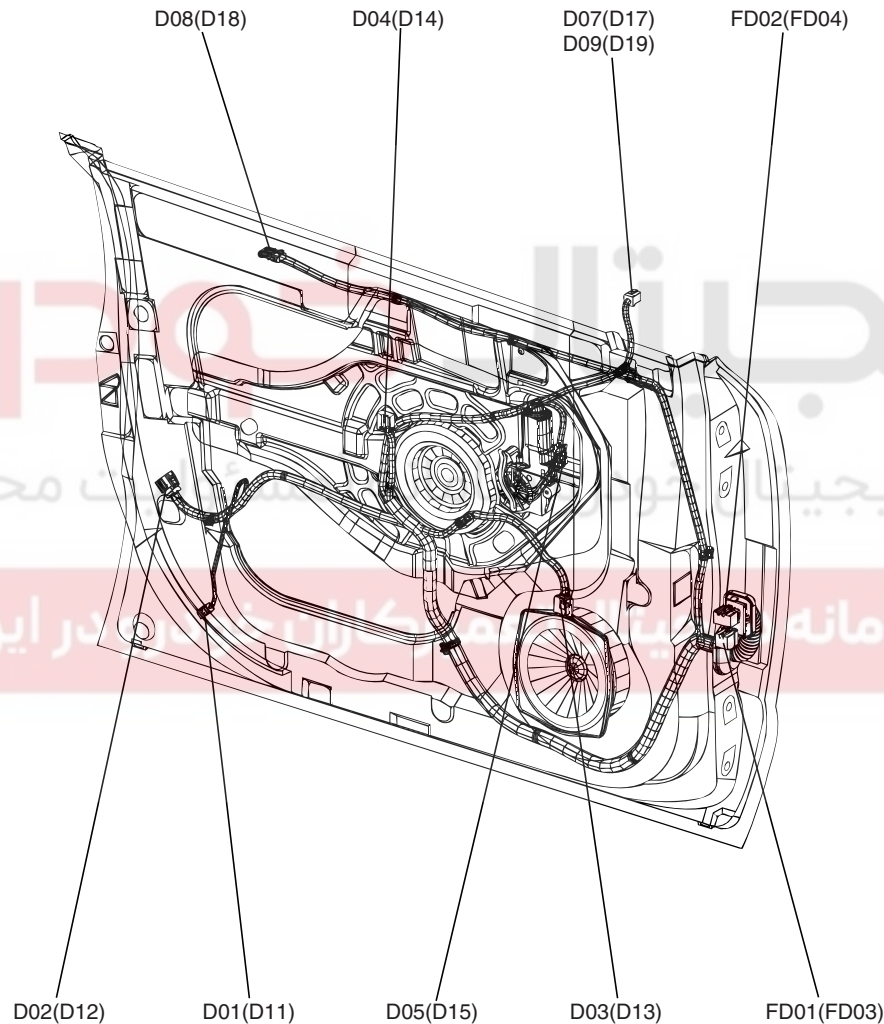

DRIVER DOOR HARNESS

- D01 Driver door lamp
- D02 Driver door lock actuator(LHD)
- D02a Driver door lock actuator(RHD)
- D03 Driver door speaker
- D04 Driver power window switch
- D05 Driver power window motor
- D06 Power outside mirror & mirror folding switch(LHD)
- D06a Power outside mirror & mirror folding switch(RHD)
- D07 Driver tweeter speaker
- D09 Driver outside mirror & mirror folding motor
- D10 Power outside mirror folding module
- FD01 Connection with FLOOR harness
- FD02 Connection with FLOOR harness

ASSISTOR DOOR HARNESS

- D11 Assistor front door lamp
- D12 Assistor door lock actuator(LHD)
- D12a Assistor door lock actuator(RHD)
- D13 Assistor door speaker
- D14 Assistor power window switch
- D15 Assistor power window motor
- D17 Assistor tweeter speaker
- D19 Assistor power outside mirror & mirror folding motor
- FD03 Connection with FLOOR harness
- FD04 Connection with FLOOR harness


() : ASSISTOR

DOOR HARNESS

DOOR HARNESS (2)

HL-18

REAR DOOR

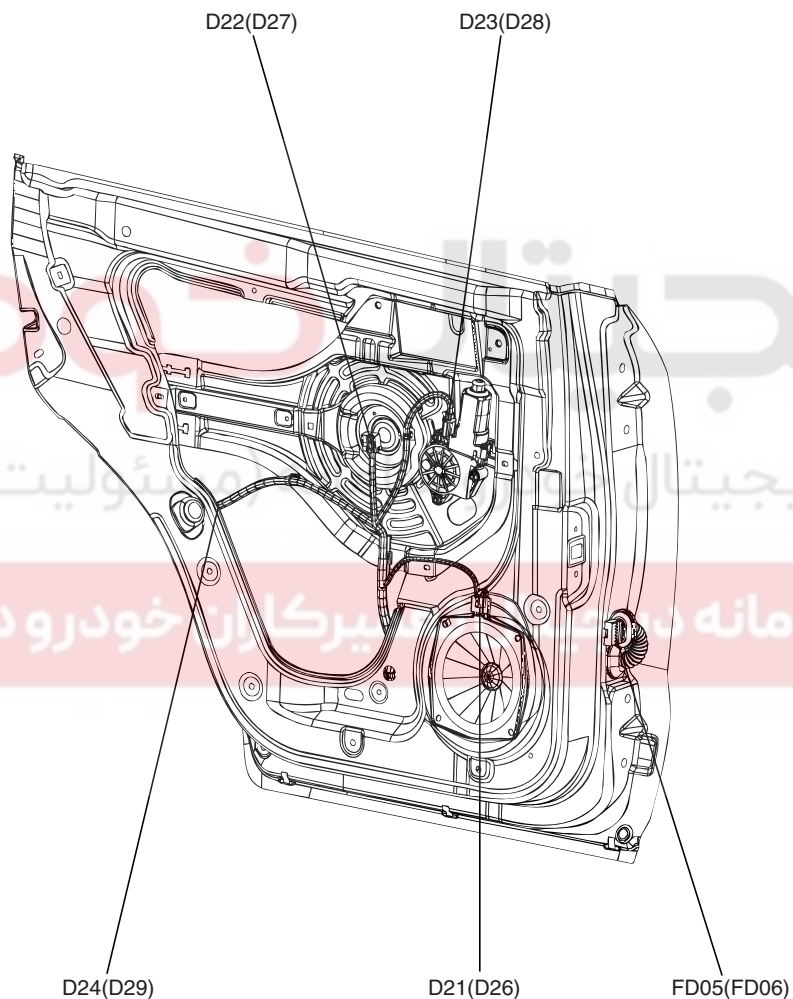

LEFT REAR DOOR HARNESS

- D21 Left rear door speaker
- D22 Left rear power window switch
- D23 Left rear power window motor
- D24 Left rear door lock actuator
- FD05 Connection with FLOOR harness

RIGHT REAR DOOR HARNESS


- D26 Right rear door speaker
- D27 Right rear power window switch
- D28 Right rear power window motor
- D29 Right rear door lock actuator
- FD06 Connection with FLOOR harness

() : RIGHT

TAIL GATE HARNESS EFFA9D45

TAIL GATE HARNESS (1)

HL-19

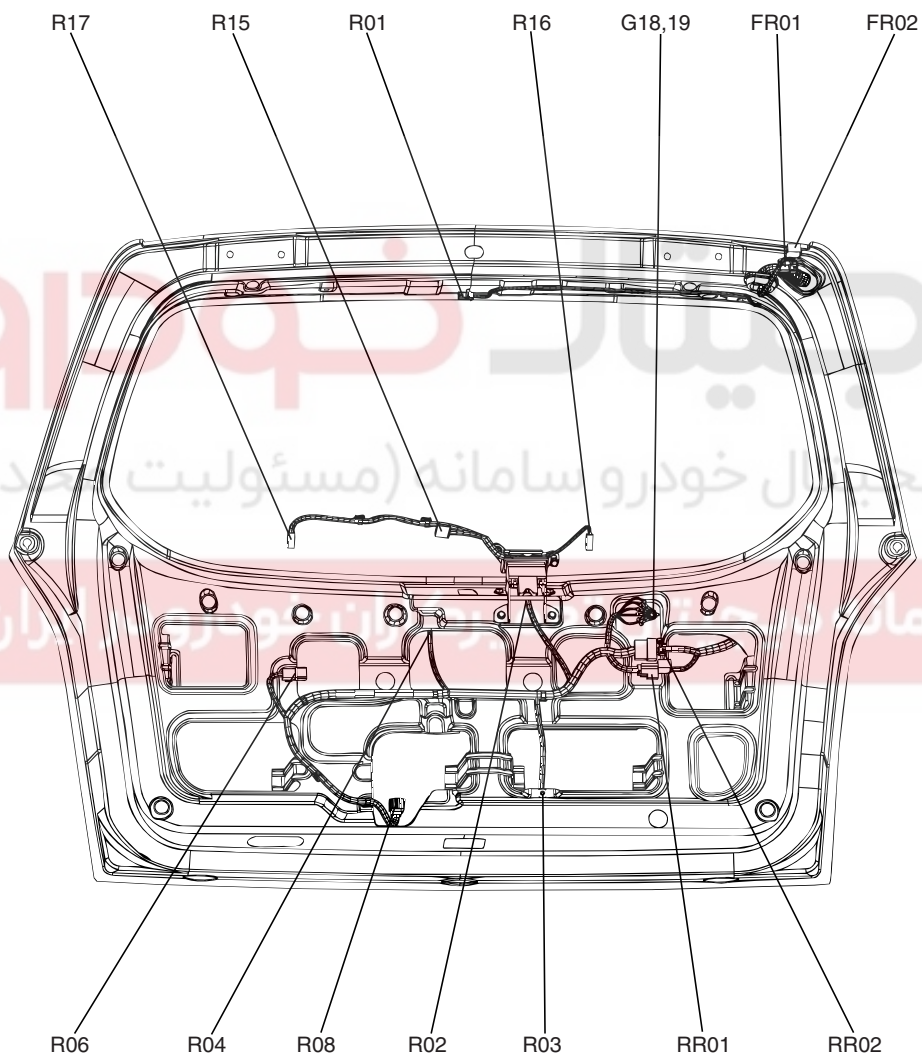

TAIL GATE EXT. HARNESS

- R01 High-mounted stop lamp
- FR01 Connection with FLOOR harness
- FR02 Connection with FLOOR harness
- RR01 Connection with TAIL GATE harness
- RR02 Connection with TAIL GATE harness

TAIL GATE HARNESS

- R02 Contact(Rear wiper motor & rear defogger)
- R03 Tail gate switch
- R04 Rear window switch
- R06 License lamp
- R08 Tail gate lock actuator
- R15 Rear wiper motor
- R16 Rear defogger(+)
- R17 Rear defogger(-)
- RR01 Connection with TAIL GATE EXT. harness
- RR02 Connection with TAIL GATE EXT. harness
- G18 Ground(Tail gate)
- G19 Ground(Rear defogger)

RADIO FEEDER ANTENNA ROUTE E1B19C68

RADIO FEEDER ANTENNA ROUTE (1)

HL-20

