BODY INTERIOR

7330-01/7332-01/7610-01/7730-12/7770-01/7850-01/

OVERVIEW AND OPERATION PROCESS

1. LOCATIONS.....

REMOVAL AND INSTALLATION

7610-01 INSTRUMENT PANEL

ASSEMBLY.....

7610-01 INSTRUMENT PANEL

FRAME ASSEMBLY 7330-01 CENTERCONSOLE.....

22

(AUTOMATIC TRANSMISSION)

7332-01 CENTER CONSOLE

(MANUAL TRANSMISSION) 20 7770-01 SUNVISOR

7730-12 PILLAR 23

7330-01 HEADLINING ASSEMBLY..... 29

7850-01 OUTSIDE REARVIEW

MIRROR 32


7770-01 INSIDE REARVIEW MIRROR...... 34

BODY INTERIOR



OVERVIEW AND OPERATION PROCESS


1. LOCATIONS

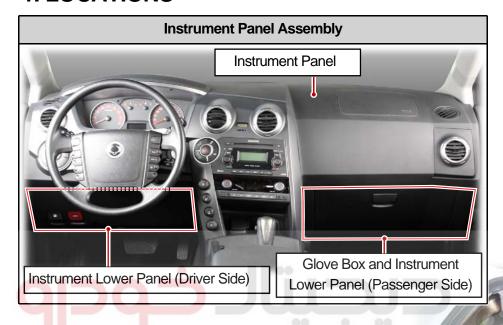

Sun Visor

ال خودرو سامانه (مسئولیت محدود

ر سامانه دیجیتال تعمیرکاران خودر و در ایران

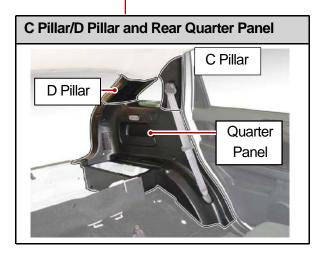




A Pillar


BODY INTERIOR

ACTYON 2012.12
WWW.DIGITALKHODRO.COM

Modification basis				
Application basis				
Affected VIN	021 62 9	9	92	92



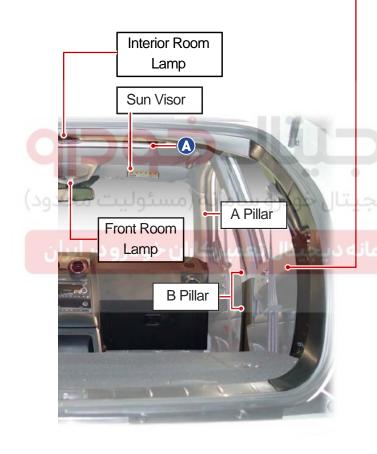

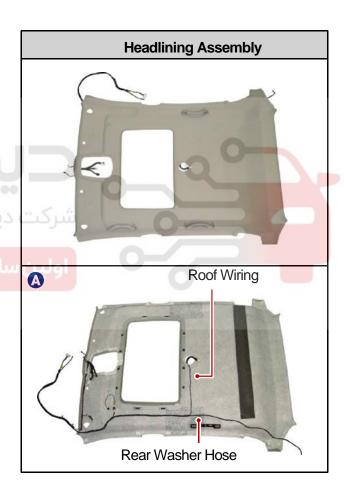

REMOVAL AND INSTALLATION

7610-01 INSTRUMENT PANEL ASSEMBLY

▶ Preceding Work


Disconnect the negative battery cable and perform the preceding work to the following procedure.


1. Insert a flat blade screwdriver into the groove (A) and pry off the instrument side cover.


A CAUTION


Be careful not to damage the components around the instrument panel and clips.

2. Disconnect the cables for fuel lid opening lever (A) and engine hood release lever (B). Unscrew three mounting nuts and one mounting screw and remove the lower panel.

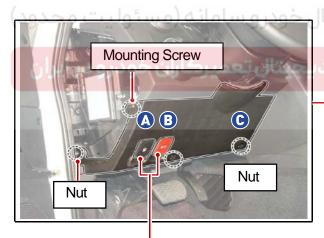


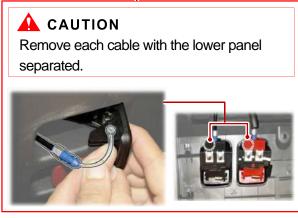

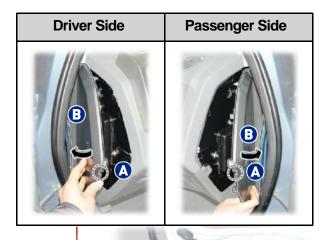

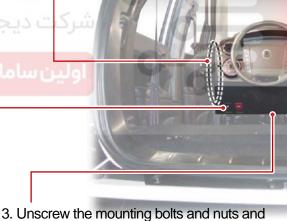

remove the undercover and bracket.

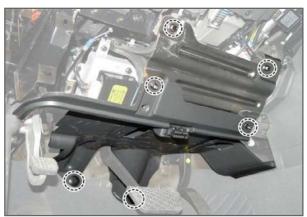

BODY INTERIOR

ACTYON 2012.12 WWW.DIGITALKHODRO.COM

Modification basis		
Application basis	004.00.0	
Affected VIN	021 62 9	9 92 92

4. Remove the center fascia panel by separating lower side first and pulling it upward.




Remove the panel assembly of outside rearview mirror switch bezel (Refer to "Switch" section.).



Remove the lower instrument panel (passenger side) and glove box (Refer to the reference 1 on next page).



7. Remove the center console assembly and the center fascia lower tray.

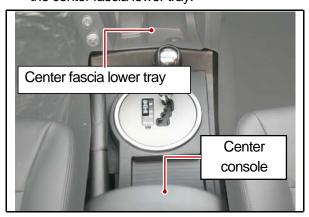

8. Remove the steering wheel assembly (Refer to the reference 2 on next page).




7610-01

ACTYON





Removal and Installation of Glove Box **CAUTION**

1. Open the glove box and disconnect the fixing hook (1) and then lower the glove box (3) pushing it to left side (2).

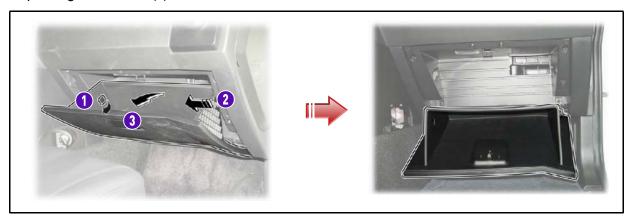

2. Remove five screws and three bolts from the glove box and disconnect the glove box lamp (A) and switch (B) connectors to remove the glove box assembly.

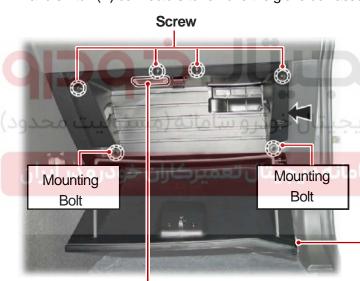

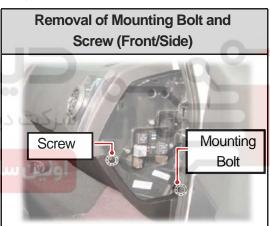

B. Glove Box Switch Connector

A. Glove Box Lamp Connector







A CAUTION

The glove box lamp comes on only when the tail lamp is on.

BODY INTERIOR

ACTYON 2012.12
WWW.DIGITALKHODRO.COM

		_		
Modification basis				
Application basis	004.00.0			
Affected VIN	021 62 9	9	92	92

 $\overline{\mathbf{A}}$

CAUTION


Removal and Installation of Steering Wheel Assembly

1. Disconnect the combination meter connector, key switch connector, steering angle sensor connector and airbag connector.





Unscrew the connecting bolt for lower shaft and steering column shaft (lower side).

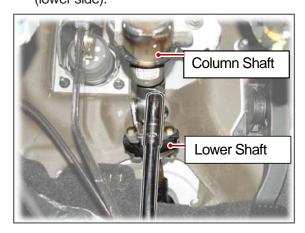

Unscrew three lower mounting bolts from the steering column shaft.





4. Unscrew two upper mounting bolts from the steering column shaft.



5. Carefully remove the steering wheel assembly.

- 9. Remove the lower instrument main panel.
- A: Unscrew two front mounting screws and a nut from the lower instrument main panel.

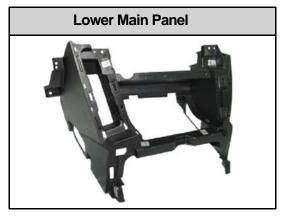


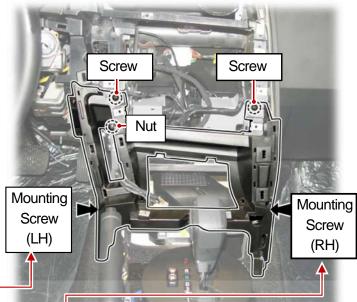


B: Remove the mounting screw cover at left lower side and unscrew mounting screw.



 ng




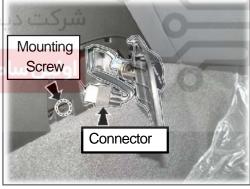

C: Unscrew two mounting screws at left upper side.




E: Unscrew a mounting screw and a bolt at right upper side with the glove box assembly removed.

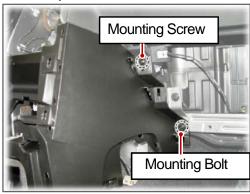


00					Q	
00			ביי	0-	2	
)(ئولىت م	سامانه (مسا			0—		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
		جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج	0		
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج			
	سامانه (مسا	جيتال خودرو	شرکت دیج			



10. Remove the sun sensor from the instrument panel (driver side).

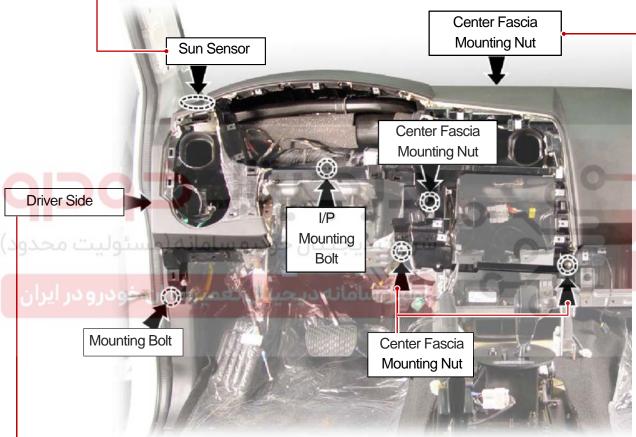

11. Unscrew the mounting nuts from the fuse/relay box and instrument panel (driver side).

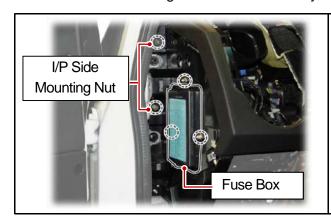




12.Unscrew the center mounting nut on the instrument panel.




- Remove the center speaker.

13 Unscrew the mounting nuts from the fuse/relay box and instrument panel (passenger side).

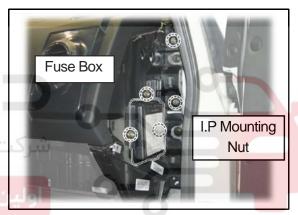

14. Disconnect the passenger airbag connector and unscrew three mounting bolts.

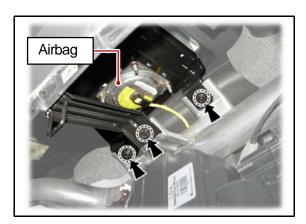



05-12 7610-01

ACTYON

15. removed instrument panel assembly



AUTION When removing or installing, be careful not to damage the instrument panel.

Front View



Rear View



BODY INTERIOR

ACTYON 2012.12
WWW.DIGITALKHODRO.COM

Modification basis				
Application basis	004.00.0			
Affected VIN	021 62 9	9	92	92

	5		\supset U			Q	
29			-)	<u></u>	2	
) (ىئولىت م			ت دیجیتار	شرک	<u></u>		
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س					
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				
	ىامانە (مى	ن خودرو س	ت دیجیتال				

7610-01 INSTRUMENT PANEL FRAME ASSEMBLY

Preceding work

Disconnect the connectors and ground cable from the instrument panel frame.

1. Disconnect the brake switch connector.





2. Disconnect the accelerator pedal sensor connector.




3. Remove the cover a left lower side of instrument panel and disconnect the main connector and the airbag connector.



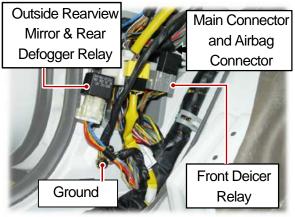


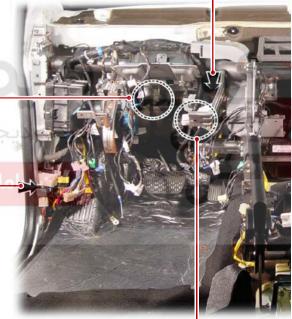

4. Disconnect the connector and remove the mounting bolt.

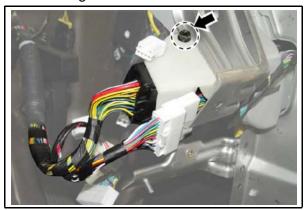


5. Disconnect the A/C connector (A) and

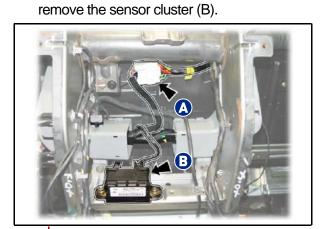


6. Disconnect the air bag unit connector.




7. Disconnect the A/T connector (1), ground (2), air bag ground (3) and parking brake switch connector (4).

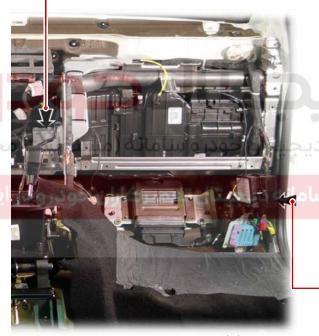

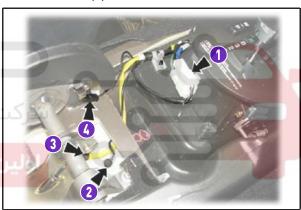


8. Disconnect the main connector (A), air bag connector (B), ground (C) and audio antenna connector.



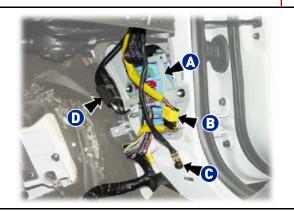

- 9. Unscrew the mounting bolts/nuts and carefully remove the instrument panel frame while paying attention not to touch any cable and electric connector.
- A: Unscrew two mounting bolts from the intrument panel frame at driver side.

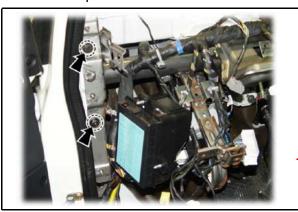


D. Unscrew one mounting bolt from the center





B: Unscrew the mounting bolts from the steering column bracket.



C. Unscrew two center mounting bolts from the [instrument panel frame at left side.

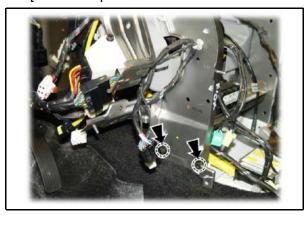

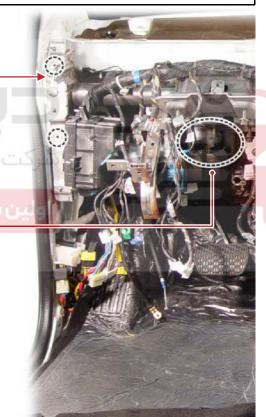


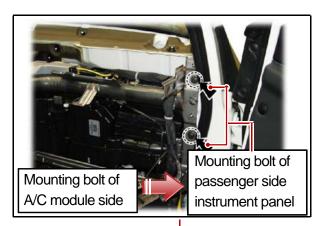

E. Unscrew the mounting bolts from the instrument panel frame and air conditioner module at right side.


F. Unscrew three center mounting bolts from the instrument panel at right side.



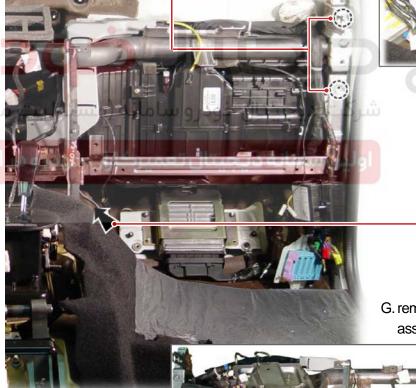

G. removed instrument panel frame assembly

7330-01 CENTER CONSOLE (AUTOMATIC TRANSMISSION)

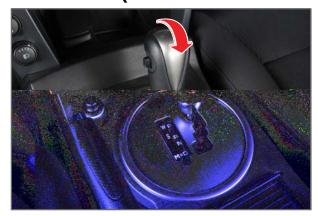


2. Remove the rear duct adapter (A) and the center console cover (B).



1. Place the gear selector lever to any position other than "P" and remove the lever cover.

A CAUTION

Make sure that the gear selector lever cover is fitted into the mounting groove when installing

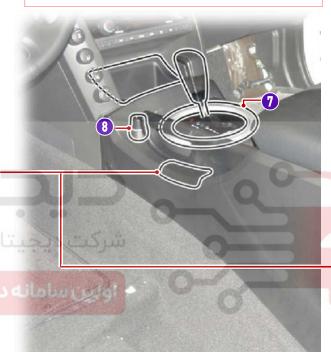

3. Remove the center fascia lower tray from the center console.



4. Unscrew two mounting screws from the center storage box.



BODY INTERIOR

ACTYON 2012.12
WWW.DIGITALKHODRO.COM

Modification basis			
Application basis			
Affected VIN	021 62 9	9 92	92

console.


5. Unscrew two screws from the center




6. Remove the storage box cover and unscrew two mounting bolts in center console.



7. Make an installation mark on equalizer adjusting nut. Slacken the equalizer adjusting nut so that the parking brake lever can be raised all the way.

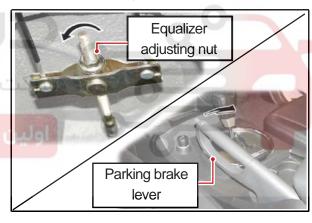

8. Disconnect the cigarette lighter connector and remove the center console.

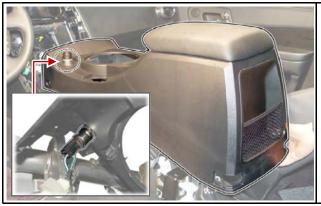





9. Install the center console and adjust the parking brake equalizer adjusting nut to the original position.

7332-01 CENTER CONSOLE(MANUAL TRANSMISSION)

1. Remove the gear selector lever knob by turning it counterclockwise.

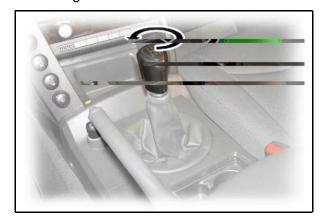

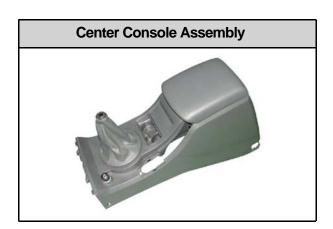


2. Remove the rear duct adapter (A) and center console cover (B).






3. Remove the center fascia lower tray from the center console.

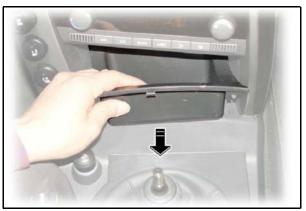

4. Unscrew two mounting screws from the center storage box.

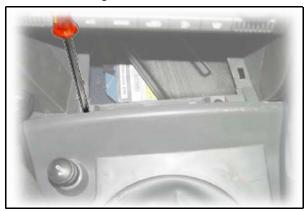

5. Unscrew two screws from the center console.



6. Remove the storage box cover and unscrew the mounting bolts in center console.




7. Make an installation mark on equalizer adjust nut. Slacken the equalizer adjusting nut so that the parking brake lever can be raised all the way.





8. Disconnect the cigarette lighter connector and remove the center console assembly.




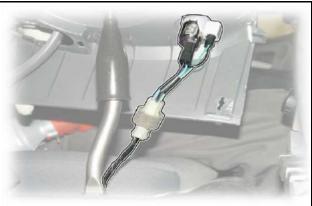

9. Install the center console and adjust the parking brake equalizer adjusting nut to the original position.





7770-01 SUNVISOR

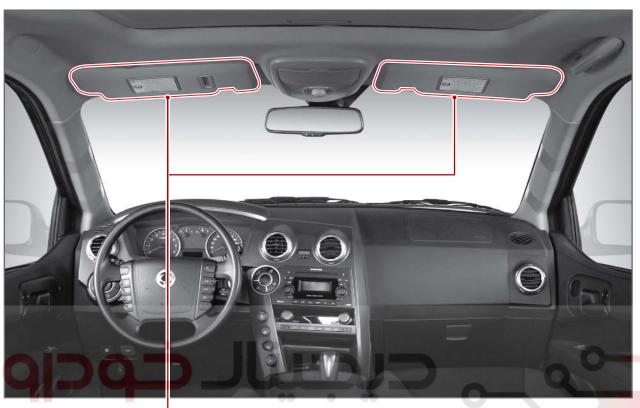

1. Unscrew the mounting screws from the sun visor and disconnect the electric connector.



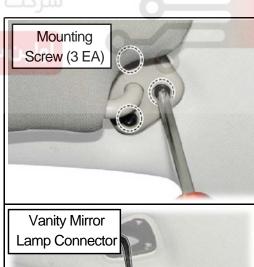

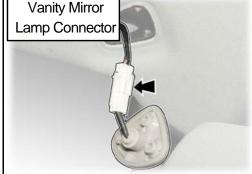

7730-12 PILLAR AND REAR QUARTER TRIM

- Preceding work 1. Disconnect the negative battery cable and remove the seats.
 - 2. For seat belt, refer to "Seat and Seat Belt" section.

A CAUTION

When installing and removing, be careful not to damage the pillar, trim and other components.

1) A Pillar Trim

1. Unscrew the mounting screw and remove the A pillar trim.







2. Remove the front and rear scuff trims and unscrew the lower mounting bolts of the seat belt to remove the lower B pillar.



3. Unscrew the upper mounting bolt and remove the seat belt. Then, unscrew the upper mounting screws to remove the B pillar.




3) Rear Quarter Trim and C & D Pillar Trims

Remove the trims and covers before removing the rear quarter trim.



1. Remove the spare tire cover.

2. Unscrew five bolts and remove the rear seat cover.

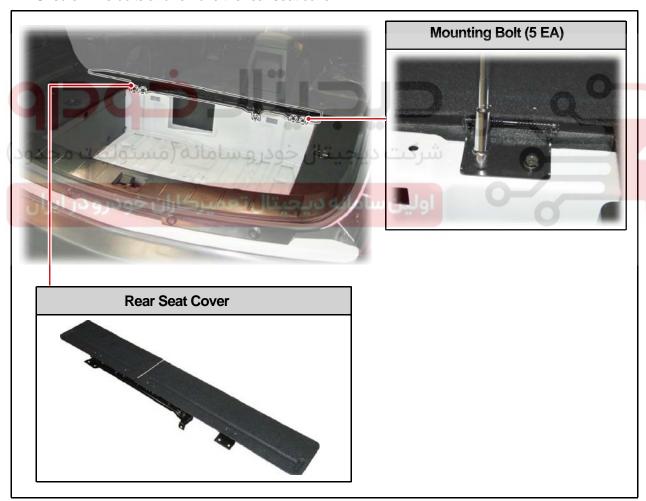

 
















4) D Pillar Trim

1. Unscrew the mounting screws and remove the D pillar trim.





5) C Pillar Trim

1. Remove the rear quarter trim and seat belt. Then, remove the C pillar trim.





6) Rear Quarter Trim

1. Unscrew the lower mounting screw from the rear quarter trim.



2. Remove the luggage compartment lamp (rear left quarter trim).



3. Unscrew the lower mounting bolt from rear seat belt on rear quarter trim.



4. Remove the rear door scuff trim.



Remove the rear door molding and the rear quarter trim assembly.



 The removal procedures for RH rear quarter trim is same with that of LH rear quarter trim. However, the power outlet connector should be disconnected before removing it.








7330-01 HEADLINING ASSEMBLY

Preceding work

Disconnect the negative battery cable.

1. Remove the components shown in the figure below.

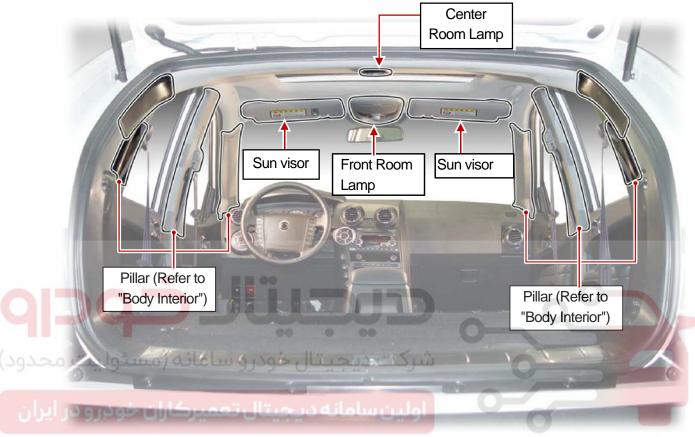

2. Disconnect the rear washer fluid hose from D pillar.







A CAUTION

The washer fluid could be dropped from the hose when disconnecting the hose.

3. Remove the roof wiring connector (A) and rear washer fluid hose (B) through the opening in instrument panel.

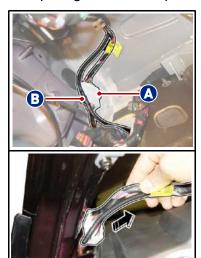


4. Pull out the fasteners (rear - 3, front - 2, driver side - 1) and remove the headlining assembly.

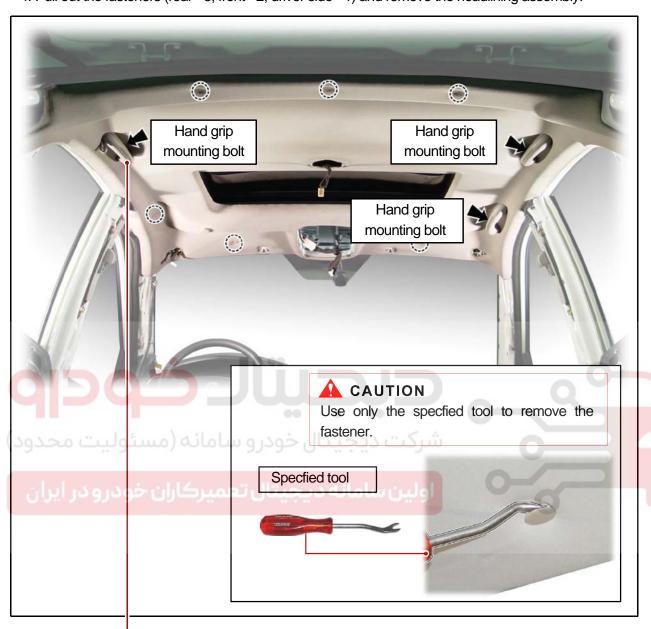



5. Remove two mounting bolts at each hand grip.

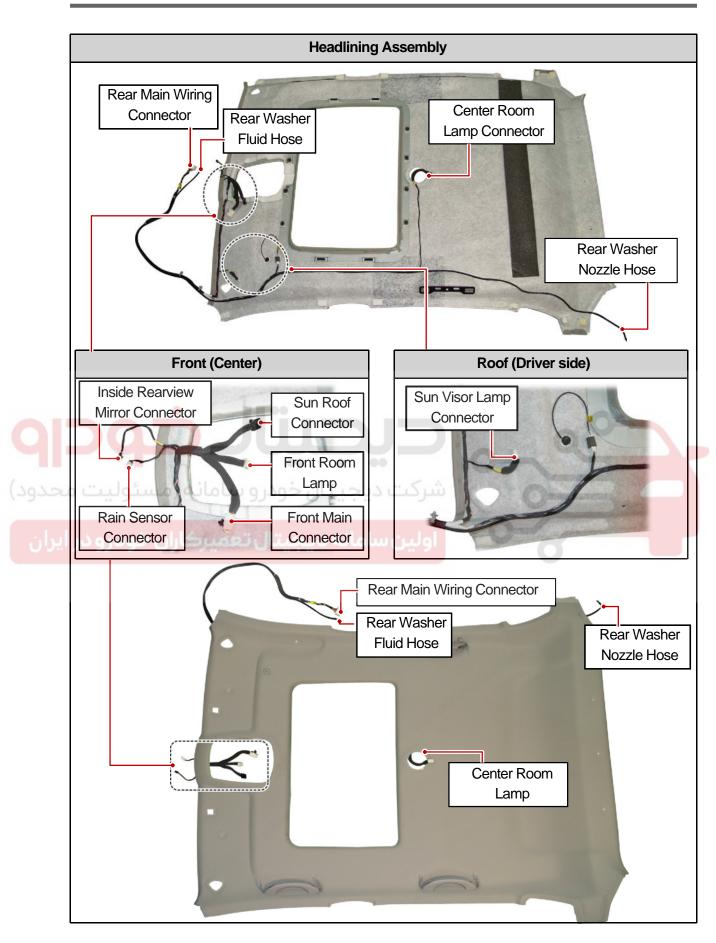

05-32 7850-01

ACTYON

7850-01 OUTSIDE REARVIEW MIRROR



BODY INTERIOR

ACTYON 2012.12
WWW.DIGITALKHODRO.COM

Modification basis Application basis 021 62 99 92 92 Affected VIN



1. Remove the inner covers (A) from the outside rearview mirror.



2. Remove the door trim.

A CAUTION

Unscrew eight mounting screws with dotted circle and remove the door trim starting from lower side.

(For details, refer to "Door" section.)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایرار

3. Disconnect the outside rearview mirror connector.




4. Unscrew five mounting bolts and remove the outside rearview mirror.



7770-01 INSIDE REARVIEW MIRROR

For safer night driving, an electro chromatic mirror (ECM) automatically quells the annoyance of headlight glare from following traffic. It has a light sensor to adjust the reflection rate of inside rearview mirror based on the light intensity around the vehicle.

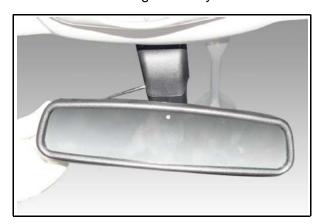

1. Pry off the room mirror cover with a flat blade screwdriver.

2. Disconnect the wiring connector and remove the inside rearview mirror.





