


Central locking

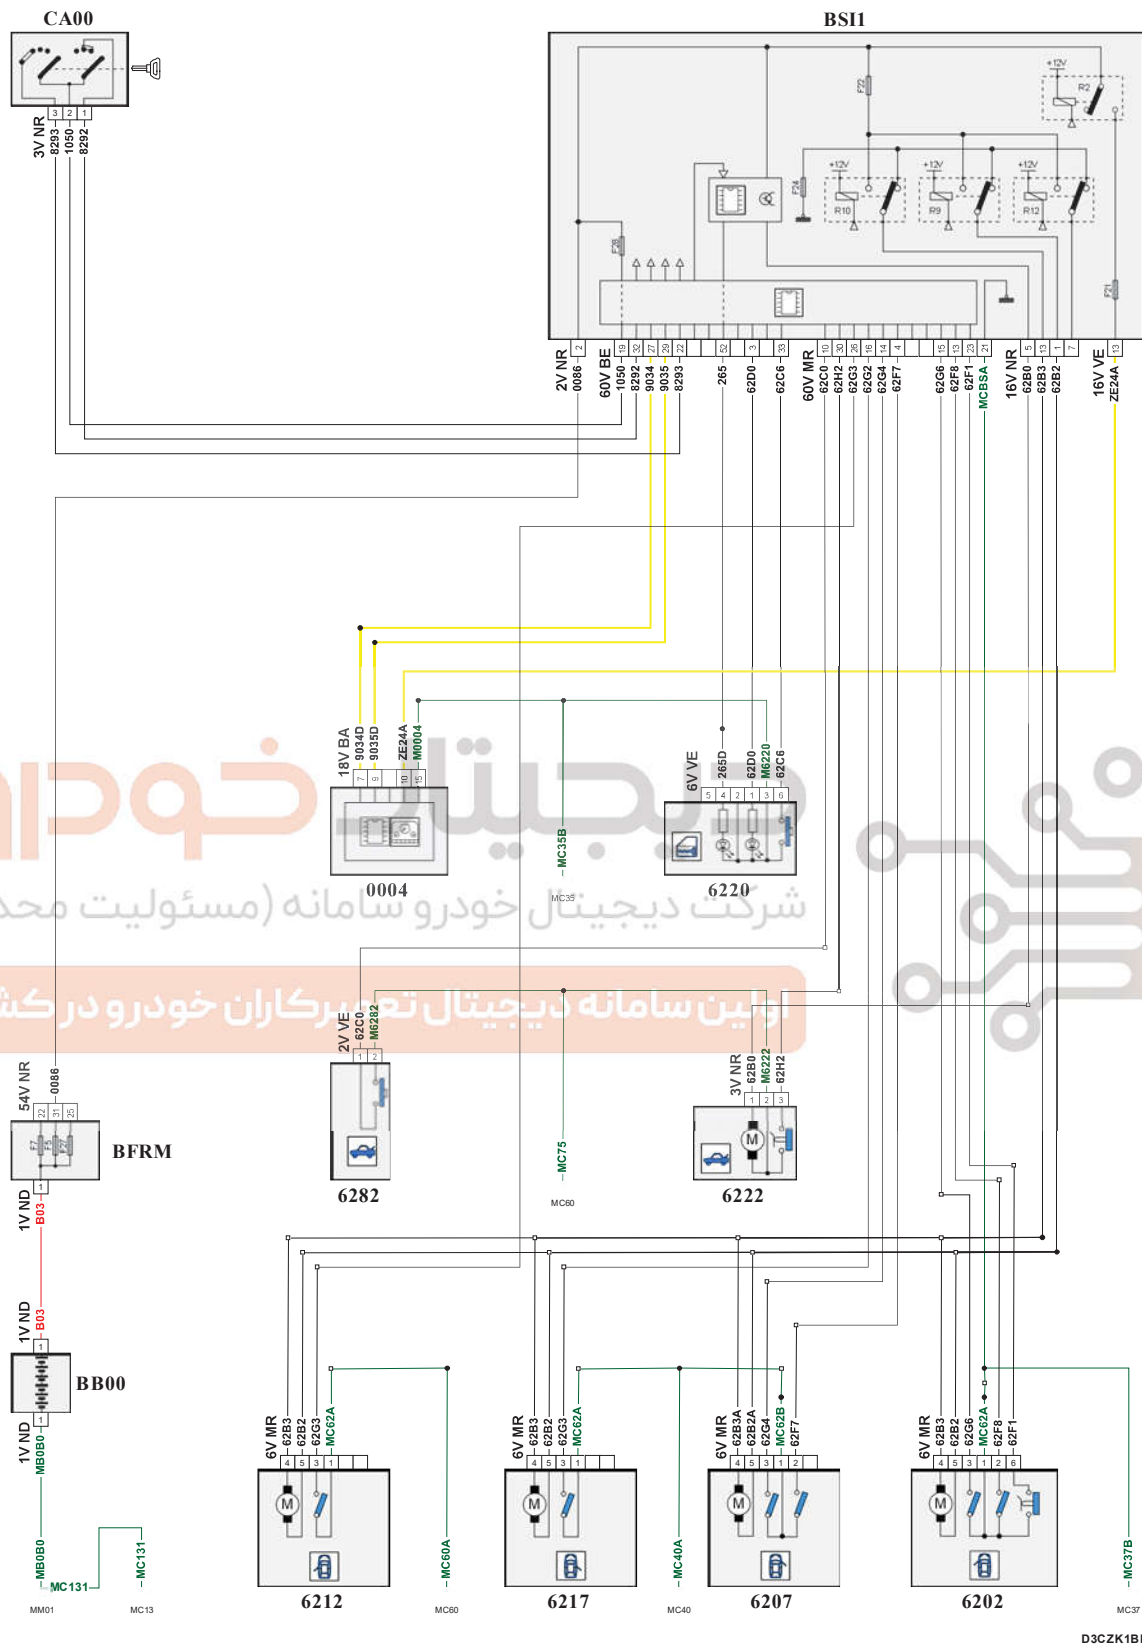

Central locking

item code	description	information
0004	null	/ instrument panel
6202	null	driver's side front door lock assembly
6207	null	front passenger side door lock assembly
6212	null	rear left door lock assembly
6217	null	rear right door lock assembly
6220	null	door locking switch
6222	null	boot or tailgate lock assembly
6282	null	tailgate opening switch/boot lid partial opening switch
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265	null	crimp one information (or equipotential 265) wire
E620	null	crimp one information (or equipotential 620) wire
E623	null	crimp one information (or equipotential 623) wire
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
EM40	null	crimp earth (earth point number 40)
EM60	null	crimp earth (earth point number 60)
EM60A	null	crimp earth (earth point number 60A)
EM60B	null	crimp earth (earth point number 60B)
EM75A	null	crimp earth (earth point number 75A)
MC13	null	body earth point number 13
MC35A	null	body earth point number 35
MC37B	null	body earth point number 37B
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MC60B	null	body earth point number 60
MM01	null	engine earth point number 01