


seat belt fastened information

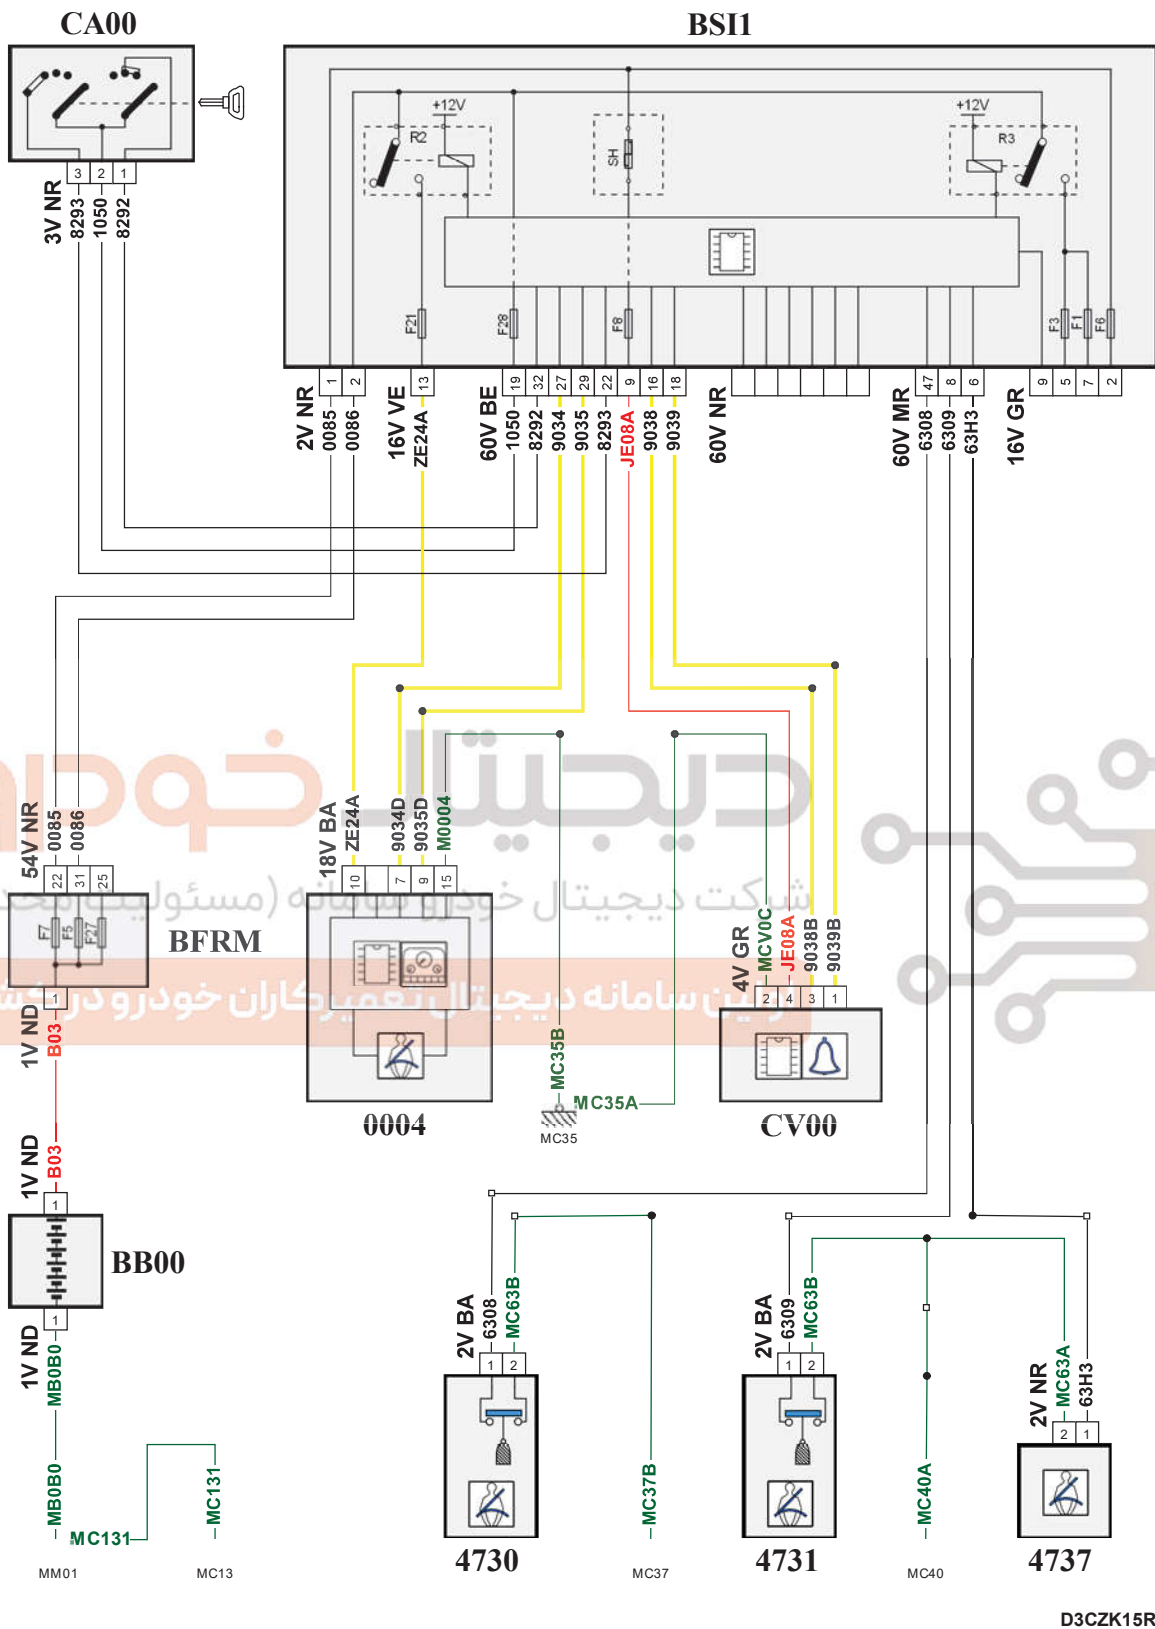

seat belt fastened information

item code	description	information
0004	null	/ instrument panel
4730	null	driver's seat belt switch
4731	null	passenger's seat belt switch
4737	null	driver or front passenger presence detection pad
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E001	null	crimp one information (or equipotential 001) wire
E633	null	crimp one information (or equipotential 633) wire
E904	null	crimp one information (or equipotential 904) wire
E905	null	crimp one information (or equipotential 905) wire
E907	null	crimp one information (or equipotential 907) wire
E908	null	crimp one information (or equipotential 908) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM37	null	crimp earth (earth point number 37)
EM40	null	crimp earth (earth point number 40)
MC13	null	body earth point number 13
MC35A	null	body earth point number 35
MC37B	null	body earth point number 37B
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور