


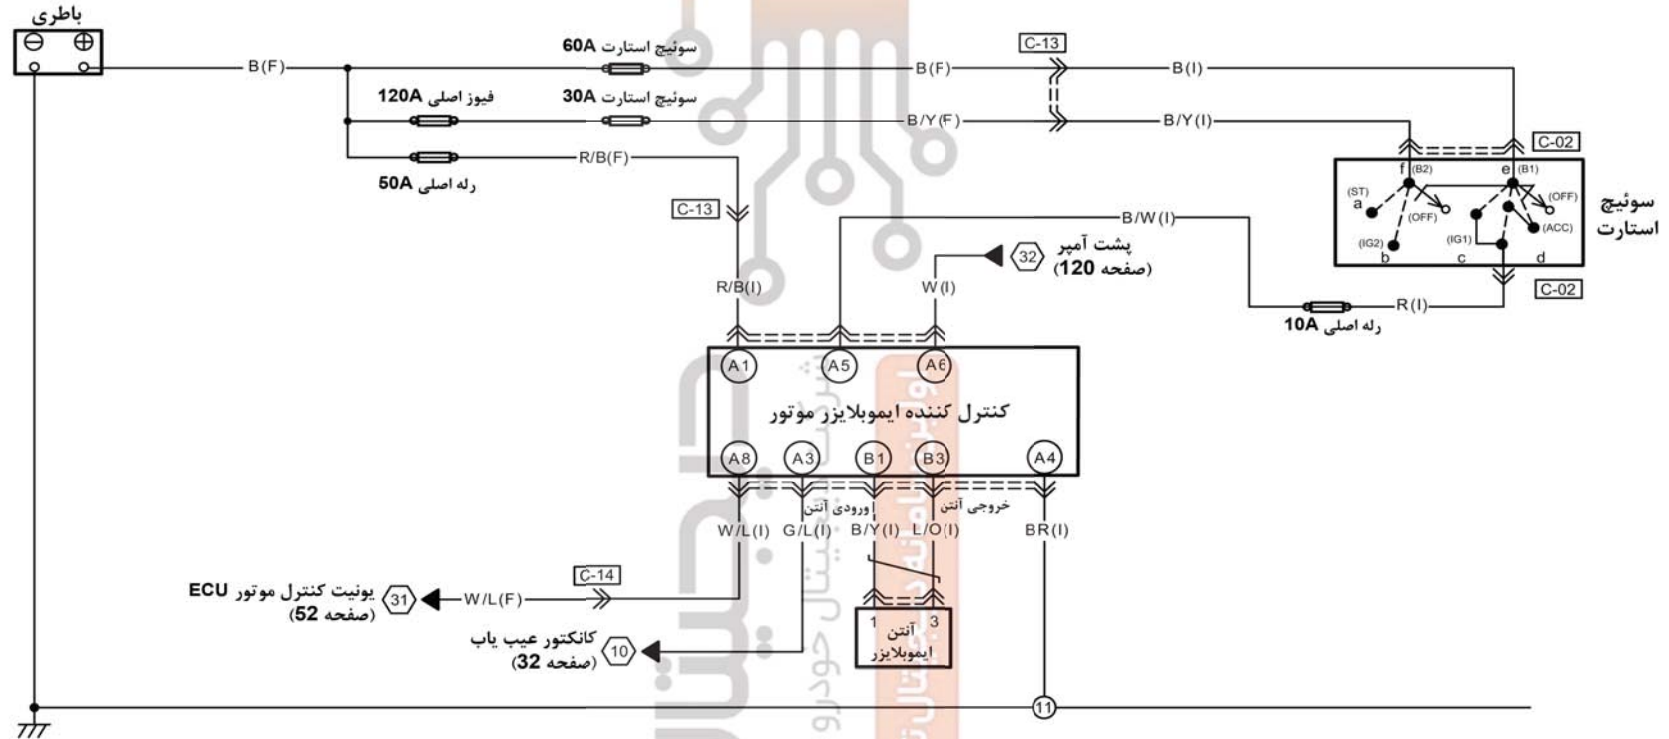


یونیت کنترل موتور ECU


59	R/L	58	Y/B	57	B/W	56	O	55	P	54	V	53	BR
66	B/Y	65	Y/R	64	W	63	R/G	62	Y	61	L	60	G/L
73	Y/L	72	W	71	Y/G	70	V/W	69	G	68	L	67	
80	G	79	V/R	78	L/Y	77	BR/GY	76	G	75	L	74	

14	BR/Y	13	Y/W	12	P/L	11	B/Y	10	BR/Y	9	L/Y	8	B/W	7	L/W	6	B/W	5	L/W	4	B/W	3	L/W	2	BR	1	L/W
28	Y/B	25	B/L	24	Y/G	23	L/B	22	Y	21	G/W	20	R/G	19	R/B	18	B/L	17	L	16	R	15	B/L	14	BR	13	L/W
40	GY/L	39	W/G	38	W	37	G	36	W	35	G	34	W	33	G	32	L	31	R	30	W/L	29	W/L	28	BR	27	R
52	GY/R	51	G/L	50	W	49	G/B	48	W	47	G/B	46	W/G	45	G/L	44	V/W	43	B/V	42	B/V	41	BR	40	BR	39	R

 
کنترل کننده ایموبلایزر موتور



آنتن ایموبلایزر

 

سمبل دسته سیم ها : (B) (I) (E) (F) (L)

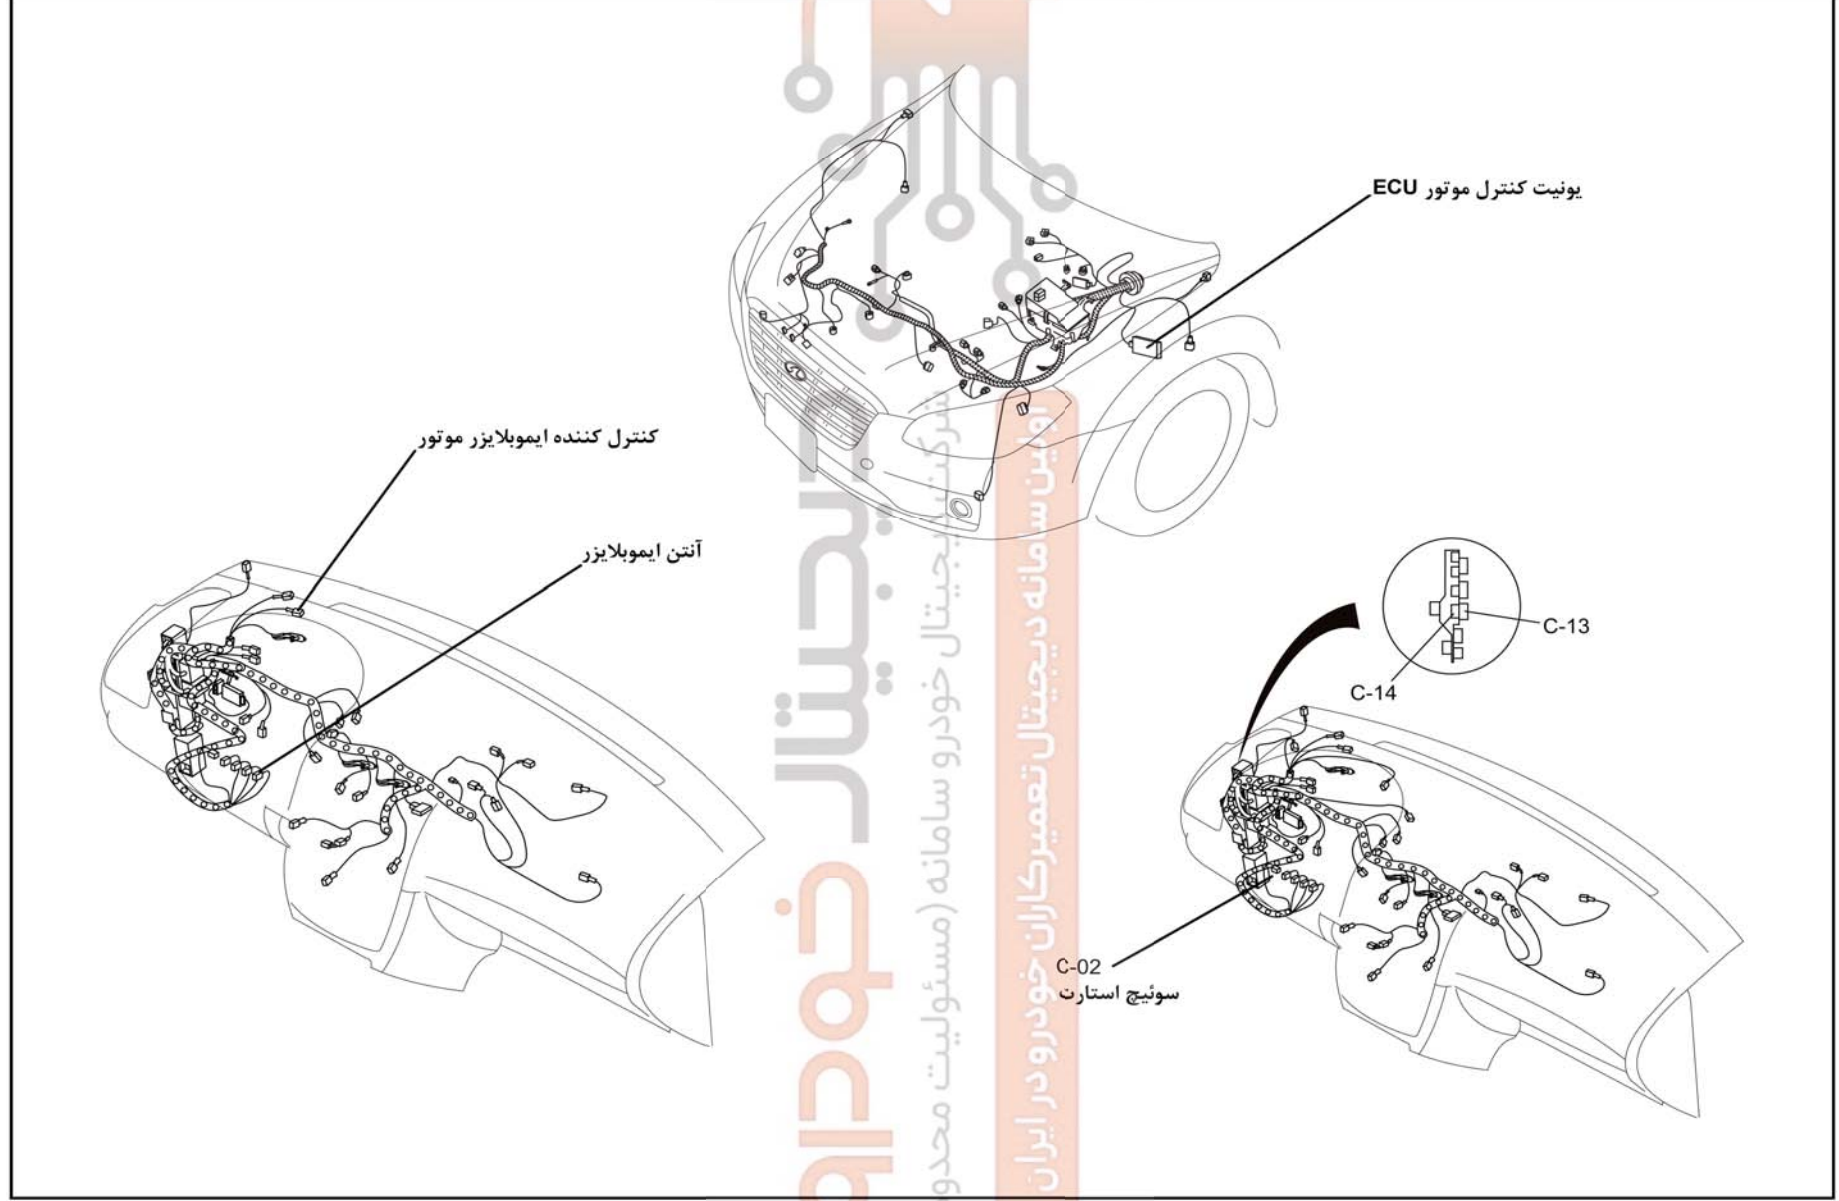

سیستم ایمولایزر: EI موتور : EG

EG-EI-1