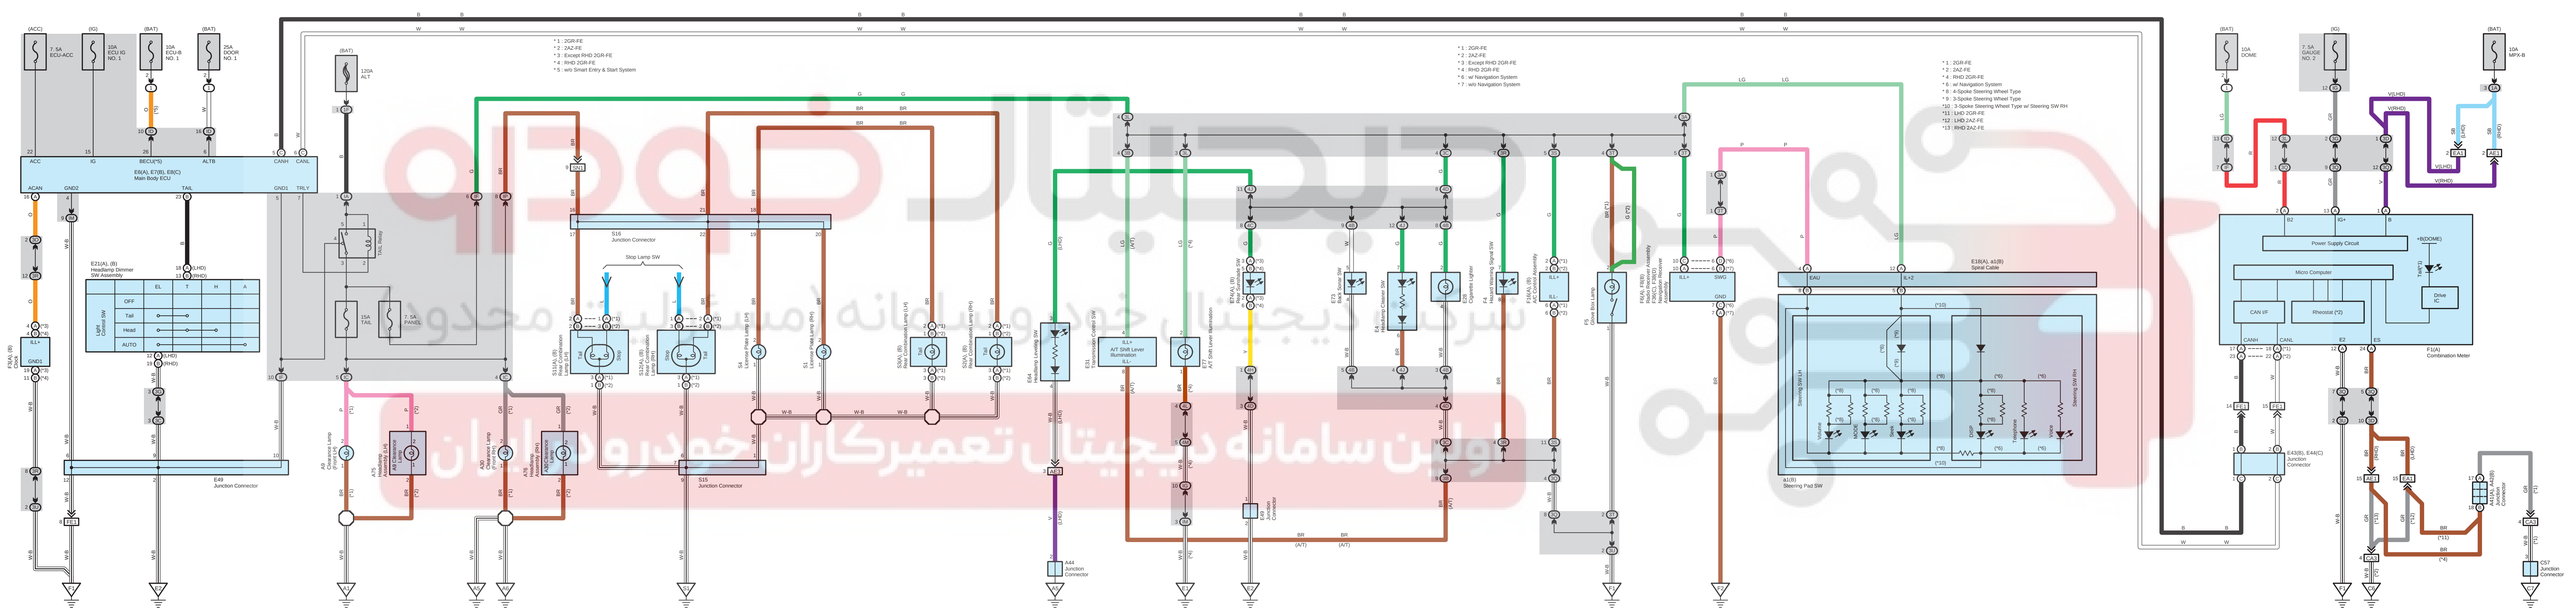
(ACC) 7.5A ECU-ACC
(IG) 10A ECU-IG NO. 1
(BAT) 10A ECU-B NO. 1
(BAT) 25A DOOR NO. 1
(BAT) 120A ALT
E6(A), E7(B), E8(C) Main Body ECU
ACC IG BECU(*5) ALTB CANH CANL
ACAN GND2 TAIL GND1 TRLY
E21(A), (B) Headlamp Dimmer SW Assembly
DIM Control SW
EL T H A
OFF
Tail
Head
AUTO
F2(A), (B) Fuse
GND1
ILL+
E49 Junction Connector
TAIL Relay
15A TAIL
7.5A PANEL
A9 Clearance Lamp (Front RH)
A75 Headlamp (Assembly (LH) A/T Illumination
A76 Headlamp (Assembly (RH) A/T Illumination
A8 Clearance Lamp (Front LH)
S16 Junction Connector
Stop Lamp SW
S11(A), (B) Rear Combination Lamp (LH)
S12(A), (B) Rear Combination Lamp (RH)
S4 Licence Plate Lamp (LH)
S1 Licence Plate Lamp (RH)
S3(A), (B) Rear Combination Lamp (LH)
S2(A), (B) Rear Combination Lamp (RH)
S15 Junction Connector
E64 Stop Lamp Control SW
E31 Shift Lock Control SW
A44 Junction Connector
E34(A), (B) Rear Fog Lamp SW
ILL+ A/T Shift Lever Illumination
E37 A/T Shift Lever Illumination
Junction Connector
E25 Back Door SW
E4 Parking Control SW
E23 Cigarette Lighter
Hazard Warning Signal SW
F3(A), (B) Fuse Block Assembly
F5 Rear Fog Lamp
F6(A), F6(B) Fuse Block Assembly
E18(A), a1(B) Spiral Cable
a1(B) Steering Pad SW
Steering SW LH
Steering SW RH
Volume
MODE
DISP
Transmitter
VOICE
10A DOME
7.5A GAUGE NO. 2
10A MPX-B
Power Supply Circuit
Micro Computer
CAN I/F
Rheostat (*2)
Drive IC
+B(DOME)
Tach(*1)
F1(A) Combination Meter
E43(B), E44(C) Junction Connector
C57 Junction Connector
* 1 : 2GR-FE
* 2 : 2AZ-FE
* 3 : Except RHD 2GR-FE
* 4 : RHD 2GR-FE
* 5 : w/o Smart Entry & Start System
* 1 : 2GR-FE
* 2 : 2AZ-FE
* 3 : Except RHD 2GR-FE
* 4 : RHD 2GR-FE
* 6 : w/ Navigation System
* 7 : w/o Navigation System
* 1 : 2GR-FE
* 2 : 2AZ-FE
* 3 : Except RHD 2GR-FE
* 4 : RHD 2GR-FE
* 6 : w/ Navigation System
* 8 : 4-Spoke Steering Wheel Type
* 9 : 3-Spoke Steering Wheel Type
*10 : 3-Spoke Steering Wheel Type w/ Steering SW RH
*11 : LHD 2GR-FE
*12 : LHD 2AZ-FE
*13 : RHD 2AZ-FE