


Circuit diagram

Backup lamp and backup radar

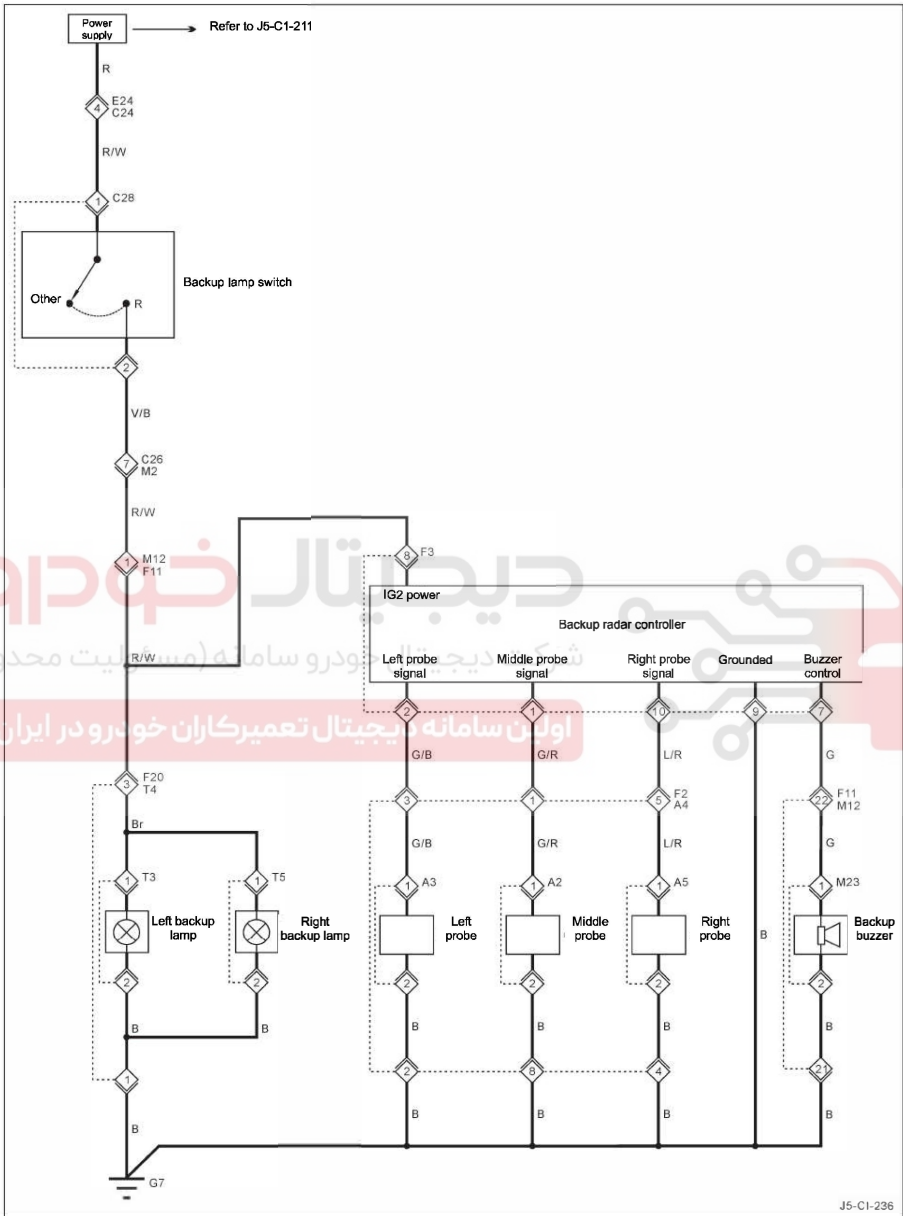

J5-C1-236

Circuit diagram

◇ harness plug

No.	No.	Description of harness plug
A4	F2	Backup radar harness- vehicle frame harness (below the rear left combined lamp)
C24	E24	Engine control harness – engine harness (on the right of brake oil tank)
C26	M2	Engine control harness – main harness (below and on the right of dashboard)
M12	F11	Main harness – vehicle frame harness (below and on the left of dashboard)
T4	F20	Tail door harness – vehicle frame harness (above and on the left of luggage compartment)

□: switch and electrical device

No.	Description	Position
A2	To middle probe	Backup radar harness
A3	To left probe	Backup radar harness
A5	To right probe	Backup radar harness
C28	To backup lamp switch	Engine control harness
F3	To backup radar controller	Vehicle frame harness
M23	To backup buzzer	Main harness
T3	To left backup lamp	Tail door harness
T5	To right backup lamp	Tail door harness